"630" SERIES TRACTOR

Service Manual

RI-Form 9-92381

MidWestTech | Case 632C, 640, 641, 641C Tractor Service Manual | Publication 9-92381

Order the manual at mid-west-tech.com >

GROUP A – GENERAL INFORMATION AND TRACTOR SPLITTING

SECTION I, USE OF MANUAL

How to Use Manual . . . . . A- 4
Various Model Tractors . . . . . A- 5

SECTION II, LUBRICATION

Recommended Engine and Transmission Lubricants . . . . . A- 7
Diesel Engine Lubricating Oil Service Designations . . . . . A- 8
Eagle Hitch and Hydraulic System - Capacities and Oil Recommendations . . . . . A- 8

SECTION III, SPLITTING TOOLS AND ENGINE STAND

Torque Tube Saddle Stand . . . . . A- 9
Engine Lifting Bracket . . . . . A- 9
Engine Stand and Dimensions A-10

SECTION IV, REMOVING SHEET METAL

Type of Fasteners A-12
Removing Sheet Metal A-12

SECTION V, SPLITTING AND INSTALLING TRANSMISSION TO TORQUE TUBE

Items to be Removed from Tractor A-13
Removing Underneath Muffler A-15
Tractor Split at Rear of Torque Tube A-16
Assembling Transmission to Torque Tube A-17
Parts Correctly Installed A-19

SECTION VI, SPLITTING TRACTOR AT ENGINE AND INSTALLING TO TORQUE TUBE

Removing Sheet Metal A-20
Removing Master Cable A-21
Disconnecting Parts on L.H. Side of Engine A-22
R.H. Side of Engine - Prepared for Splitting A-23
Fuel Tank Removed from Tractor A-25
Installing Engine to Torque Tube A-26
Torque Tightening Sequence - Engine to Torque Tube A-30

SECTION VII, REMOVING AND INSTALLING FRONT END ASSEMBLY

Removing Necessary Sheet Metal A-31
Removing Radiator A-32
Removing Front Support Casting from Engine Block A-34
Installing Front Support Casting to Engine Block A-37
Installing Radiator A-38
Installing Grille Cap Assembly A-39

SECTION VIII, REMOVING AND INSTALLING FUEL TANK

Removing Sheet Metal A-40
Diesel Tank Removed A-41

SECTION IX, REMOVING AND INSTALLING REAR FENDERS AND STEP PLATES (EXCEPT WESTERN SPECIAL)

Fenders and Step Plates Removed A-43
Installing Fenders and Step Plates A-44

SECTION X, REMOVING AND INSTALLING REAR FENDERS (WESTERN SPECIAL)

Removing and Installing Fenders A-45

MidWestTech | Case 632C, 640, 641, 641C Tractor Service Manual | Publication 9-92381 Order the manual at mid-west-tech.com >



Tractor Serial Number Location


The letter "C" after the Serial Number indicates Case-O-Matic Drive.

The letter "H" after the Serial Number would indicate that tractor was equipped at the factory with a High Speed 4th gear in the main transmission.

The letter "L" instead of the "H" would indicate tractor is equipped with a Low Speed 4th gear.

EXAMPLE: 641C - H would be a General Purpose Gasoline Tractor with Case-O-Matic Drive and a High Speed 4th gear.



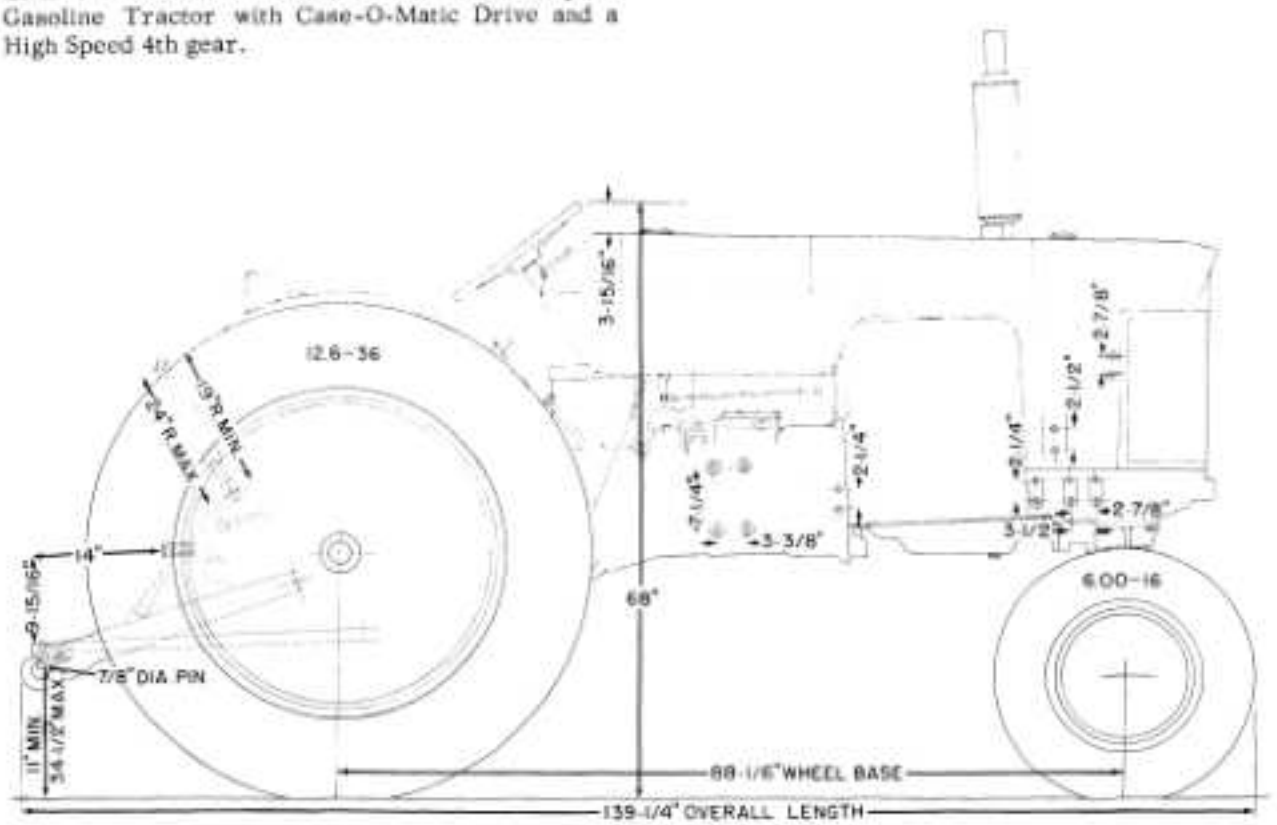

"630" Series Tractor—General Purpose, Dual Front Wheels — Dimensions

MidWestTech | Case 632C, 640, 641, 641C Tractor Service Manual | Publication 9-92381 Order the manual at mid-west-tech.com >

SECTION VII, DIFFERENTIAL ASSEMBLY

Feeler Gage Reading Over End Of Pinion At Point "B" Fig. E-55


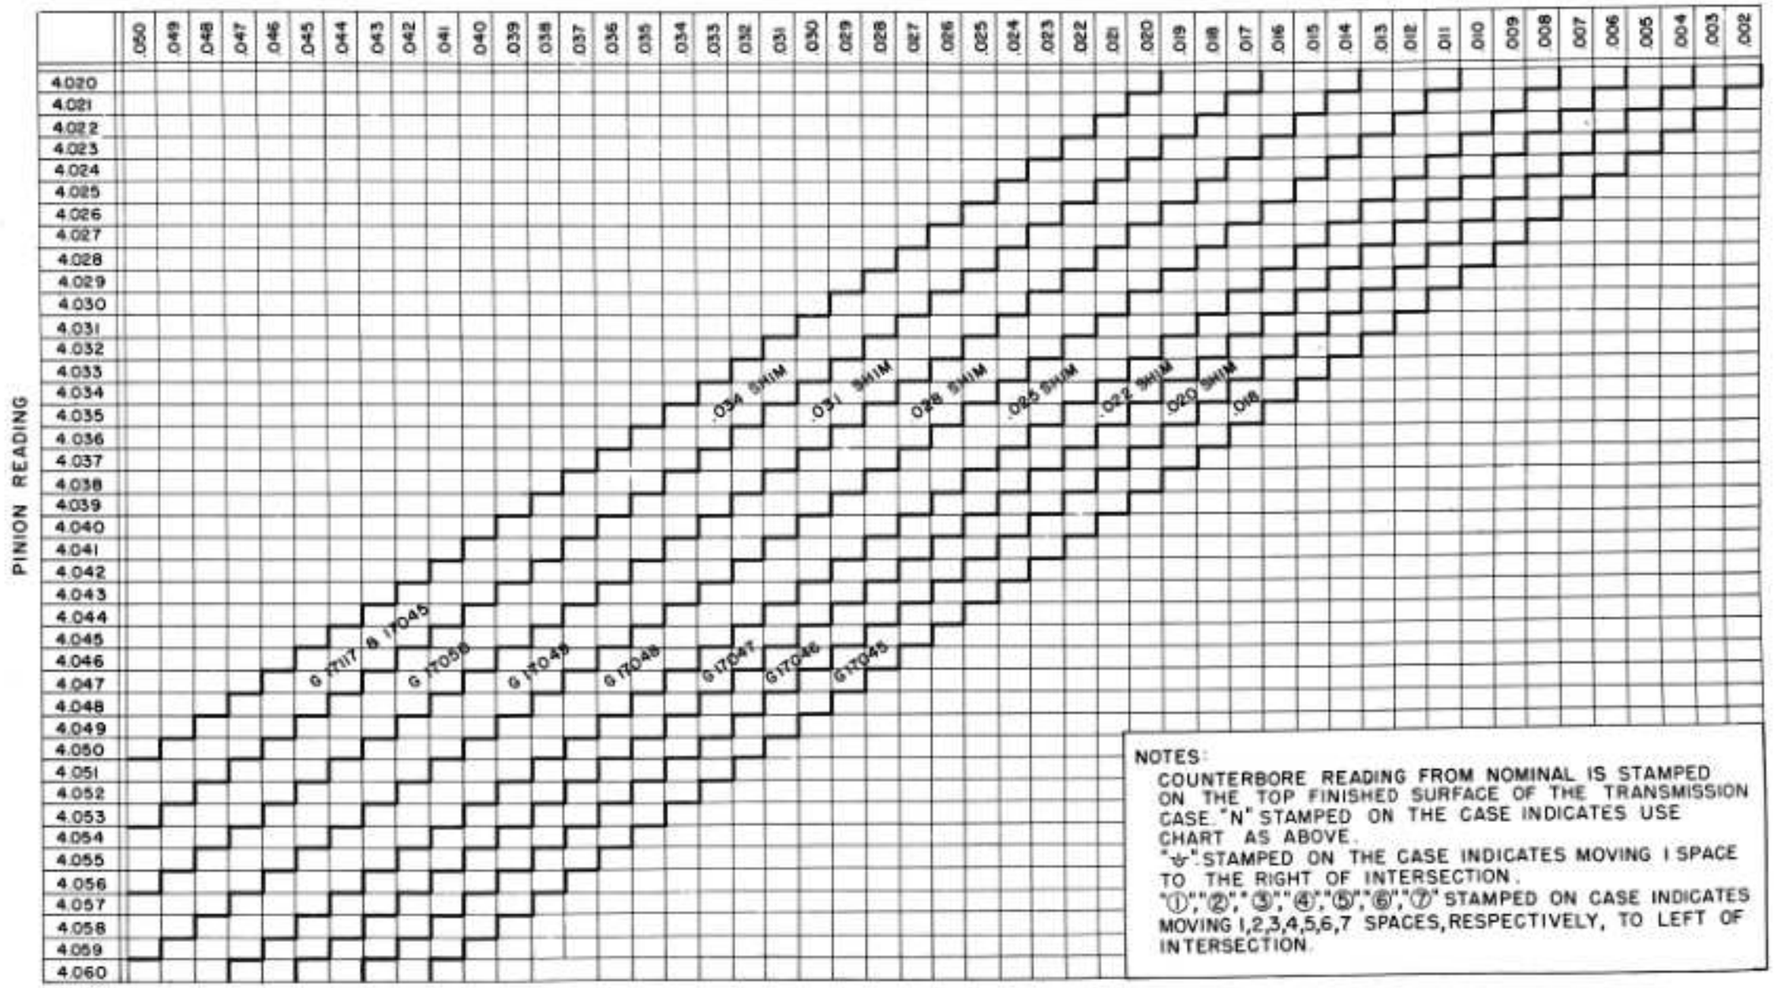


Fig. E-56 Transmission Countershaft Adjusting Chart

Illustration on the right indicates location of counterbore reading stamped on top of transmission case.

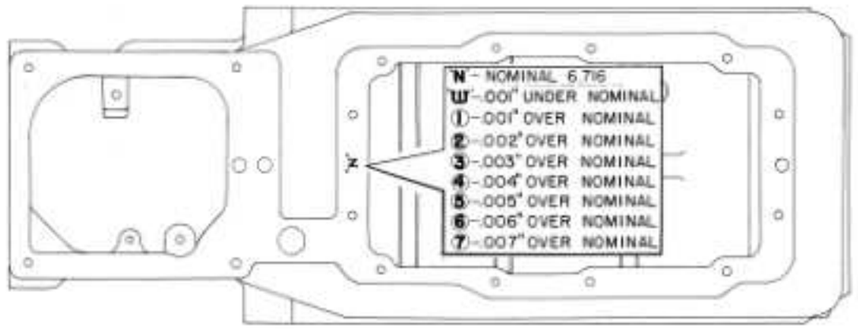

MidWestTech | Case 632C, 640, 641, 641C Tractor Service Manual | Publication 9-92381
Order the manual at mid-west-tech.com >