Model MW24C
NSN 3805-01-150-4814
December 1983 Issue

Operator's Manual

9-9660

Reprinted

CASE
CONSTRUCTION

MidWestTech | Case MW24C NSN 3805-01-150-4814 Military Loader Operator's Manual |... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS


Introduction 1
End Item Specifications 2
Preparation for Storage 6
Preparation for Removal from Storage 7
Warranty Information 8
Safety 9
Rules for Safety 9
Machine Operation 12
Stopping the Machine 16
Service 17
Service Requirements of Operator ... 21
Service Upon Receipt of Equipment 21
Operator's Service Checks 21
Principles of Operation 26
Engine 26
Fuel System 26
Exhaust System 27
Cooling System 27
Electrical System 27
Transmission 29
Drive Shafts 30
Service Brake System 30
Air System 30
Steering System 32
Hydraulic Lift System 34
Instruments and Controls 36
Operating Instructions 38
Left Instrument Cluster 38
Right Instrument Cluster 40
Steering Wheel 42
Operator's Compartment 42
Rear Chassis Instrument Cluster .. 43
Cab 43
Operator's Seat 44
Lift Arm and Bucket Controls 45
Bucket Control Lever 45
Bucket Level Indicator 45
Lift Arm Control Lever 45
Bucket Height Control 45
Return-To-Dig 46
Clam Control Lever 46
4-in-1 Bucket 46
Starting Aids 47
Cold Starting Aid 47
Replacing Starting Fluid Can ... 47
Slave Receptacle 48
Machine Operation 49
Operating in Hot Weather 49
Operating in Cold Weather 49
Transmission Speeds 49
Operating the Machine 49
Operating on a Hill 50
Stopping the Machine 50
Loader Operation 51
Clutch Cutout 51
Bucket Height Control 51
Return-To-Dig 51
Job Layout 51
Flat Ground 52
Loose Material 52
Loading Trucks 52
Towing the Machine 52
Procedure to Transport the Machine 53
Maintenance and Lubrication 54
Safety Before You Service the Machine 54
Safety Decals on the Machine ... 54
Transport/Service Link 55
Fluids and Lubricants Chart 55
Run-In Maintenance Chart 56
Maintenance Chart for Regular Intervals 57
Grease Fittings 60
Air Cleaner System 61
Restriction Indicator 61
Air Cleaner Service 61
Precleaner 61
Primary Filter Element 61
Washing 62
Cleaning with Compressed Air ... 62
Inspecting the Element 62
Secondary Filter Element 62
Engine Lubrication System 63
Oil Level 63
Oil Change 63
Oil Filter 63
Engine Cooling System 64
Coolant Level 64
Coolant 64
Cleaning the Cooling System 65
Fuel System 66
Checking for Water or Sediment 66
Replacing Fuel Filters 66
Electric Fuel Pump Filter 67
Fuel Filler Screen 68
Removing Air from the Fuel System 68
Hydraulic System 69

MidWestTech | Case MW24C NSN 3805-01-150-4814 Military Loader Operator's Manual |... Order the manual at mid-west-tech.com >


TABLE OF CONTENTS — CONTINUED

Hydraulic Oil Level 69
Adding Oil to the Reservoir 70
Oil Filters 70
Checking Oil Filters 70
Changing Oil Filters 71
Oil Change 71
Transmission 73
Oil Level 73
Oil Filter 73
Oil Change 74
Drive Belts 75
Checking Belt Tension 75
Adjusting Belt Tension 75
Brake System 76
Air Reservoir 76
Air Compressor 76
Brake Fluid Level 76
Disc Brakes 76
Axles 77
Oil Level 77
Oil Change 77
Electrical System 78
Servicing the Electrical System 78
Fluid Level of Batteries 78
Cleaning the Batteries 79
Lamps 79
Cab 81
Loader Service 81
Return-To-Dig Adjustment 81
Bucket Height Control Adjustment 82
Wheels and Tires 83
Wheel Nut Torque 83
Adding Air to the Tires 83
Tire or Rim Service 84
Installing Tires 84
Seat and Seat Belts 85
Diesel Fuel 86
Fuel Storage 86
Diesel Fuel Specification Chart 86


MidWestTech | Case MW24C NSN 3805-01-150-4814 Military Loader Operator's Manual |... Order the manual at mid-west-tech.com >

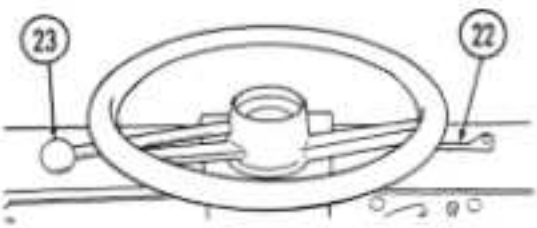


22. Turn Indicator Lever and Hazard Control
23. Transmission Control Lever

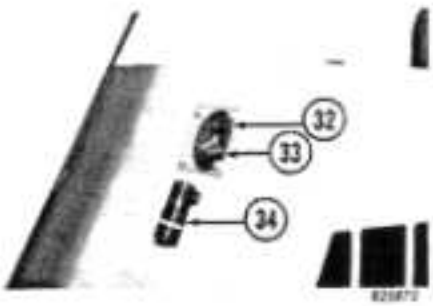


32. Tachometer
33. Hourmeter
34. Air Cleaner Restriction Indicator

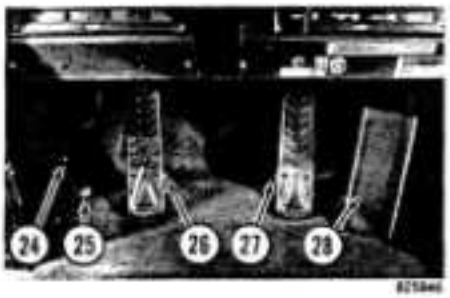


24. Bucket Height Control Lever
25. Horn Button
26. Left Brake Pedal
27. Right Brake Pedal
28. Foot Throttle

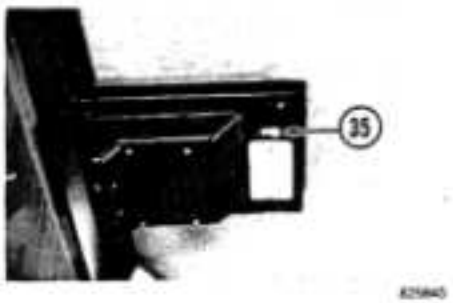

35. Cab Dome Lamp Switch

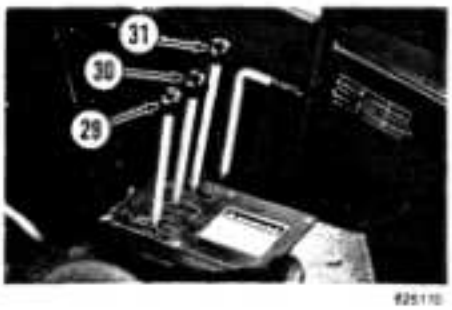

29. Clam Control Lever
30. Bucket Control Lever
31. Lift Arm Control Lever

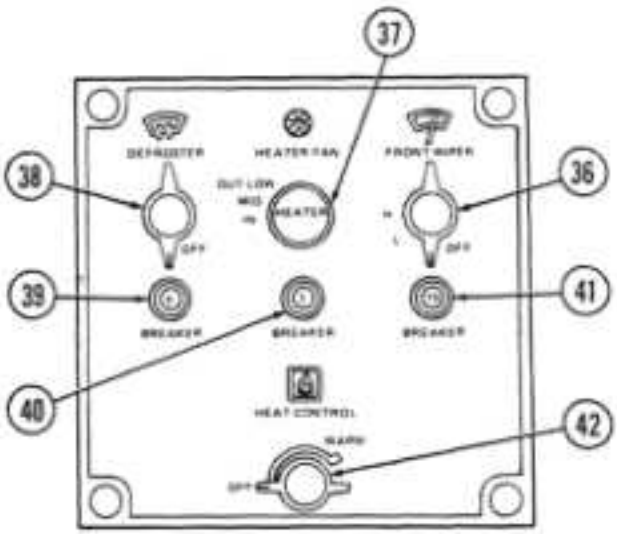

36. FRONT WIPER Switch
37. HEATER FAN Switch
38. DEFROSTER Switch
39. Circuit Breaker
40. Circuit Breaker
41. Circuit Breaker
42. HEAT CONTROL


MidWestTech | Case MW24C NSN 3805-01-150-4814 Military Loader Operator's Manual |... Order the manual at mid-west-tech.com >

Table 5. Maintenance Chart for Regular Intervals - Continued

INTERVAL	SERVICE	INSTRUCTIONS
	Lubricate the universal joints and slip splines.	See page 60.
	Lubricate the front driveshaft support bearing.	See page 60.
Every 150 Hours of Operation	Change the engine oil.	See page 63.
Every 250 Hours of Operation or Each Month, Whichever Occurs First	Check the wear of the disc brakes.	See page 76.
	Check the oil level for the front and rear axles.	See page 77.
	Lubricate the cab door hinges.	See page 81.
Every 300 Hours of Operation	Replace the engine oil filter.	See page 63.
Every 500 Hours of Operation	Check the tension of drive belts.	See page 75.
	Clean the filter for the electric fuel pump.	See page 67.
	Replace the fuel filters.	See page 66.
	Replace the transmission oil filter.	See page 73.
	Replace the hydraulic oil filters.	See page 71.
Every 1000 Hours of Operation	Change the oil in the front and rear axles.	See page 77.
	Change the hydraulic oil.	See page 71.
	Clean the suction screen for the hydraulic reservoir.	See page 74.
	Change the transmission oil.	See page 74.
	Clean the transmission breather.	See page 74.
	Clean the suction screen for the transmission.	See page 74.

MidWestTech | Case MW24C NSN 3805-01-150-4814 Military Loader Operator's Manual |... Order the manual at mid-west-tech.com >

SEAT AND SEAT BELTS

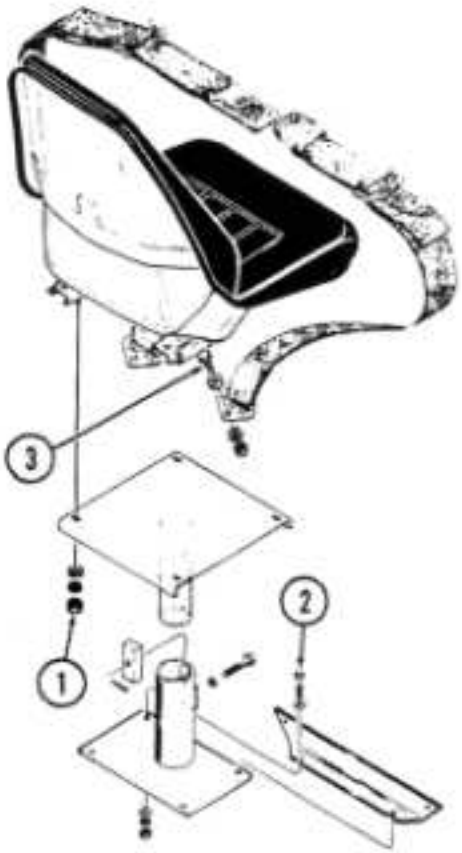

To tighten seat and seat belts, use the following torque specifications:

NOTE

Torque specifications are for clean, dry threads.

1. 17 to 21 pound-feet (23 to 28 N m, 2.4 to 2.9 kg/m)
2. 35 to 42 pound-feet (48 to 57 N m, 4.8 to 5.8 kg/m)
3. 80 to 96 pound-feet (109 to 130 N m, 11.1 to 13.3 kg/m)

MidWestTech | Case MW24C NSN 3805-01-150-4814 Military Loader Operator's Manual |... Order the manual at mid-west-tech.com >