34 Backhoe

Parts Catalog

A983

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

GENERAL INFORMATION

Indexes

This Parts Catalog is arranged for easy identification of Genuine CASE Service Parts. An alphabetical index is provided at the front of this Catalog to locate the major groups or assemblies. A numerical index at the rear of the Catalog gives the part numbers and the pages on which they are described.

Illustrations

All parts are illustrated in "Exploded Views" which show the individual parts in their normal relationship to each other. Reference numbers are used in the illustrations. These numbers correspond to those in the "Reference Number" column and are followed by the part number, description and quantity required.

Orders

Orders should plainly specify correct part number, full description, quantity required, machine model and engine model, machine and engine serial numbers, method of shipment and shipping address.

Changes

When changes to the machine make it necessary, revised pages for this book will be issued. The revised pages will be issued with the same page number as those they replace and the "issue" number and date will be advanced.

It is imperative that revised Parts Book pages be inserted into their respective Parts Books as soon as received. Failure to do so will lead to confusion and defeat the purpose of the book.


Indented Description

Indented parts in the description list are a part of the preceding assembly or sub-assembly. The quantity shown in the "Number Required" column is the number of parts used on a machine except where parts are indented in descriptive list. In this case the quantity shown is the number required for the preceding assembly or sub-assembly.

REF.	PART NO.	DESCRIPTION	REQ'D.
	A 55159	CYLINDER ASSY. - rear steering	1
28	A 56208	SOCKET ASSY. - rear cylinder	1
29	A 55956	PLUG - adjusting, socket assy.	1
30	A 55957	SEAT - socket ball	2
31	A 56210	SPRING - socket	1
32	A 56209	SEAT - socket spring	1
33	G 45175	CLAMP ASSY. - socket assy.	1
34	16- 836	HHCS - 1/2" - 20 NF x 2-1/4"	1
35	132- 104	PIN - cotter, 3/16" dia. x 3"	1

Terms "Right Hand" and "Left Hand"

"Right Hand" and "Left Hand" sides of the loader are determined by sitting in the operator's seat facing the loader. "Right Hand" and "Left Hand" sides of the backhoe are determined by sitting in the operator's seat facing the backhoe.

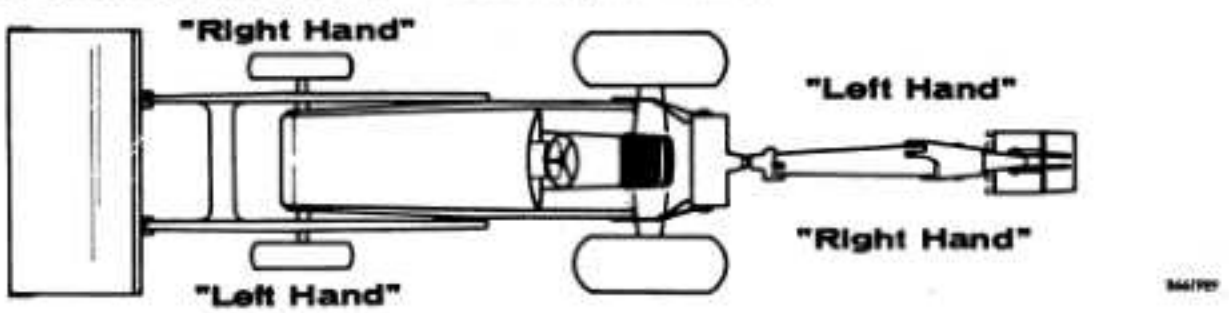

Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

B

Boom - Backhoe 7
Bucket - Backhoe 15,17

C

Console - Backhoe, Individual Lever Controls (Foot Swing) 19
Console - Backhoe, Twin Lever Controls 23
Couplings - Hydraulic 57
Cylinder - Backhoe, Boom 41
Cylinder - Backhoe, Bucket 37
Cylinder - Backhoe, Crowd 43
Cylinder - Backhoe, Stabilizer 33,35
Cylinder - Backhoe, Swing 39

D

Decal - Backhoe 57
Dipper - Extendable 11
Dipper - Standard 7
Dipper Light 13

H

Hose And Fitting Conversion Part Numbers 58
Hydraulics - Boom, Crowd and Bucket Cylinder 29
Hydraulics - Extendable Dipper 11
Hydraulics - Swing, Stabilizer, Inlet And Outlet 25,27

I

Index - Numerical 58

L

Lamp - Dipper 13
Levers - Individual Backhoe Control (Foot Swing) 19
Levers - Twin Backhoe Control 23
Linkage - Individual Lever Backhoe Control (Foot Swing) 19
Linkage - Twin Lever Backhoe Control 23

M

Mounting Frame - Backhoe 5

S

Stabilizer - Backhoe 5
Swing Tower - Backhoe 7


T

Tools - Service 57

V

Valve - Backhoe Control 45
Valve Sections 47-55

PICTORIAL INDEX

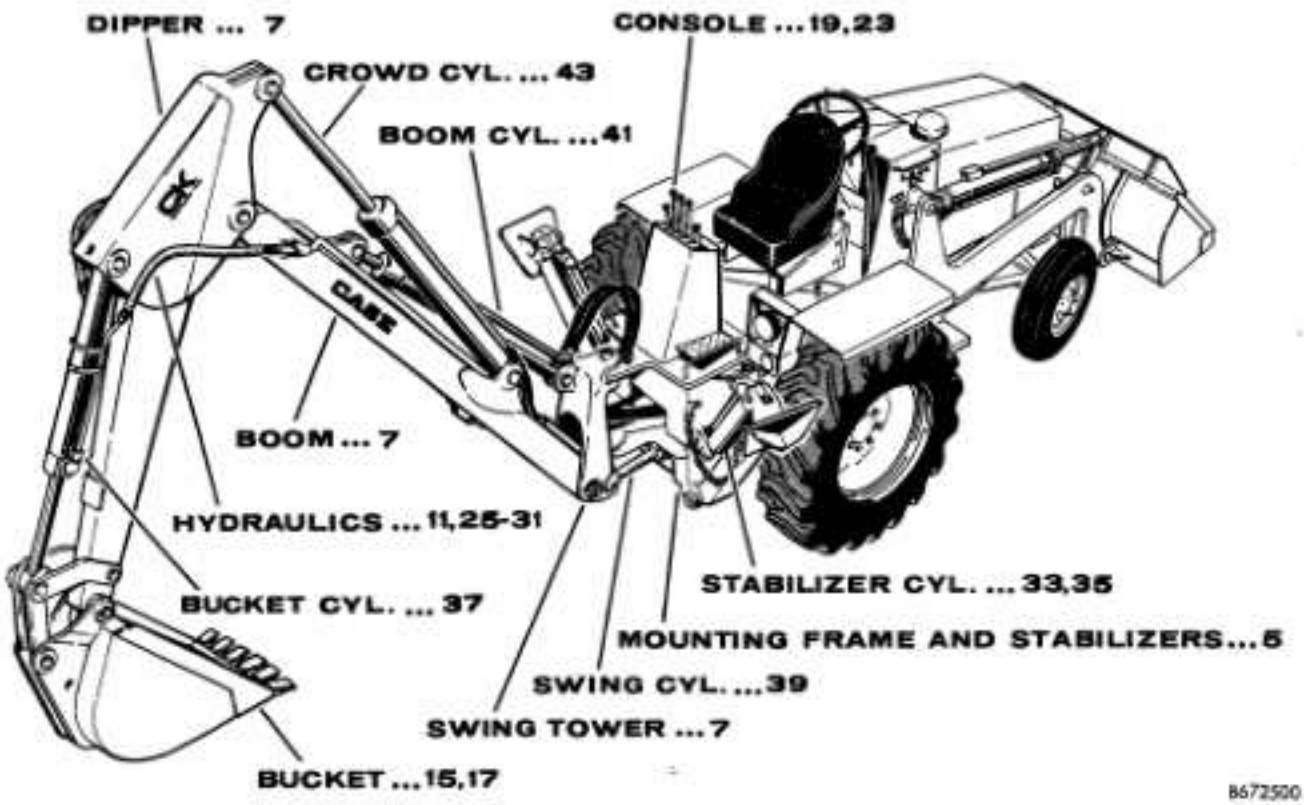

8672500

Printed in U.S.A.

Issued July, 1967

MidWestTech | Case 34 Backhoe Parts Catalog | Publication A983 Order the manual at mid-west-tech.com >