TEREX
LIGHT CONSTRUCTION

# SERIES AL4000 AU
# LIGHT TOWER
## OPERATION & SERVICE MANUAL

SERIAL NUMBER FOF-15872 AND LATER

P/N - AL4000 AU REV. 19-02-2007

MidWestTech | Terex AL4000 AU Light Tower Parts Manual | Publication AL4000AU
Order the manual at mid-west-tech.com >

# TABLE OF CONTENTS


| | | |
|---|---|---|
| **1.0** | **Safety Precautions** | **Page #** |
| | Safety Precautions | 4-8 |
| **2.0** | **Operating Instructions** | |
| | Light Tower Operating Instructions | 9-16 |
| | General Specifications and Routine Maintenance | 17-18 |
| | Recommended Engine Oil | 19 |
| | Fastener Torque Specifications | 20 |
| | Traceable Numbered Wiring System | 21 |
| | Criteria for Replacement of Wire Rope | 22 |
| | Broken Cable Replacement Procedure | 23-24 |
| | Cable Replacement Diagram | 25 |
| | Shim Placement Diagram | 26 |
| | Rear Bearing Inspection Requirements | 27 |
| | Engine (see manufacturer's handbook) | n/a |
| | Generator (see manufacturer's handbook) | n/a |
| **3.0** | **Troubleshooting Guide** | |
| | Light Fixture Troubleshooting Guide | 28-30 |
| | Light Tower Troubleshooting Guide | 31-33 |
| | Engine (refer to manufacturer's handbook) | n/a |
| | Generator (refer to manufacturer's handbook) | n/a |
| **4.0** | **Wiring Diagrams** | |
| | Fixture with Joy Connector (MH) | 36 |
| | Metal Halide Ballast / 3-Pin Connector Wiring Diagram | 37 |
| | AC Wiring | 38 |
| | Trailer Wiring | 39 |
| | Coil Cord Wiring | 40 |
| | DC Wiring | 41 |
| | Control Box Wiring, Auto Shutdown Timer | 42 |


**(continued next page)**



MidWestTech | Terex AL4000 AU Light Tower Parts Manual | Publication AL4000AU Order the manual at mid-west-tech.com >

## 5.0 Parts Manual


| | Page # |
|---|---|
| Decals | 44 |
| Trailer and Related Part | 45 |
| Fuel Tank Assembly | 46 |
| Axle and Wheels | 47 |
| Cabinet Assembly | 48-49 |
| Tower Base Assembly – Electric Winch | 50 |
| Tower Assembly | 51 |
| Tower Section – Six inch diameter base tube | 52 |
| Sheave and Shim Assembly - Four inch tower section | 53 |
| Tower Section – Four inch square tube | 54 |
| Tower Section – Three inch square tube | 55 |
| Tower Section - Two inch square tube | 56 |
| Crossarm | 57 |
| Floodlight Fixtures | 58 |
| Radiator Right Side Mounting Bracket | 59 |
| Generator Mounting | 60 |
| Engine and Generator (Kubota D1105 / Leroy Somer 8 kW) | 61-62 |
| Radiator Assembly and Mounting | 63 |
| Ballast Box Assembly – 50 Hz | 64 |
| Electrical Box Assembly | 65 |
| Auto Shutdown Timer | 66 |

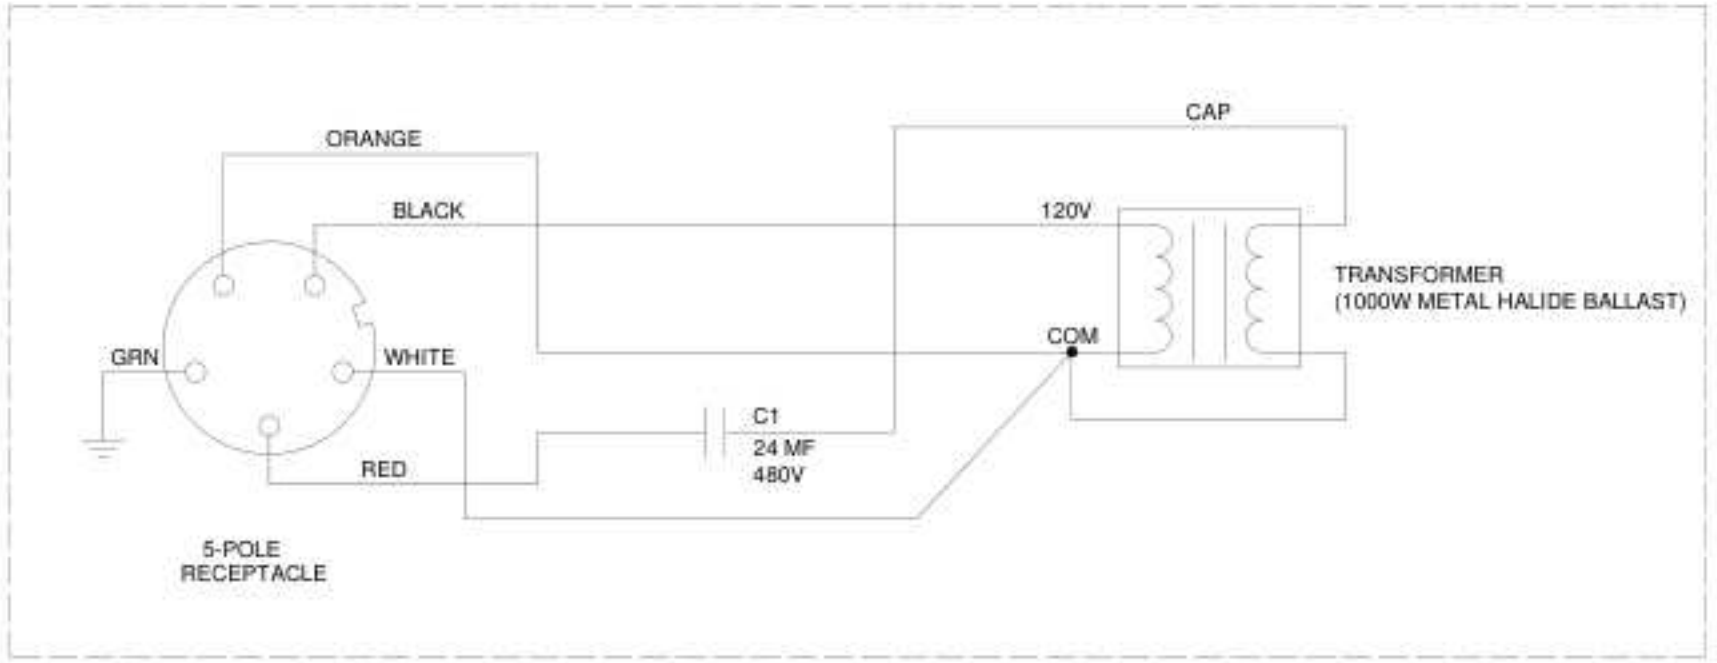

## 6.0 Warranty Information


| | |
|---|---|
| Terex Light Tower Model Coding System | 68 |
| Manufacturer's warranty statement | 69 |




MidWestTech | Terex AL4000 AU Light Tower Parts Manual | Publication AL4000AU Order the manual at mid-west-tech.com >

| PART# | WD2986 | | DWG.# | 2986 |
|---|---|---|---|---|
| ITEM# | PART# | DESCRIPTION | | #REQ |
| | | | | |




| COLOR | CIRCUIT |
|---|---|
| BLACK | INPUT 120V |
| WHITE | INPUT COMMON |
| RED | LAMP HOT |
| ORANGE | LAMP COMMON |
| GREEN | GROUND |

| REV. | DATE | ECO # | CHANGE |
|---|---|---|---|
| | | | |

TOLERANCES UNLESS OTHERWISE SPECIFIED
Fractions ±1/16
Decimals .XX=±.030 .XXX=±.010
.XXXX=±.005
Degrees ±1/2°
REMOVE ALL BURRS & SHARP EDGES

Terex–amida
590 HUEY Rd, ROCK HILL, S.C.
Ph. (803) 324-3011 FAX 366-1101

WIRING DIAGRAM - 1000MH BALLAST

| MATL. MATL | | W / JOY CONNECTOR | BORDER "B" |
|---|---|---|---|
| MAT P/N | USAGE | DR BY: CNM | SCALE: NONE |
| PLOT: 4/30/91 | DATE: 4/30/91 | PART# WD2986 | DWG.# 2986 |

Order the manual at mid-west-tech.com >