W9B
Loader

Parts Catalog

B-1144

CASE CONSTRUCTION

MidWestTech | Case W9B Loader Parts Catalog | Publication B1144

Order the manual at mid-west-tech.com >

Indexes

This Parts Catalog is arranged for easy identification of Genuine CASE Service Parts. An alphabetical index is provided at the front of this Catalog to locate the major groups or assemblies. A numerical index at the rear of the Catalog gives the part numbers and the pages on which they are described.

Illustrations

All parts are illustrated in "Exploded Views" which show the individual parts in their normal relationship to each other. Reference numbers are used in the illustrations. These numbers correspond to those in the "Reference Number" column and are followed by the part number, description and quantity required.

Orders

Orders should plainly specify correct part number, full description, quantity required, machine model and engine model, machine and engine serial numbers, method of shipment and shipping address.

Changes

When changes to the machine make it necessary, revised pages for this book will be issued. The revised pages will be issued with the same page number as those they replace and the "issue" number and date will be advanced.

It is imperative that revised Parts Book pages be inserted into their respective Parts Books as soon as received. Failure to do so will lead to confusion and defeat the purpose of the book.


Indented Description

Indented parts in the description list are a part of the preceding assembly or sub-assembly. The quantity shown in the "Number Required" column is the number of parts used on a machine except where parts are indented in descriptive list. In this case the quantity shown is the number required for the preceding assembly or sub-assembly.

REF		PART NO.	DESCRIPTION	REQ'D.
	A	55159	CYLINDER ASSY. - rear steering	1
28	A	56208	SOCKET ASSY. - rear cylinder	1
29	A	55956	PLUG - adjusting, socket assy.	1
30	A	55957	SEAT - socket ball	2
31	A	56210	SPRING - socket	1
32	A	56209	SEAT - socket spring	1
33	G	45175	CLAMP ASSY. - socket assy.	1
34	16-	836	HHCS - 1/2" - 20 NF x 2-1/4"	1
35	132-	104	PIN - cotter, 3/16" dia. x 3"	1

Terms "Right Hand" and "Left Hand"

"Right Hand" and "Left Hand" sides of the loader are determined by sitting in the operator's seat facing the loader.

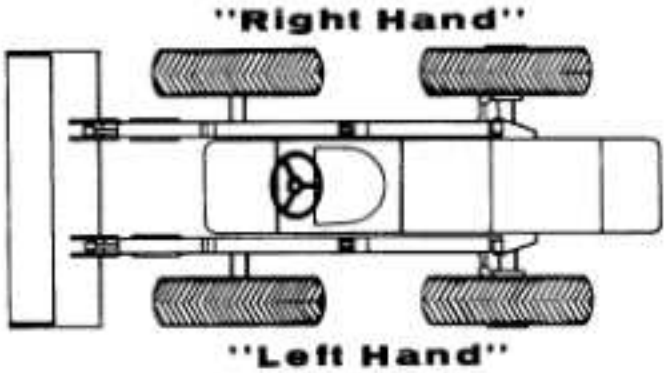

690766

Order the manual at mid-west-tech.com >

MODEL W9B AND W10B LOADERS

ALPHABETICAL INDEX

- ENGINE SECTION -

A

Air Cleaners - engine, diesel 15B
Air Cleaners - engine, gasoline 39D
Alternator - electrical, diesel engine 55,55B
Alternator - electrical, gasoline engine .. 61H,69

B

Belt - drive, fan and alternator 53,61D,67B
Block - cylinder, diesel 7,7B
Block - cylinder, gasoline 31,31B

C

Camshaft - engine, diesel 9
Camshaft - engine, gasoline 33
Carburetor - engine, gasoline 49,49B
Coil - electrical, gasoline engine ... 61D,63,67D
Crankshaft - engine, diesel 9B
Crankshaft - engine, gasoline 33B

D

Decompressor - engine, diesel 27
Distributor - electrical, gasoline engine 63D,63F,65
Dipstick - engine oil, diesel 7,7B
Dipstick - engine oil, gasoline 31,31B

E

Electrical Systems - diesel 53-61B
Electrical Systems - gasoline 61D-81

F

Fan - engine cooling 51
Filter - engine oil, diesel 13B
Filter - engine oil, gasoline 37B
Filter - fuel, diesel 21
Flywheel - engine, diesel 9B
Flywheel - engine, gasoline 33B
Fuel Tank - diesel engine 23B
Fuel Tank - gas engine 47

G

Gasket Kits - engine, diesel 17
Gasket Kits - engine, gasoline 41
Gauges - instrument panel, diesel engine 61
Gauges - instrument panel, gasoline engine . 71-81
Generator - electrical, diesel engine 57B
Generator - electrical, gasoline engine 63B
Governor - engine, gasoline 45

H

Head - cylinder, diesel 5
Head - cylinder, gasoline 29

I

Index - basic tractor 3A,3B
Index - loader 3B
Index - numerical 253-282
Injection System - fuel, diesel 23
Injector - fuel, diesel 23

K

Kits - piston and sleeve, diesel engine 11
Kits - piston and sleeve, gasoline engine 35

Order the manual at mid-west-tech.com >

MODEL W9B AND W10B LOADERS

ALPHABETICAL INDEX

- ENGINE SECTION -

L

Linkage - throttle control, diesel 25
Linkage - throttle control, gasoline 43

M

Manifold - exhaust, diesel engine 15
Manifold - exhaust, gasoline engine 39
Manifold - intake, diesel engine 15
Manifold - intake, gasoline engine 39
Manifold - water 51
Muffler - exhaust, diesel engine 15
Muffler - exhaust, gasoline engine 39

P

Pan - engine oil, diesel 11B,13
Pan - engine oil, gasoline 35B,37
Pistons - engine, diesel 11
Pistons - engine, gasoline 35
Pump - fuel injection, diesel 21B
Pump - engine oil, diesel 11B,13
Pump - engine oil, gasoline 35B,37
Pump - water 51

R

Radiator - engine cooling 125
Rings - piston, diesel 11
Rings - piston, gasoline 35
Rocker Arm - engine, diesel 5B,5D
Rocker Arm - engine, gasoline 29B,29D
Rod - connecting, diesel 11
Rod - connecting, gasoline 35
Rod - push, diesel 5B,5D
Rod - push, gasoline 29B,29D

R

Rotor - distributor, gasoline engine ... 63D,63F,65

S

Sleeve - engine, diesel 11
Sleeve - engine, gasoline 35
Solenoid - starter 59D,65B
Spark Plug - ignition, gasoline 61D,63
Starter - engine, diesel 59D,59F
Starter - engine, gasoline 65B,65D
Starting Aid - engine, diesel 15,252

T

Thermostat - coolant temperature 51
Timing Gear Cover - engine, diesel 7,7B
Timing Gear Cover - engine, gasoline 31,31B

V

Valve Cover - engine, diesel 5
Valve Cover - engine, gasoline 29
Valve Guides - engine, diesel 5B,5D
Valve Guides - engine, gasoline 29B,29D
Valves - engine, diesel 5B,5D
Valves - engine, gasoline 29B,29D
Ventilation - crankcase 39B

691713

Printed in U.S.A.

Issued October, 1969

MidWestTech | Case W9B Loader Parts Catalog | Publication B1144

Order the manual at mid-west-tech.com >