TOYOTA

REPAIR MANUAL

5FBE10-20

CE306-3

MidWestTech | Toyota 5FBE10-20 Forklift Service Manual | Publication CE306-3 Order the manual at mid-west-tech.com >

GENERAL

0

	Page
EXTERIOR VIEWS	0-2
VEHICLE MODEL	0-3
FRAME NUMBER	0-3
HOW TO USE **THIS** MANUAL	0-4
EXPLANATION METHOD	0-4
TERMINOLOGY	0-5
ABBREVIATIONS	0-5
LIST OF ABBREVIATIONS AND SYMBOLS	0-6
OPERATIONAL **TIPS**	0-7
JACK-UP POINTS	0-8
CIRCUIT TESTER	0-9
STANDARD BOLT & NUT TIGHTENING TORQUE	0-11
BOLT STRENGTH TYPE IDENTIFICATION METHOD	0-11
TIGHTENING TORQUE TABLE	0-12
PRECOAT BOLTS	0-13
HIGH PRESSURE HOSE FITTING TIGHTENING TORQUE	0-13
WIRE ROPE SUSPENSION ANGLE LIST	0-14
SAFE LOAD FOR EACH **WIRE** ROPE SUSPENSION ANGLE	0-14
COMPONENTS WEIGHT	0-15
RECOMMENDED LUBRICANTS AND CAPACITIES	0-15
LUBRICATION CHART	0-16
PERIODIC MAINTENANCE	0-17
PERIODIC REPLACEMENT OF PARTS AND LUBRICANTS	0-22

Order the manual at mid-west-tech.com >

GENERAL

Only the following items, which have changed due to use of the MOS controller, are explained here.

DRIVE SYSTEM·MATERIAL HANDLING SYSTEM MALFUNCTION

WHEN DIAGNOSTIC ERROR CODE IS DISPLAYED


WHEN DIAGNOSTIC ERROR CODE IS NOT DISPLAYED

STEERING SYSTEM MALFUNCTION

WHEN DIAGNOSTIC ERROR CODE IS DISPLAYED

For items other than the above, see chapter 4, ELECTRICAL SYSTEM TROUBLESHOOTING, in the 5FBE Repair Manual (CE306).


TROUBLESHOOTING EXPLANATION

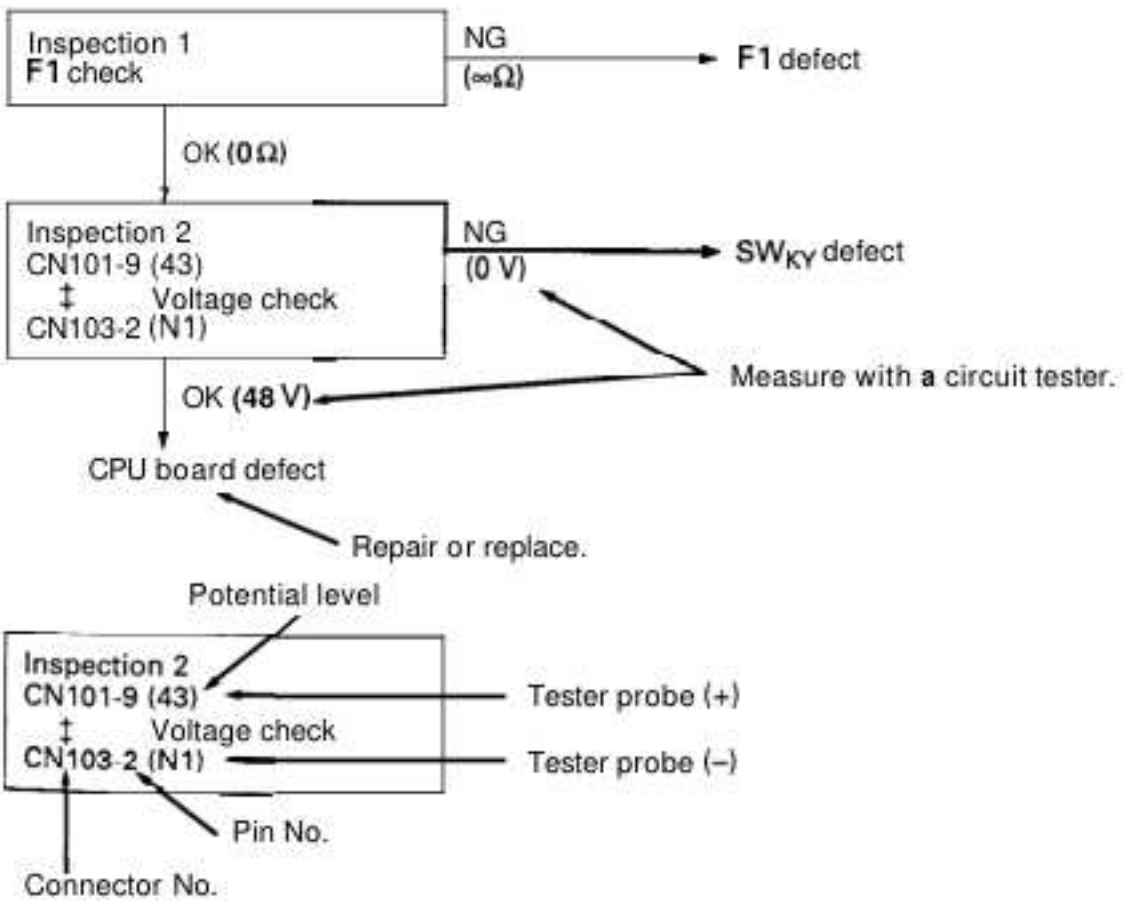

Order the manual at mid-west-tech.com >

POWER STEERING PUMP ASSY


GENERAL

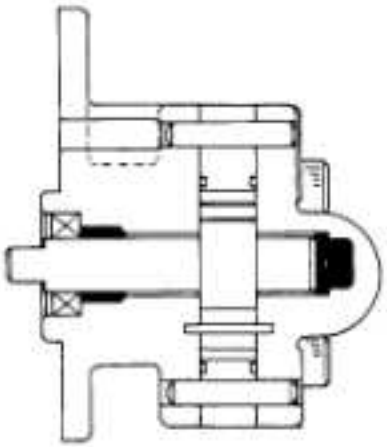


SPECIFICATIONS

Pump type	TCP-031-C
Discharge (1500 rpm) ℓ/min (USgal/min)	Approx. 5.5 (1.45)
Theoretical discharge cc (in³)/rev	4.0 (0.244)

COMPONENTS

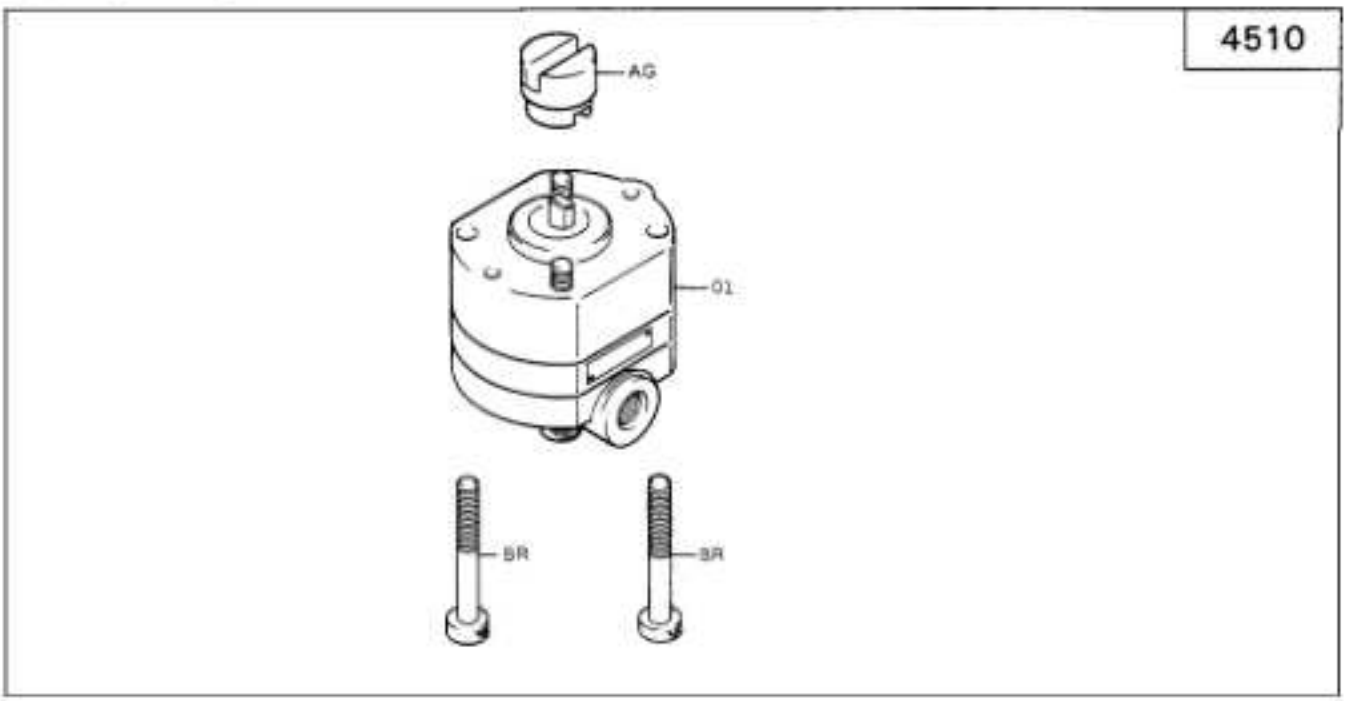


Order the manual at mid-west-tech.com >

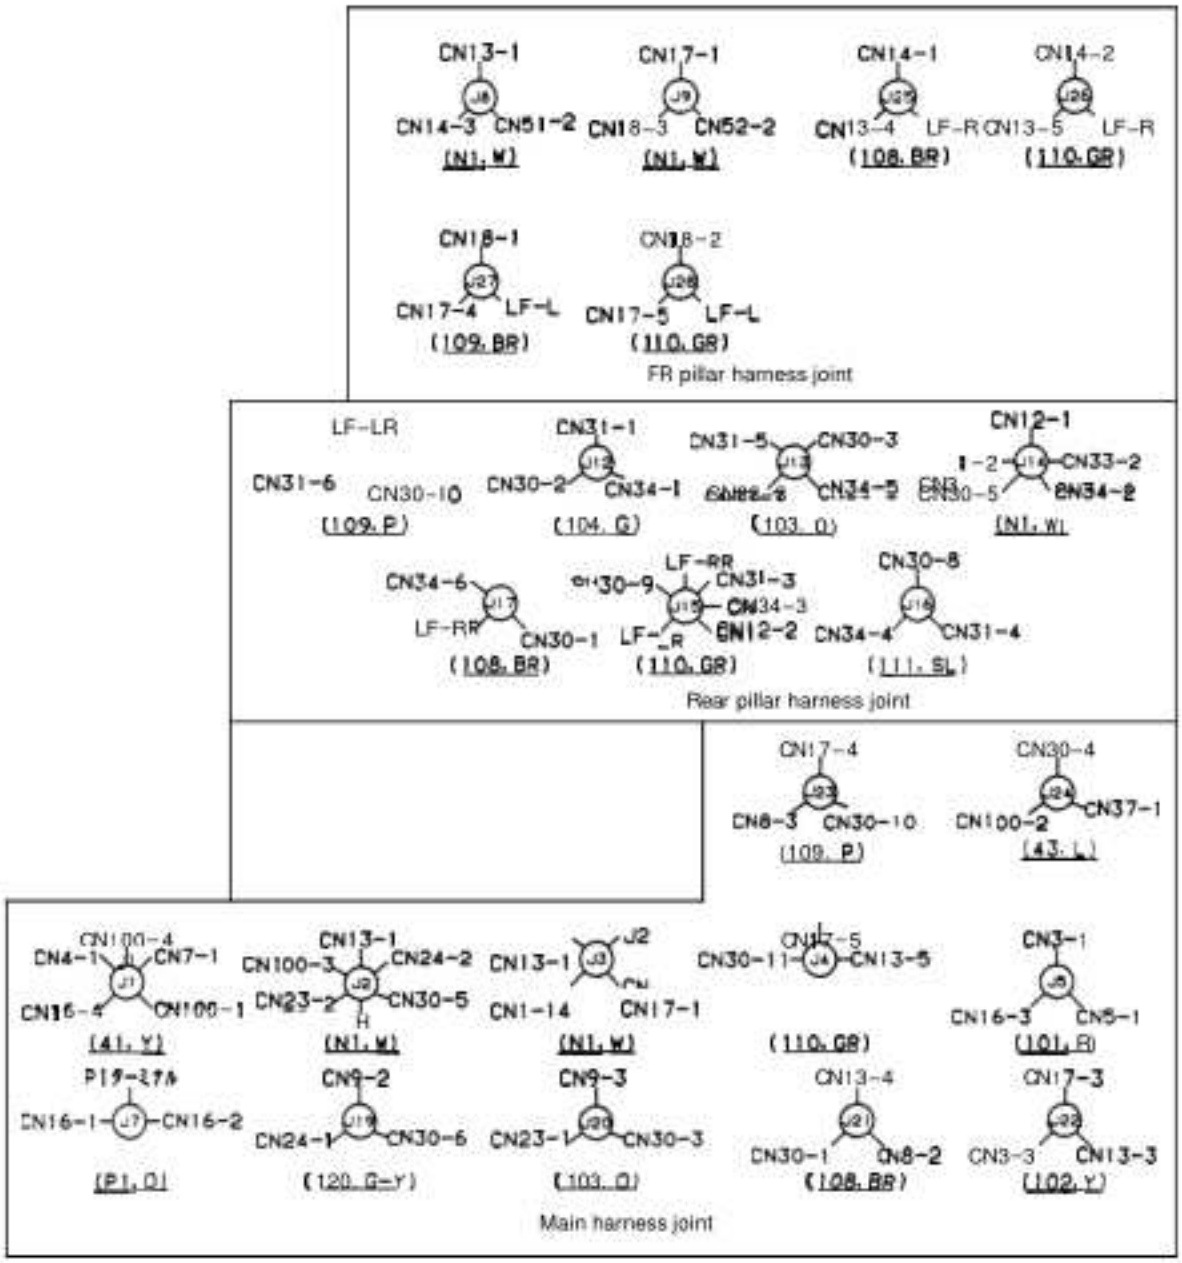

Order the manual at mid-west-tech.com >

WIRING DIAGRAM [FOR OTHER THAN U.S.A.] (1998.2 – 1998.8)

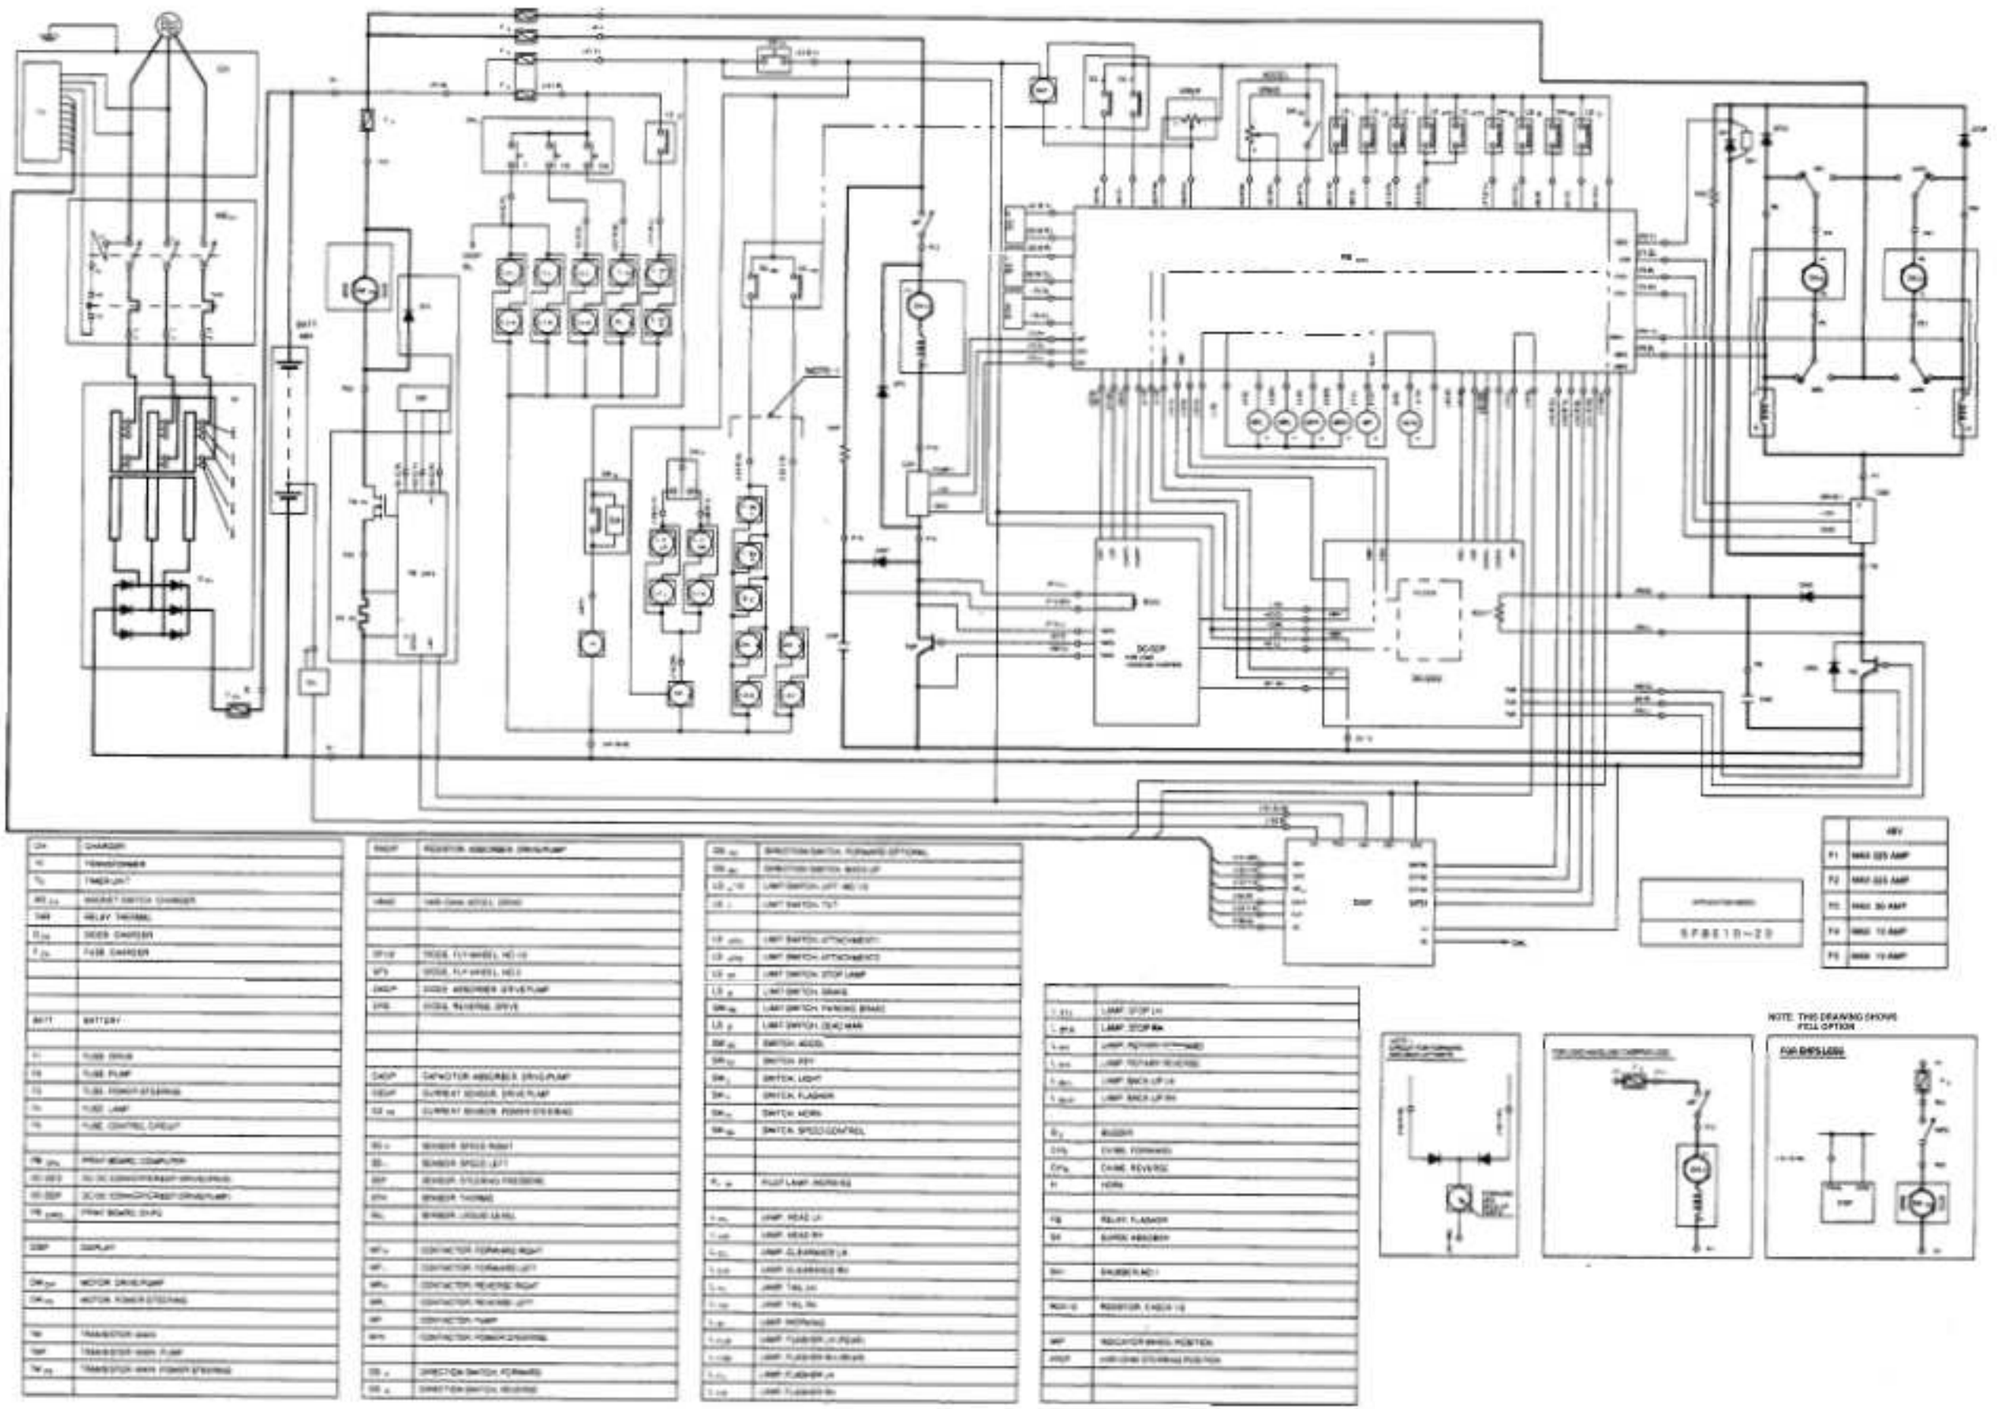

Order the manual at mid-west-tech.com >