TOYOTA


REPAIR MANUAL

7FB10-30 / 7FBH10-25
7FBJ35

Pub. No. CE315-2 / CE316-2

MidWestTech | Toyota 7FB10-30, 7FBH10-25, 7FBJ35 Forklift Service Manual | Publication... Order the manual at mid-west-tech.com >


WIRING DIAGRAM (FOR VEHICLE WITH SAS)

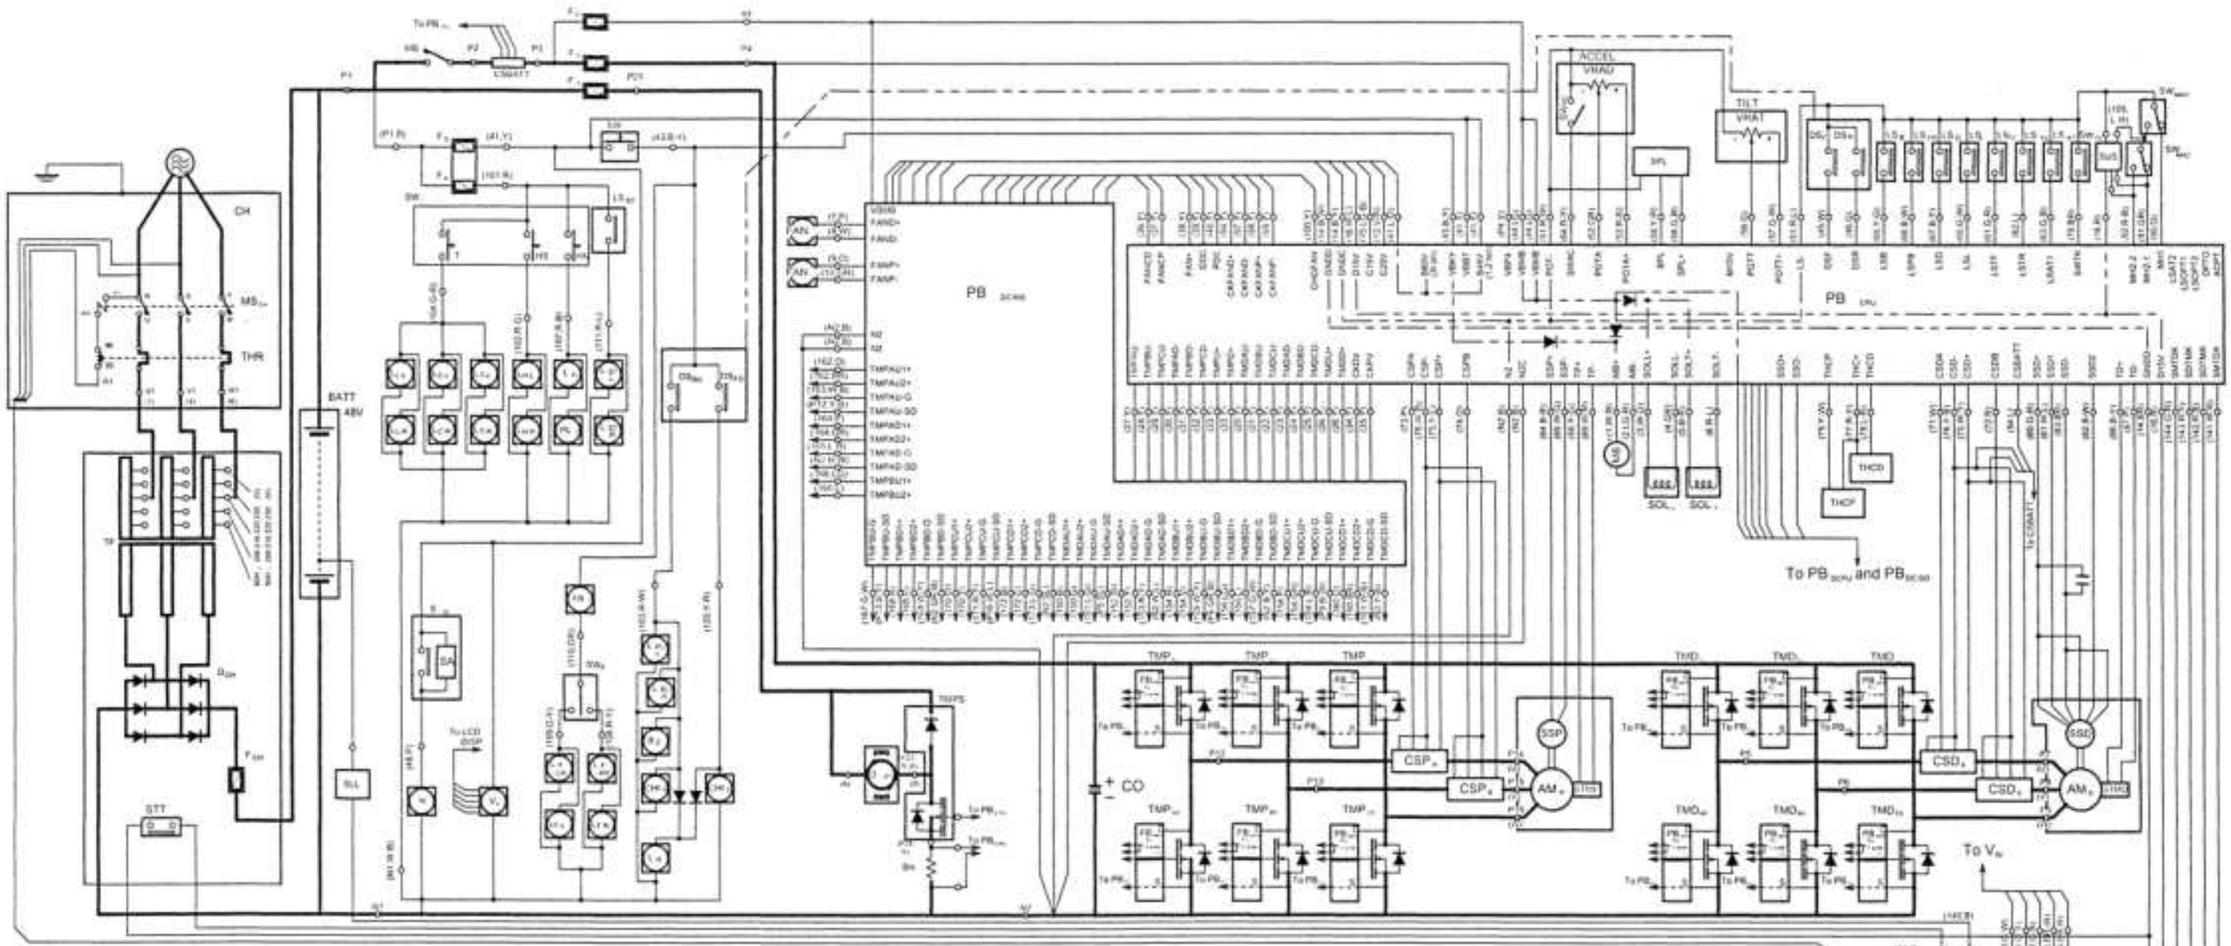

CH	CHARGER
TF	TRANSFORMER
MS_{CH}	MAGNET SWITCH, CHARGER
THR	RELAY, THERMAL
D_{CH}	DIODE, CHARGER
F_{CH}	FUSE, CHARGER
STT	SWITCH, TRANS. THERMO
BATT	BATTERY
F1	FUSE, DRIVE
F3	FUSE, POWER STEERING
F4	FUSE, LAMP
F5	FUSE, CONTROL CIRCUIT
F6	FUSE, SKPS&SOLENOID
F7	FUSE, DC-DC CONVERTER
LCD DISP	LCD DISPLAY
BOX_{CHG}	BOX, CHARGER
THCD	THERMO, DRIVE
THCP	THERMO, PUMP
AM_D	MOTOR, DRIVE
AM_P	MOTOR, PUMP
DM_{PS}	MOTOR, POWER STEERING
SOL_S	SOLENOID, SWING
SOL_{ST}	SOLENOID, STEERING
SOL_L	SOLENOID, LIFT
SOL_T	SOLENOID, TILT
FAN_D	FAN, DRIVE
FAN_P	FAN, PUMP
VRAD	VARI-OHM, ACCEL, DRIVE
VRAT	VARI-OHM, TILT
VRAH	VARI-OHM, TIRE(HANDLE)
VRAS	VARI-OHM, SWING

PB_{CPU}	PRINT BOARD, COMPUTER
$PB_{DC/MD}$	PRINT BOARD, DC/MD
PB_{MMP}	PRINT BOARD, MMP
PB_{SCPU}	PRINT BOARD, SAS/PS COMPUTER
$PB_{DC/SO}$	PRINT BOARD, DC/SO
TMD_{AU}	TRANSISTOR, MAIN, DRIVE, PHASE A UPR
TMD_{BU}	TRANSISTOR, MAIN, DRIVE, PHASE B UPR
TMD_{CU}	TRANSISTOR, MAIN, DRIVE, PHASE C UPR
TMD_{AD}	TRANSISTOR, MAIN, DRIVE, PHASE A LWR
TMD_{BD}	TRANSISTOR, MAIN, DRIVE, PHASE B LWR
TMD_{CD}	TRANSISTOR, MAIN, DRIVE, PHASE C LWR
TMP_{AU}	TRANSISTOR, MAIN, PUMP, PHASE A UPR
TMP_{BU}	TRANSISTOR, MAIN, PUMP, PHASE B UPR
TMP_{CU}	TRANSISTOR, MAIN, PUMP, PHASE C UPR
TMP_{AD}	TRANSISTOR, MAIN, PUMP, PHASE A LWR
TMP_{BD}	TRANSISTOR, MAIN, PUMP, PHASE B LWR
TMP_{CD}	TRANSISTOR, MAIN, PUMP, PHASE C LWR
TMPS	TRANSISTOR, MAIN, POWER STEERING
SH	SHANT, POWER STEERING
CO	CAPACITOR, OVERALL
CSBATT	CURRENT SENSOR, BATTERY
CSD_A	CURRENT SENSOR, DRIVE, PHASE A
CSD_B	CURRENT SENSOR, DRIVE, PHASE B
CSP_A	CURRENT SENSOR, PUMP, PHASE A
CSP_B	CURRENT SENSOR, PUMP, PHASE B
SYR	SENSOR, YAWRATE
SST	SENSOR, STEERING
SLL	SENSOR, LEQUID LEVEL
SUS	SENSOR, ULTRA SONIC
MB	CONTACTOR, BATTERY

DS_A	DIRECTION SWITCH, FORWARD
DS_B	DIRECTION SWITCH, REVERSE
DS_{FO}	DIRECTION SWITCH, FORWARD OPTIONAL
DS_{BU}	DIRECTION SWITCH, BACK-UP
LS_L	LIMIT SWITCH, LIFT
LS_{ATT}	LIMIT SWITCH, ATTACHMENT
LS_{ST}	LIMIT SWITCH, STOP LAMP
LS_B	LIMIT SWITCH, BRAKE
LS_{PB}	LIMIT SWITCH, PARKIG BRAKE
LS_{TF}	LIMIT SWITCH, TILT FR
LS_{TR}	LIMIT SWITCH, TILT RR
SWAC	SWITCH, ACCEL
SW_K	SWITCH, KEY
SW_L	SWITCH, LIGHT
SW_F	SWITCH, FLASHER
SW_H	SWITCH, HORN
SW_{TK}	SWITCH, TILT KNOB
SW_{HH1}	SWITCH, HIGHT NO.1
SW_{HH2}	SWITCH, HIGHT NO.2
L_{H-L}	LAMP, HEAD LH
L_{H-R}	LAMP, HEAD RH
L_{C-L}	LAMP, CLEARANCE LH
L_{C-R}	LAMP, CLEARANCE RH
L_{T-L}	LAMP, TAIL LH
L_{T-R}	LAMP, TAIL RH
L_{L-L}	LAMP, LICENCE LH
L_{L-R}	LAMP, LICENCE RH
L_W	LAMP, WORKING
L_{F-LR}	LAMP, FLASHER LH (REAR)
L_{F-RR}	LAMP, FLASHER RH (REAR)
L_{F-L}	LAMP, FLASHER LH
L_{F-R}	LAMP, FLASHER RH

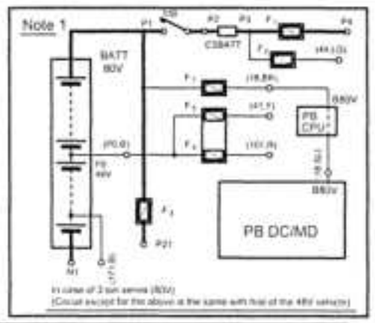

PL_W	PILOT LAMP, WORKING
L_{ST-L}	LAMP, STOP LH
L_{ST-R}	LAMP, STOP RH
L_R	LAMP, ROTALY
L_{BU-L}	LAMP, BACK-UP LH
L_{BU-R}	LAMP, BACK-UP RH
B_Z	BUZZER
CH_{-F}	CHIME, FORWARD
CH_{-R}	CHIME, REVERSE
H	HORN
FR_{-1}	RELAY, FLASHER
V_+	VOICE WARNING

Order the manual at mid-west-tech.com >