CEAM001200

Operation & Maintenance Manual

KOMATSU®

PC200,200LC-6
PC210LC-6
PC220LC-6
PC250LC-6

HYDRAULIC EXCAVATOR

SERIAL NUMBERS

PC200,200LC-6 - A83001
PC210LC-6 - A83001
PC220LC-6 - A83001
PC250LC-6 - A83001

and up

December 1996

Copyright 1996 Komatsu America International Company

MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >

5. CONTENTS

1. FORWARD 0-1

2. SAFETY INFORMATION 0-2

3. INTRODUCTION 0-3
3.1 INTENDED USE 0-3
3.2 FEATURES 0-3
3.3 BREAKING IN A NEW MACHINE 0-3

4. LOCATION OF PLATES, TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR 0-4
4.1 MACHINE SERIAL NO. PLATE POSITION 0-4
4.2 ENGINE SERIAL NO. PLATE POSITION 0-4
4.3 TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR 0-4

5. CONTENTS 0-5

6. GENERAL PRECAUTIONS 0-2

7. PRECAUTIONS DURING OPERATION 0-9
7.1 BEFORE STARTING ENGINE 0-9
7.2 OPERATING MACHINE 0-11
7.3 TRANSPORTATION 0-19
7.4 BATTERY 0-20
7.5 TOWING 0-22
7.6 BUCKET WITH HOOK 0-23
7.6.1 GENERAL PRECAUTIONS 0-23
7.6.2 PRECAUTIONS FOR LIFTING OPERATION 0-24

8. PRECAUTIONS FOR MAINTENANCE 0-25
8.1 BEFORE CARRYING OUT MAINTENANCE 0-25
8.2 DURING MAINTENANCE 0-28

9. POSITION FOR ATTACHING SAFETY LABELS 0-33

10. GENERAL VIEW 2-2
10.1 GENERAL VIEW OF MACHINE 2-2
10.2 GENERAL VIEW OF CONTROLS AND GAUGES 2-3

11. EXPLANATION OF COMPONENTS 2-4
11.1 MACHINE MONITOR 2-4
11.1.1 A. BASIC CHECK ITEMS 2-4
11.1.2 B. CAUTION ITEMS 2-6
11.1.3 C. EMERGENCY STOP ITEMS 2-7
11.1.4 D. METER DISPLAY PORTION 2-8
11.1.5 E: SWITCHES 2-12
11.2 SWITCHES 2-15
11.3 CONTROL LEVERS, PEDALS 2-19
11.4 CEILING WINDOW 2-24
11.5 FRONT WINDOW 2-25
11.6 DOOR LOCK 2-27
11.7 CAP, COVER WITH LOCK 2-28
11.7.1 METHOD OF OPENING AND CLOSING CAP WITH LOCK 2-28
11.7.2 METHOD OF OPENING AND CLOSING COVER WITH LOCK 2-28
11.8 HOT/COOL BOX 2-29
11.9 LUGGAGE BOX 2-29
11.10 ASHTRAY 2-29
11.11 CAB HEATER 2-30
11.12 CAR RADIO 2-32

MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >

11.12.1 EXPLANATION OF COMPONENTS 2-32
11.12.2 LOCATION AND FUNCTION OF CONTROLS 2-32
11.12.3 METHOD OF OPERATION 2-35
11.12.4 PRECAUTIONS WHEN USING 2-36
11.12.5 SPECIFICATIONS 2-36
11.13 FUSE 2-37
11.14 FUSIBLE LINK 2-38
11.15 CONTROLLER 2-38
11.16 TOOL BOX 2-38
11.17 GREASE PUMP HOLDER 2-38
11.18 HANDLING ACCUMULATOR 2-39
11.18.1 METHOD OF RELEASING PRESSURE IN CONTROL CIRCUIT ON MACHINE EQUIPPED WITH ACCUMULATOR 2-39

12. OPERATION 2-40
12.1 CHECK BEFORE STARTING ENGINE 2-40
12.1.1 WALK-AROUND CHECK 2-40
12.1.2 CHECK BEFORE STARTING 2-42
12.1.3 ADJUSTMENT BEFORE OPERATION 2-46
12.1.4 OPERATIONS AND CHECKS BEFORE STARTING ENGINE 2-48
12.2 STARTING ENGINE 2-49
12.2.1 NORMAL STARTING 2-49
12.2.2 STARTING IN COLD WEATHER 2-50
12.3 OPERATIONS AND CHECKS AFTER STARTING ENGINE 2-52
12.3.1 WHEN NORMAL 2-52
12.3.2 IN COLD AREAS 2-54
12.4 MOVING MACHINE 2-57
12.4.1 MOVING MACHINE FORWARD 2-57
12.4.2 MOVING MACHINE BACKWARD 2-58
12.5 STEERING MACHINE 2-60
12.6 STOPPING MACHINE 2-62
12.7 SWINGING 2-63
12.8 OPERATION OF WORK EQUIPMENT 2-64
12.9 HANDLING ACTIVE MODE 2-65
12.10 WORKING MODE SELECTION 2-67
12.11 PROHIBITIONS FOR OPERATION 2-69
12.12 PRECAUTIONS FOR OPERATION 2-71
12.13 PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS 2-72
12.14 HOW TO ESCAPE FROM MUD 2-74
12.14.1 WHEN ONE SIDE IS STUCK 2-74
12.14.2 WHEN BOTH SIDES ARE STUCK 2-74
12.15 WORK POSSIBLE USING HYDRAULIC EXCAVATOR 2-75
12.15.1 BACKHOE WORK 2-75
12.15.2 SHOVEL WORK 2-75
12.15.3 DITCHING WORK 2-75
12.15.4 LOADING WORK 2-75
12.16 REPLACEMENT AND INVERSION OF BUCKET 2-76
12.16.1 REPLACEMENT 2-76
12.16.2 INVERSION 2-77
12.17 PARKING MACHINE 2-78
12.18 CHECK AFTER FINISHING WORK 2-79
12.19 STOPPING ENGINE 2-80
12.20 CHECK AFTER STOPPING ENGINE 2-81
12.21 LOCKING AND SECURING MACHINE 2-81

13. TRANSPORTATION 2-82

MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >

13.1 LOADING, UNLOADING WORK 2-82
13.2 PRECAUTIONS FOR LOADING 2-84
13.3 PRECAUTIONS FOR TRANSPORTATION 2-85

14. COLD WEATHER OPERATION 2-86
14.1 PRECAUTIONS FOR LOW TEMPERATURE 2-86
14.1.1 FUEL AND LUBRICANTS 2-86
14.1.2 COOLANT 2-86
14.1.3 BATTERY 2-87
14.2 PRECAUTIONS AFTER COMPLETION OF WORK 2-88
14.3 AFTER COLD WEATHER 2-88

15. LONG-TERM STORAGE 2-89
15.1 BEFORE STORAGE 2-89
15.2 DURING STORAGE 2-90
15.3 AFTER STORAGE 2-90
15.4 STARTING MACHINE AFTER LONG-TERM STORAGE 2-90

16. TROUBLESHOOTING 2-91
16.1 PHENOMENA THAT ARE NOT FAILURES 2-91
16.2 METHOD OF TOWING MACHINE 2-91
16.3 METHOD FOR USING LIGHT-WEIGHT TOWING HOLE 2-91
16.4 PRECAUTIONS ON PARTICULAR JOBSITES 2-92
16.5 IF BATTERY IS DISCHARGED 2-92
16.5.1 STARTING ENGINE WITH BOOSTER CABLE 2-93
16.5.2 REMOVAL AND INSTALLATION OF BATTERY 2-95
16.6 OTHER TROUBLE 2-96
16.6.1 ELECTRICAL SYSTEM 2-96
16.6.2 CHASSIS 2-97
16.6.3 ENGINE 2-98
16.6.4 ELECTRONIC CONTROL SYSTEM 2-100

17. GUIDES TO MAINTENANCE 3-2

18. OUTLINES OF SERVICE 3-5
18.1 OUTLINE OF OIL, FUEL, COOLANT 3-5
18.1.1 OIL 3-5
18.1.2 FUEL 3-6
18.1.3 COOLANT 3-6
18.1.4 GREASE 3-7
18.1.5 STORING OIL AND FUEL 3-7
18.1.6 FILTERS 3-7
18.2 OUTLINE OF ELECTRICAL SYSTEM 3-8
18.3 OUTLINE OF HYDRAULIC SYSTEM 3-9

19. WEAR PARTS LIST 3-10


20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE 3-12
20.1 ENGINE OIL SPECIFICATION 3-13
20.1.1 NORMAL OPERATION 3-13
20.1.2 ARCTIC OPERATION 3-13
20.2 DIESEL FUEL SPECIFICATIONS 3-14

21. STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS 3-15
21.1 INTRODUCTION OF NECESSARY TOOLS 3-15
21.2 TORQUE LIST 3-16

22. PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS 3-17

23. MAINTENANCE SCHEDULE CHART 3-20
23.1 MAINTENANCE SCHEDULE CHART 3-20
23.2 MAINTENANCE INTERVAL WHEN USING HYDRAULIC BREAKER 3-23

MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >

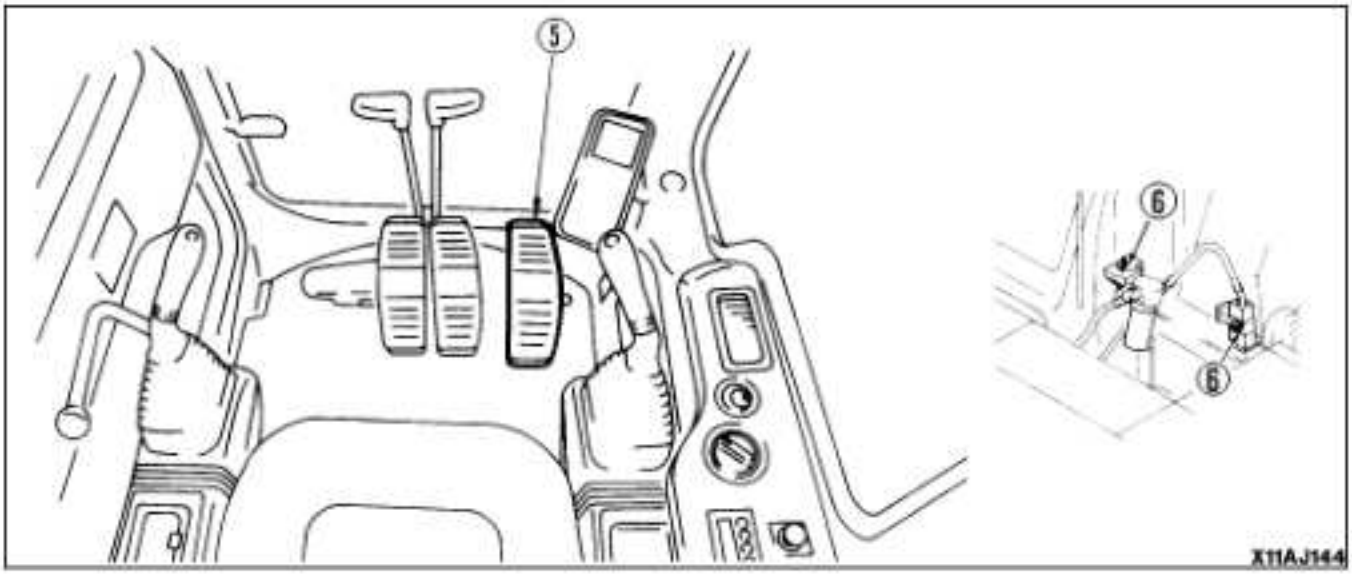

5. ATTACHMENT CONTROL PEDAL

WARNING

Do not put your foot on the pedal except when operating the pedal. If resting your foot on the pedal during operations, and it is depressed by accident, the attachment may move suddenly and cause serious damage or injury.

When breaker is installed

- When the front part of the pedal is depressed, the breaker is actuated.
- The lock pin actuates locking at ①. Position ② is the pedal half stroke position and position ③ is the pedal full stroke position.
- Set the working mode to breaker (B.O.) and set the lock pin at position ③.



When general attachment is installed

- When the pedal is depressed, the attachment is actuated.
- The lock pin actuates locking at ①. Position ② is the pedal half stroke position and position ③ is the pedal full stroke position.



MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >

24. SERVICE PROCEDURE

24.1 INITIAL 250 HOURS SERVICE

Carry out the following maintenance only after the first 250 hours.

- **REPLACE FUEL FILTER CARTRIDGE**

For details of the method of replacing or maintaining, see the sections on EVERY 500 HOURS on page 3-57.

MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >

25. SPECIFICATIONS

PC200, 200LC-6
PC210LC-6

		PC200-6	PC200LC-6	PC210LC-6
WEIGHT				
• Operating weight (without operator)		20150 kg	21300 kg	23210 kg
Performance				
• Bucket capacity		See 30.2 BUCKET INSTALLATION COMBINATIONS on page 5-16		
• Travel speed	Low speed	3.0 km/h		
	Middle speed	4.1 km/h		
	High speed	5.5 km/h		
• Swing speed		12.4 rpm		
TRACK SHOE				
• Triple grouser shoe (standard)		700mm width		600mm width
ENGINE				
• Model		Komatsu S6D102E-1 diesel engine		
• Flywheel horsepower		99 kW (133 HP)/2000 rpm - net 104 kW (140 HP)/2000 rpm - gross		
• Starting motor		24 V 5.5kW		
• Alternator		24 V 50 A		
• Battery		12 V 170 Ah x 2 pieces		

MidWestTech | Komatsu PC200-6, PC200LC-6, PC210LC-6, PC220LC-6, PC250LC-6 Hydr... Order the manual at mid-west-tech.com >