CEAM010301

Operation & Maintenance Manual



730E

DUMP TRUCK
with TROLLEY ASSIST

SERIAL NUMBER A30181 - A30211

KOMATSU®

MidWestTech | Komatsu 730E Trolley Dump Truck with Trolley Assist Operation & Maintena... Order the manual at mid-west-tech.com >

100 HOUR LUBRICATION AND MAINTENANCE CHECKS

Maintenance for every 10 & 50 hour Lubrication and Maintenance Checks should also be carried out at this time.

Truck Serial Number _____
Site Unit Number _____
Date: _____ Hour Meter _____
Name of Service Person _____

1.REAR HYDRAIR® SUSPENSION PIN JOINTS - (If not equipped with automatic lube system) - Add one or two applications of grease to each grease fitting for the upper and lower suspension mount pins. Use Lube Key "D".

2. BODY HINGE PINS - (If not equipped with automatic lube system) - Add one or two applications of grease to each grease fitting. Lube Key "D" for the body hinge pins.

3. HOIST CYLINDER - (If not equipped with automatic lube system) - Add one or two applications of grease to each grease fitting for bearing and pivots. Use Lube Key "D".

4. ANTI-SWAY BAR - (If not equipped with automatic lube system) - Add one or two applications of grease to each grease fitting for pin and bearings. Use Lube Key "D".

5. HYDRAULIC OIL FILTERS - Change filter elements after the initial 100 hours of operation; then at 250 hours; and then each 500 hours of operation thereafter.

COMMENTS	CHECKED	INITIALS

MidWestTech | Komatsu 730E Trolley Dump Truck with Trolley Assist Operation & Maintena... Order the manual at mid-west-tech.com >

INJECTORS (SL-1 Series "H")

Injector Specifications

- Each lube injector services only one grease point. In case of pump malfunction, each injector is equipped with a covered grease fitting to allow the use of external lubricating equipment.
- Injector output is adjustable:
  Maximum output = 0.08 in^3 (1.31 cc).
  Minimum output = 0.008 in^3 (0.13 cc).
- Operating Pressure:
  Minimum - 1850 psi (12 755 kPa)
  Maximum - 3500 psi (24 133 kPa)
  Recommended - 2500 psi (17 238 kPa)
  Maximum Vent Pressure - (Recharge)
  600 psi (4 137 kPa)

Injector Adjustment

The injectors may be adjusted to supply from 0.008 in^3 to 0.08 in^3 (0.13 cc to 1.31 cc) of lubricant per injection cycle. The injector piston travel distance determines the amount of lubricant supplied. This travel is in turn controlled by an adjusting screw in the top of the injector housing.

Turn the adjusting screw (1, Figure 3-8) counterclockwise to increase lubricant amount delivered and clockwise to decrease the lubricant amount.

When the injector is not pressurized, maximum injector delivery volume is attained by turning the adjusting screw (1) fully counterclockwise until the indicating pin (8) just touches the adjusting screw. At the maximum delivery point, about 0.38 inch (9.7 mm) adjusting screw threads should be showing. Decrease the delivered lubricant amount by turning the adjusting screw clockwise to limit injector piston travel. If only half the lubricant is needed, turn the adjusting screw to the point where about 0.19 inch (4.8 mm) threads are showing. The injector will be set at minimum delivery point with about 0.009 inch (0.22 mm) thread showing.

NOTE: The above information concerns adjustment of injector delivery volume. The timer adjustment should also be changed, if overall lubricant delivery is too little or too much. Injector output should NOT be adjusted to less than one-fourth capacity.

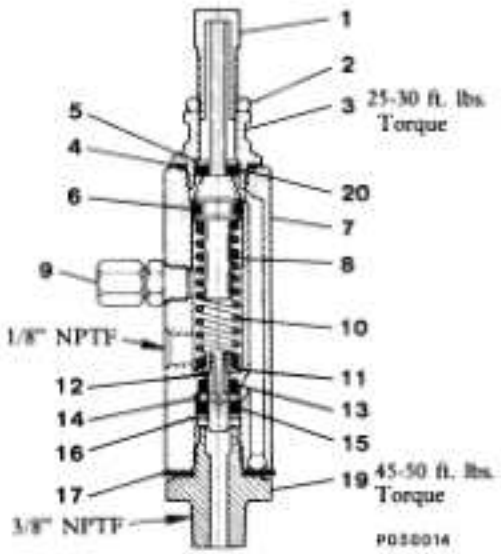


FIGURE 3-8. TYPE SL-1 INJECTOR

1. Adjusting Screw
2. Locknut
3. Piston Stop Plug
4. Gasket
5. Washer
6. Viton O-Ring
7. Injector Body Assy.
8. Piston Assembly
9. Fitting Assembly
10. Plunger Spring
11. Spring Seat
12. Plunger
13. Viton Packing
14. Inlet Disc
15. Viton Packing
16. Washer
17. Gasket
18. Adapter Bolt
19. Adapter
20. Viton Packing

NOTE: The Piston Assembly (8) has a visible indicator pin at the top of the assembly to verify the injector operation.

MidWestTech | Komatsu 730E Trolley Dump Truck with Trolley Assist Operation & Maintena... Order the manual at mid-west-tech.com >

Operator Switch

The payload operator switch is used to set, view and clear the Total Load Counter and Total Ton Counter. It is also used to enter the Operator ID number (0-9999). This switch can also be used to view the suspension pressures and inclinometer. The payload meter operator switch is located on the dashboard. It is a two-way momentary switch. The top position is the SELECT position. The SELECT position is used step through the different displays. The lower position is the SET position. The SET position is used to set the Operator ID or clear the load and total ton counters. Normally the inputs from the switch to the payload meter are open circuit. The switch momentarily connects the circuit to ground.

Speed Input

PLM3 uses a speed signal to calculate speed, distance, and other performance data. This input is critical to the proper operation of the system. PLM3 receives this signal from the speedometer/operator display on the dashboard. The same signal displayed to the operator is used by the system. Distance calculations are made based on the rolling radius of the tires for a particular truck.

Body-Up Switch

The Body-Up input signal is received from a magnetic switch located on the inside of the truck frame, forward the pivot pin of the truck body. This is the same switch typically used for input to the drive system. When the body is down, the switch closes and completes the circuit to 71-Control Power. 24vdc indicates the body is down. Open circuit indicates that the body is up.

Brake Lock Switch

The brake lock is used to lock the rear brakes on the truck. It is necessary for the accurate calculation of swingloads during the loading process. Without the brake lock applied, the payload meter will not calculate swingloads during the loading process. Without the brake lock, the payload meter will assume that the truck was loaded using a continuous loader and flag the haul cycle record. All other functions will be normal regardless of brake lock usage. The brake lock input comes from the switch located on the dash panel. The brake lock switch connects the circuit to ground. Open circuit indicates brake lock off. Ground indicates brake lock on.

Payload Meter

The payload meter is housed in a black aluminum housing. There is a small window on the face of the unit. Status and active alarm codes can be viewed through the window. During normal operation, a two-digit display flashes 0 back and forth. Active fault codes will be displayed for two seconds. These codes are typically viewed using the laptop computer connected to the serial communications port.

There is one 40-pin connector on the payload meter. A jack-screw is used to hold the payload meter and wire harness connector housings together. This screw requires a 4mm or 5/32 hex wrench. The correct tightening torque for this screw is 25 lb-in. Four bolts hold the payload meter housing to its mounting bracket in the cab.

The circuit board inside the payload meter housing is made from multi-layer, dual-sided surface-mount electronics. There are no field serviceable components inside. The electronics are designed to withstand the harsh operating environment of the mining industry. Opening the payload meter housing will result in voiding the warranty.

Communications Ports

The payload meter has two RS232 serial communications ports and two CAN ports. Connections for the two serial ports are available inside the payload meter junction box. The two CAN ports are available for future electronics systems.

Serial port #1 is used to communicate with the dashboard display. It is also used to connect to the laptop computer. The display gauge will remain blank when the PC is using the serial port. This port initially operates with serial settings at 9600,8,N,1. These settings change automatically to increase the communications rate when the PC is using the port. This serial port uses a 3-wire hardware connection.

Serial port #2 is used to communicate to other on-board electronics like Modular Mining's Dispatch® system or the Scoreboard from KMS. This port uses a 3-wire hardware connection. Connections to this serial port need to be approved by KMS. Several protocol options are available and detailed technical information is available depending on licensing.

MidWestTech | Komatsu 730E Trolley Dump Truck with Trolley Assist Operation & Maintena... Order the manual at mid-west-tech.com >

PLM3 System Configuration

Starting Communications

The PDM software allows users to download and configure the system.



Before connecting to the payload meter, select "Change Program Options" and confirm that the program has selected the correct laptop serial port. Most laptops use Comm 1 for serial communications. The units displayed for reports and graphs by the PC software can be set on this form. Click "Done" to return to the main menu.



From the main menu, click the "Connect to Payload Meter" button. The PC will try to connect to the payload meter and request basic information from the system. In the event of communications trouble, the PC will try 3 times to connect before "timing-out". This may take several seconds.

Displayed Payload Units



Three options are available for the display of units in the PC software, reports, and graphs:

Short Tons: Payload is displayed in short tons, distances and speeds will be displayed in Miles


Metric Tons: Payload is displayed in metric tons, distances and speeds are displayed in Kilometers

Long Tons: Payload is displayed in long tons, distances and speeds are displayed in Miles

Time Units

Minutes and Seconds Example:
Five minutes and thirty-two seconds = 5:32
Decimal Minutes Example:
Five minutes and thirty-two seconds = 5.53

Connection Menu

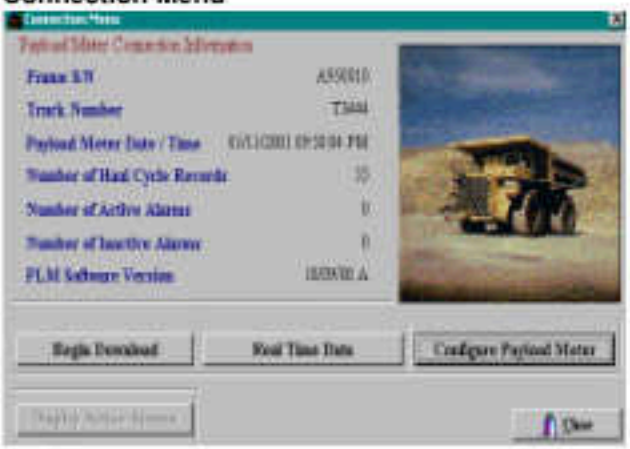

The connection screen displays basic system information to the user.


- Frame S/N should agree with the truck serial number from the serial plate located on the truck frame.
- Truck Number is an ID number assigned to the truck by the mine.
- The Payload Meter Date / Time values come from the payload meter at the moment of connection.
- Number of Haul Cycle Records is the number of haul cycles records stored in memory and available for download.
- Number of Active Alarms shows how many alarms are currently active in the system at the time of connection. If there are active alarms, the "Display Active Alarms" button is available.
- Number of Inactive Alarms shows how many alarms have been recorded in memory and are available for download.
- PLM Software Version displays the current version of software in the payload meter.

The information on the connection menu comes from the configuration of the payload meter system on the truck.

MidWestTech | Komatsu 730E Trolley Dump Truck with Trolley Assist Operation & Maintena... Order the manual at mid-west-tech.com >

Viewing Alarms


From the Payload Summary screen, click the "Alarms" button to display the alarm screen. The alarms are sorted by the query settings from the Payload Summary screen. Alarms can be displayed as Active or Inactive.

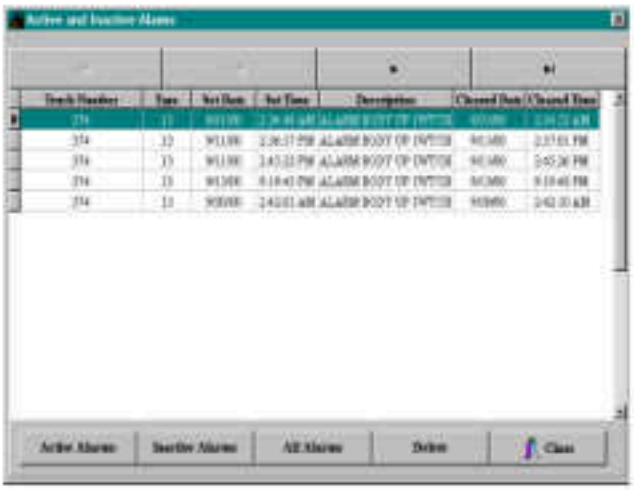

Deleting Alarm Records

To delete alarm records from the main database, press the "Delete" button at the bottom of the "Alarm Display" screen. The program will display a summary of the alarms from the query. To delete an alarm, select one at a time and press the "Delete" button. It is recommended that the query data be exported to a ".zip" file for archival purposes before deletion. Multiple records may be selected by holding down the Shift key. Pressing the "Delete All" button will select all the alarms from the current query and delete them.

NOTE: There is no recovery for alarms that have been deleted from the main database. It is highly recommended that all records be exported and archived in a compressed file format for future reference before being deleted.

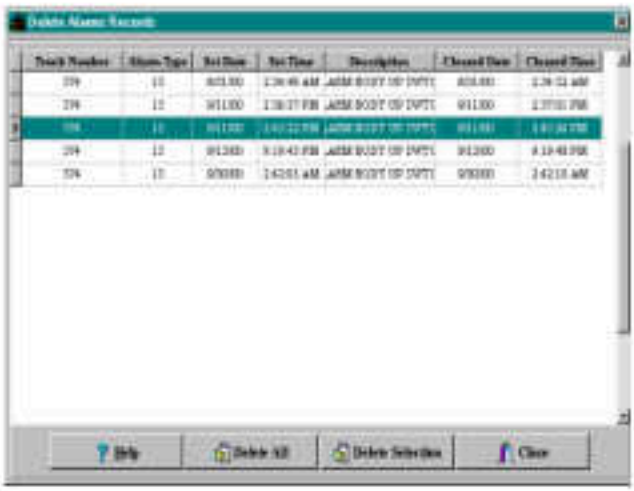

Order the manual at mid-west-tech.com >