CEAM010703

Operation & Maintenance Manual

HD1500-5

DUMP TRUCK

SERIAL NUMBERS A30049-A30069

KOMATSU®

MidWestTech | Komatsu HD1500-5 Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT - SECTION / PAGE

FOREWARD 10-1
“Alerts” Page - a description of DANGER, WARNING, and CAUTION symbols. 10-2
TABLE OF CONTENTS. 10-3
Truck Model Illustration 10-11
ABOUT THIS MANUAL. 10-12

TORQUE TABLES AND CONVERSION CHARTS 12-1

SAFETY 20-1
Safety Rules 20-1
Safety Features 20-1
Clothing And Personal Items 20-1
Unauthorized Modification 20-1
Leaving The Operator’s Seat 20-1
Mounting And Dismounting 20-2
Fire Prevention For Fuel And Oil 20-2
Precautions With High Temperature Fluids 20-2
Asbestos Dust Hazard Prevention 20-3
Prevention Of Injury By Work Equipment 20-3
Fire Extinguisher And First Aid Kit 20-3
Precautions For ROPS 20-3
Precautions For Attachments 20-3
HAUL ROADS 20-4
PRECAUTIONS DURING OPERATION 20-4
BEFORE STARTING THE ENGINE 20-4
Fire Prevention 20-5
Preparing For Operation 20-5
Ventilation In Enclosed Areas 20-5
In Operator’s Cab - Before Starting The Engine 20-5
Mirrors, Windows, And Lights 20-5
OPERATING THE MACHINE 20-6
When Starting The Engine 20-6
Precautions For Starting Machine 20-6
Truck Operation - General 20-6
Traveling 20-7
Traveling In Reverse 20-7
Traveling On Slopes 20-7
Ensure Good Visibility 20-7
Operate Carefully On Snow 20-8
Avoid Damage To Dump Body 20-8

MidWestTech | Komatsu HD1500-5 Dump Truck Operation & Maintenance Manual | Public...
Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT - SECTION / PAGE

Driving Near High Voltage Cables 20-8
When Dumping 20-8
Working On Loose Ground 20-8
Loading The Body 20-8
Parking The Machine 20-8
TOWING 20-9
WORKING NEAR BATTERIES 20-9
Battery Hazard Prevention 20-9
Starting With Booster Cables 20-9
PRECAUTIONS FOR MAINTENANCE 20-10
BEFORE PERFORMING MAINTENANCE 20-10
Warning Tag 20-10
Proper Tools 20-10
Stopping The Engine Before Service 20-10
Securing The Dump Body 20-10
DURING MAINTENANCE 20-12
Personnel 20-12
Attachments 20-12
Working Under The Machine 20-12
Keep The Machine Clean 20-12
Rules To Follow When Adding Fuel Or Oil 20-12
Radiator Water Level 20-12
Use Of Lighting 20-12
Precautions With The Battery 20-13
Handling High Pressure Hoses 20-13
Precautions With High PressureOil 20-13
Precautions When Performing Maintenance Near High Temperature Or High Pressure 20-13
Rotating Fan And Belts 20-13
Waste Materials 20-13
TIRES 20-14
Handling Tires 20-14
Storing Tires After Removal 20-14
WHEN REPAIRS ARE NECESSARY 20-15
ADDITIONAL JOB SITE RULES 20-16

WARNINGS AND CAUTIONS 22-1

MidWestTech | Komatsu HD1500-5 Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT - SECTION / PAGE

OPERATING INSTRUCTIONS . . . 30-1
PREPARING FOR OPERATION . . . 30-1
Safety Is Thinking Ahead . . . 30-1
At The Truck - Ground Level Walk Around Inspection . . . 30-1
ENGINE START-UP SAFETY PRACTICES . . . 30-4
EMERGENCY STEERING SYSTEM . . . 30-5
Operation . . . 30-5
Pre-Operation Testing . . . 30-5
AFTER THE ENGINE HAS STARTED . . . 30-6
MACHINE OPERATION SAFETY PRECAUTIONS . . . 30-9
LOADING . . . 30-9
HAULING . . . 30-10
RETARDER OPERATION . . . 30-10
PASSING . . . 30-11
DUMPING . . . 30-11
Raising the Dump Body . . . 30-12
Lowering The Dump Body . . . 30-13
SAFE PARKING . . . 30-13
SHUTDOWN PROCEDURE . . . 30-13
SUDDEN LOSS OF ENGINE POWER . . . 30-14
Emergency Steering And Braking . . . 30-14
DISABLED TRUCK DUMPING . . . 30-14
Hookup . . . 30-14
Raising the Body . . . 30-14
Lowering the Body . . . 30-15
DISABLED TRUCK STEERING AND BRAKING . . . 30-16
TOWING . . . 30-18

OPERATOR CAB AND CONTROLS . . . 32-1
STEERING WHEEL AND CONTROLS . . . 32-2
Horn Button . . . 32-2
Telescope Lock Ring . . . 32-2
Tilt Wheel Lever . . . 32-2
Turn Signal / Headlight Dimmer . . . 32-2
Windshield Wiper / Washer Control . . . 32-3
RETARDER CONTROL LEVER . . . 32-3
SERVICE BRAKE PEDAL . . . 32-3
ACCELERATOR (THROTTLE) PEDAL . . . 32-4
INSTRUMENT PANEL . . . 32-4
HEATER / AIR CONDITIONER COMPARTMENT AND CONTROLS . . . 32-4
Defroster Vent Control Switch . . . 32-4

MidWestTech | Komatsu HD1500-5 Dump Truck Operation & Maintenance Manual | Public...
Order the manual at mid-west-tech.com >

Control Switches

Control switches (3, 4, 6, & 7, Figure 32-4) are simple rocker type switches which turn functions on and off.



The ON and OFF positions are marked with these symbols.

Shift Limiter Switch



Shift limiter switch (3, Figure 32-4) is used to limit the highest speed range when the transmission shift lever is in either the D or L range.

Shift Limiter	Range	Range(s) Attainable
ON	D	Range - F2-F6
	L	Range - F1
OFF	D	Range - F2-F7
	L	Range - F1-F2

F1 Start Switch



F1 start switch (4, Figure 32-4) is used to ensure that the transmission starts in F1 when the transmission range selector is in D. When this switch is ON and the transmission range selector is in the D position, the transmission will shift to F1 to start. When this switch is OFF and the range selector is in the D position, the transmission will start in second gear. Refer to Transmission Range Selector, D - DRIVE. All other forward gear ranges (L, F2, F3, F4, F5) start out in F1 regardless of the F1 start switch position.

Hoist Control Lever

Hoist control lever (5, Figure 32-4) is a four-function, three-position, hand-operated lever located between the operator seat and the center console.

Refer to Operating Instructions - Dumping, for more complete details concerning this control.

Parking Brake Switch



When parking brake switch (6, Figure 32-4) is in the ON position, the parking brake is applied.

When this switch is in the OFF position, the parking brake is released.

The parking brake is spring applied and hydraulically released. It will hold a stationary truck when the engine is stopped and the keyswitch is in the OFF position.

DO NOT apply the parking brake while the truck is in motion. Damage to parking brake components may occur.

When the keyswitch is ON and the parking brake is applied, an indicator light in the LH panel pod will illuminate.

MidWestTech | Komatsu HD1500-5 Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

LUBRICATION AND SERVICE

Preventive maintenance contributes to the long life and dependability of the truck and its components. The use of proper lubricants and the performance of checks and adjustments at recommended intervals are crucial.

Lubrication requirements reference the lube key found in the lubrication chart. For detailed service requirements for specific components, refer to the shop manual.

The service intervals presented here are in hours of operation. Oil change intervals are recommended in the absence of an oil analysis program which may determine different intervals. However, if the truck is being operated in extreme conditions, some or all of the intervals may need to be performed more frequently.

Refer to the engine service manual when servicing the engine or any of its components.

HD1500-5 SERVICE CAPACITIES		
	Liters	**US Gallons**
Crankcase: (including lube oil filters)	193	51
Cooling System:	532	140.6
Hydraulic System: Refer to Hydraulic Tank Service in this chapter	900	238
Differential Case Final Drive Case (each wheel)	300 120	79 31.7
Fuel Tank (Diesel Fuel Only)	2120	560
Transmission Case: including torque converter	153	40.5

COOLANT SPECIFICATIONS

- For ambient temperatures of -25° F (-32° C) and above, use a standard 50/50 anti-freeze-to-water mixture.
- For arctic climates with ambient temperatures between -25° F (-32° C) and -65° F (-54° C), use a 60/40 anti-freeze-to-water mixture.

NOTE: Do not use propylene glycol coolant in arctic climates. Only use ethylene glycol coolants.

Unacceptable Practices

- Use of high-silicate anti-freeze.
- Under concentration or over concentration of Extended Service Additive (SCA).
- Use of anti-freezes/coolants that are not fully formulated for extended service intervals.
- Use of sealing additives (stop-leak) in the cooling system.
- Use of soluble oils in the cooling system.
- Use of poor-quality water. See the engine manufacturer's specifications for water quality requirements.
- Use of anti-freeze, Extended Service Additive (SCA) or coolant filter(s) that do not meet the engine manufacturer's specifications.
- Use of Treated Water coolant.
- Use of coolants with less than 40 percent antifreeze.

QUICK FILL SERVICE CENTER

The service center (Figure 40-1) is located on the left side of the truck below the hydraulic tank. The service center can be used to fill system fluids at a higher rate of speed than manually adding fluids and grease.

Connect a filling device to the appropriate fitting on the service center to add fluids/grease. Use caution when adding fluids to avoid overfilling.

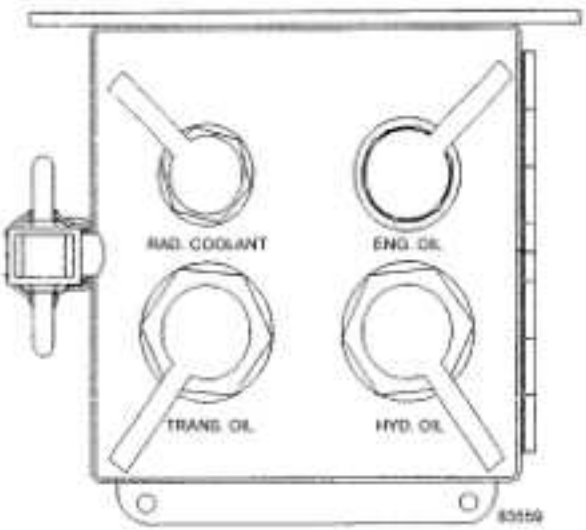


FIGURE 40-1. SERVICE CENTER

Order the manual at mid-west-tech.com >

Gain Factor

Gain factor is part of the formula the payload meter uses to calculate the payload. The gain factor is a tool that compensates for variations between actual weight of the payload and the calculated weight from the payload meter. The gain factor should only be adjusted after several payloads have been weighed on a scale. The gain should never be adjusted based only on one payload. It takes at least 10 scale weighins to determine an average variation. A worksheet is located at the end of this chapter to assist in calculating the necessary gain adjustment.

There are two types of gain adjustments, G_t gain and UP factor. It is recommended that only the G_t gain be adjusted. This adjustment is made using the potentiometer on the side of the payload meter. Refer to "Adjusting the Gain".

Brake Lock

The Brake Lock only applies the rear brakes. This allows the front wheels to rotate slightly as the truck is being loaded. This is important because the payload meter assumes that the front wheels can rotate freely. As the truck is being loaded, it will begin to squat down on the suspensions. This will change the wheel base dimension of the truck. This freedom of movement prevents additional binding and friction in the front suspensions.

The incline of the grade on which the truck is loading is measured by the inclinometer. This helps determine the incline factors that are applied to the front and rear sprung weights. The tire forces on the road surface that hold the truck on grade affect the suspension pressures. If the front and rear brakes are locked, the effect on the suspension pressures cannot be determined. If only the rear brakes are applied the effect is predictable and the incline factors accurately account for the forces on the tires.

If the service brake or park brake is used and depending on the incline and other factors, the payload meter can overestimate or underestimate the load. **It is important that only the brake lock be used while loading the truck. (Parking brake on 330M/HD785).**

Sources of Error

Poorly charged suspensions can lead to systematic error in the calculation of payload. The error is most obvious when the oil level is low. When there is too little oil in the suspensions, the cylinder may compress completely under a load. The weight of the truck will be carried by the metal to metal contact within the suspension. Not only will the ride of the truck, the life of the tires, and other components be affected, but the pressure in the cylinder will not truly represent the load on the truck. Under-charged suspensions typically cause the payload calculations from the payload meter to be lower than the actual payload.

Typical Data From Service Check Mode

A sample data set is shown in Figure 60-4. This data was taken in the laboratory and is used in Figure 60-5 to calculate the final load. Note the front suspension pressures were converted into the front sprung weight using the formulas above Figure 60-5. The front sprung weight is then multiplied by the front incline factor and the front linkage factor. The same is done with the rear sprung weight. The front and rear sprung weights are then summed. This number is multiplied by the G_t gain potentiometer value. The calibration load is subtracted from the total to produce the final load. The load displayed on the meter is this final load (item #15) multiplied by the UP gain factor.

Number	Data	Description
1	13:09	Current Time
2	749.4	Front Left Pressure (psi)
3	848.9	Front Right Pressure (psi)
4	863.2	Rear Left Pressure (psi)
5	1049.0	Rear Right Pressure (psi)
6	106.0	Front Weight (Tons)
7	75.1	Rear Weight (Tons)
8	-1.85	Inclinometer (Degrees)
9	0.95	Incline Factor - Front Wheels
10	0.984	Incline Factor - Rear Wheels
11	1	Link Factor - Front Wheels
12	1.539	Link Factor - Rear Wheels
13	70.6	Calibration Sprung Weight (Tons)
14	1.000	Gain Adjustment
15	143.8	Current Load (Tons)
16	3.9	Battery Backup Voltage (Volts)

FIGURE 60-4.

MidWestTech | Komatsu HD1500-5 Dump Truck Operation & Maintenance Manual | Public...

Order the manual at mid-west-tech.com >