CEAM011402

Operation & Maintenance Manual

KOMATSU®

WA250PT-5L

WHEEL LOADER

SERIAL NUMBERS WA250PT-5L A79001 and up

ENGINE 6D102E

April 2016

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

INTRODUCTION

FOREWORD 0-2
SAFETY INFORMATION 0-3
INTRODUCTION 0-4
DIRECTIONS OF MACHINE 0-4
NECESSARY INFORMATION 0-5
MACHINE SERIAL NO. PLATE 0-5
ENGINE SERIAL NO. PLATE AND POSITION 0-5
SERVICE METER POSITION 0-6
ENTER SERIAL NO. AND DISTRIBUTOR 0-6
TABLE OF CONTENTS 0-7

SAFETY

SAFETY AND WARNING DECALS 1-2
LOCATION OF THE SAFETY DECALS 1-2
DESCRIPTION OF SAFETY LABELS 1-3
SAFETY LABELS 1-3
GENERAL SAFETY RULES AND PRECAUTIONS 1-11
GENERAL SAFETY RULES 1-11
UNAUTHORIZED MODIFICATIONS 1-12
GENERAL SAFETY AT JOB SITE 1-12
WORKING ON LOOSE GROUND 1-12
SAFETY FEATURES 1-13
PERSONAL PROTECTIVE EQUIPMENT 1-13
FIRE AND EXPLOSION PREVENTION 1-14
FIRE CAUSED BY FUEL OR OIL 1-14
FIRE CAUSED BY ACCUMULATION OF FLAMMABLE MATERIAL 1-14
FIRE COMING FROM ELECTRIC WIRING 1-15
FIRE COMING FROM HYDRAULIC LINE 1-15
WINDSHIELD WASHER FLUID 1-15
ACTION IF FIRE OCCURS 1-15
FIRE EXTINGUISHER AND FIRST AID KIT 1-15
MOUNTING AND DISMOUNTING 1-16
INSIDE OPERATOR'S COMPARTMENT 1-17
PRECAUTIONS WHEN STANDING UP FROM OPERATOR'S SEAT 1-17
PRECAUTIONS WHEN USING ROPS 1-17
EMERGENCY ESCAPE FROM OPERATOR'S CAB 1-17
LEAVING OPERATOR'S COMPARTMENT 1-18
KEEP OPERATOR'S COMPARTMENT CLEAN 1-18
DUST HAZARD PRECAUTIONS 1-19
ASBESTOS HAZARD ALERT 1-19
CRUSH OR PINCH POINT DANGERS 1-19
PRECAUTIONS BEFORE STARTING OPERATIONS 1-20
PRE-OPERATIONAL CHECKS 1-20
STARTING YOUR WORK OPERATIONS 1-20

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

WORK SITE HAZARDS 1-21
AVOIDING DANGEROUS SITUATIONS 1-21
WORKING CLEARANCES 1-22
RULES FOR ROAD TRAVEL 1-24
TRAVELING IN REVERSE 1-24
TRAVELING ON ICY OR SNOW-COVERED SURFACES 1-24
WORKING ON LOOSE OR UNSTABLE GROUND 1-24
TRAVEL ON SLOPES 1-25
PARKING THE MACHINE 1-26
PRECAUTIONS DURING MAINTENANCE OPERATIONS 1-27
WARNING TAGS 1-27
EQUIPMENT STORAGE 1-27
WORKING UNDER THE MACHINE 1-28
USING DROP LAMPS 1-28
KEEPING THE MACHINE CLEAN 1-29
RUNNING THE MACHINE DURING MAINTENANCE 1-29
RULES FOR REFUELING THE MACHINE 1-30
COOLING SYSTEM PRECAUTIONS 1-30
BATTERY PRECAUTIONS 1-31
STARTING THE MACHINE 1-31
HIGH-PRESSURE HOSES 1-32
SAFETY HANDLING HIGH-PRESSURE HOSES 1-32
PRECAUTION FOR HIGH FUEL PRESSURE 1-32
HIGH TEMPERATURES AREAS 1-32
DISPOSAL OF WASTE MATERIALS 1-33
INFLATING TIRES 1-33
DISPOSAL OF WASTE MATERIALS 1-33
ACCUMULATOR 1-34
CRITICAL PARTS 1-34
HIGH VOLTAGE 1-34

OPERATION


GENERAL VIEW 2-2
WA250PT-5L 2-2
CONTROLS AND GAUGES 2-3
MACHINE MONITOR 2-4
EXPLANATION OF COMPONENTS 2-5
MACHINE MONITOR 2-5
MONITOR SYSTEM 2-6
TESTING ACTUATION OF MACHINE MONITOR SYSTEM 2-6
TYPES OF WARNING 2-7
EMERGENCY STOP 2-7
CAUTION 2-7
MISTAKEN OPERATION 2-7
INSPECTION AND MAINTENANCE 2-7
CENTRAL WARNING LAMP 2-7
CHARACTER DISPLAY PORTION 2-8
SERVICE METER 2-8

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

ACTION CODE DISPLAY 2-9
FAILURE CODE DISPLAY 2-10
FILTER, OIL REPLACEMENT TIME DISPLAY 2-11
EMERGENCY STOP ITEM 2-13
BRAKE OIL PRESSURE CAUTION LAMP 2-13
ENGINE OIL PRESSURE CAUTION LAMP 2-14
BATTERY CHARGE CIRCUIT CAUTION LAMP 2-14
STEERING OIL PRESSURE CAUTION LAMP - RED 2-14
CAUTION ITEMS 2-15
AXLE OIL TEMPERATURE CAUTION LAMP 2-15
PARKING BRAKE REMINDER CAUTION LAMP 2-16
HST OIL TEMPERATURE CAUTION LAMP 2-16
ENGINE COOLING WATER TEMPERATURE CAUTION LAMP 2-16
FUEL LEVEL CAUTION LAMP 2-17
WARNING/LIMIT FUNCTIONS FOR TRAVEL SPEED 2-17
TRAVEL SPEED LIMIT FUNCTION 2-17
INSPECTION AND MAINTENANCE ITEM 2-18
RADIATOR COOLANT LEVEL CAUTION LAMP 2-18
MAINTENANCE CAUTION LAMP 2-19
HST OIL FILTER CLOG CAUTION LAMP 2-19
PILOT DISPLAY PORTION 2-20
PARKING BRAKE PILOT LAMP 2-20
PREHEATING PILOT LAMP 2-20
EMERGENCY STEERING PILOT LAMP - GREEN 2-21
DIRECTIONAL LEVER POSITION PILOT LAMP 2-21
PILOT LAMP FOR SPEED RANGE SELECTOR SWITCH POSITION 2-21
TURN SIGNAL PILOT LAMP 2-21
HEAD LAMP HIGH BEAM PILOT LAMP 2-22
METER DISPLAY PORTION 2-23
HST OIL TEMPERATURE GAUGE 2-23
ENGINE COOLANT TEMPERATURE GAUGE 2-23
FUEL GAUGE 2-24
SPEEDOMETER 2-24
METER DISPLAY PILOT LAMP 2-24
OTHER FUNCTIONS OF MACHINE MONITOR 2-25
METHOD OF DISPLAYING ODOMETER 2-25
RESET METHOD FOR FILTER, OIL REPLACEMENT TIME 2-25
METHOD FOR SELECTING LANGUAGE 2-26
METHOD OF SELECTING HST CHANGING FUNCTION 2-27
SWITCHES 2-28
STARTING SWITCH 2-28
SPEED RANGE SELECTOR SWITCH 2-29
VARIABLE SHIFT CONTROL SWITCH 2-29
DIRECTIONAL SELECTOR SWITCH 2-29
DIRECTIONAL SELECTOR SWITCH ACTUATION SWITCH 2-30
E.C.S.S. SWITCH 2-30
LAMP SWITCH 2-31
TURN SIGNAL LEVER 2-31
DIMMER SWITCH 2-31

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >


SWITCHES

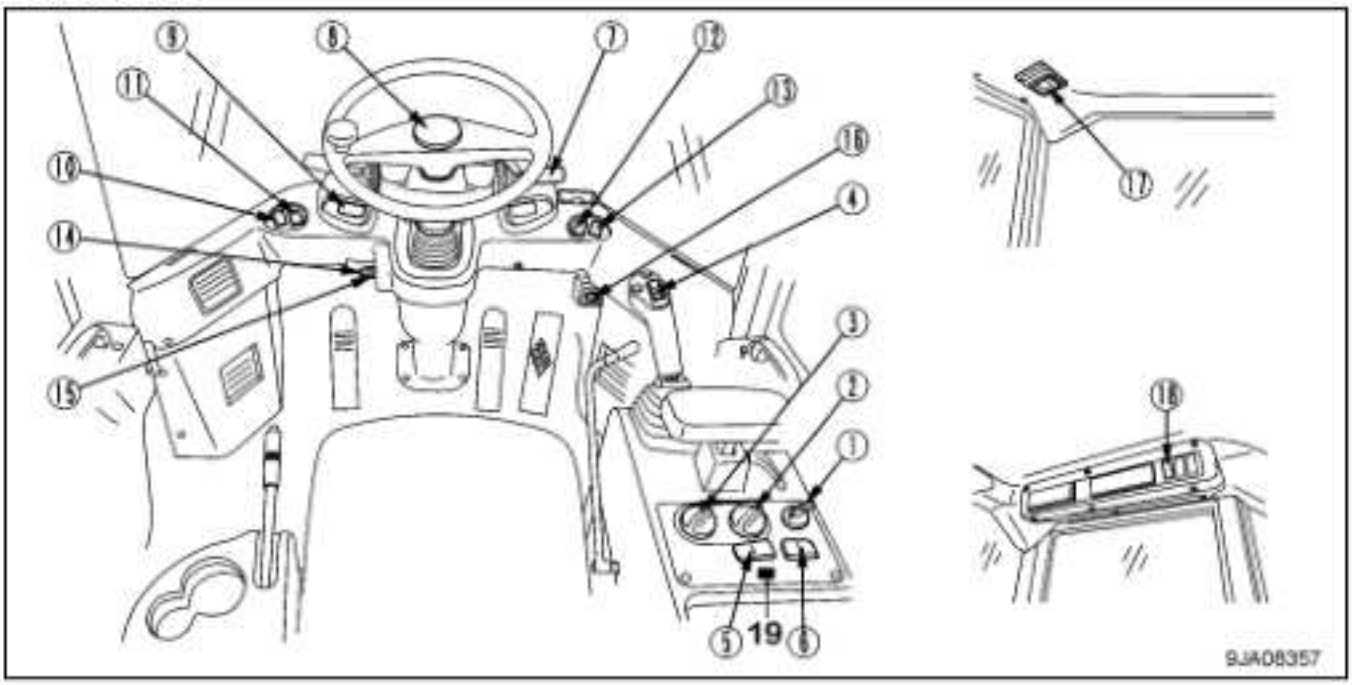

1. Starting Switch
2. Speed Range Selector Switch
3. Variable Shift Control Switch
4. Directional Selector Switch
5. Directional Selector Actuation Switch
6. E.C.S.S. Switch (if equipped)
7. Lamp Switch
7. Turn Signal Lever
7. Dimmer Switch
8. Horn Button
9. Hazard Lamp Switch
10. Front Working Lamp Switch
11. Rear Working Lamp Switch
12. Monitor Panel Mode Selector Switch 1
13. Monitor Panel Mode Selector Switch 2
14. Front Wiper Switch
15. Rear Wiper Switch
16. Cigarette Lighter
17. Room Lamp Switch
18. Rear Window Defroster Switch
19. Fan Reverse Switch (if equipped)

STARTING SWITCH

The starting switch (1) is used to start or stop the engine.

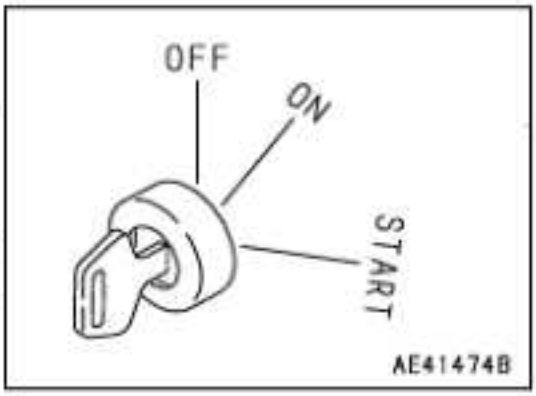


OFF position
In this position, it is possible to insert or remove the starting switch key. All the electric system switches are off, and the engine will stop.

ON position
In this position, electric current flows to the charging circuit, lamp circuit, and accessory circuit.
Keep the starting switch key at the ON position while the engine is running.

START position
This is the position to start the engine. Hold the key at this position while cranking. Release the key immediately after the engine has started. The key returns to the ON position when released.

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

LOCATION OF LIFTING POSITION MARK

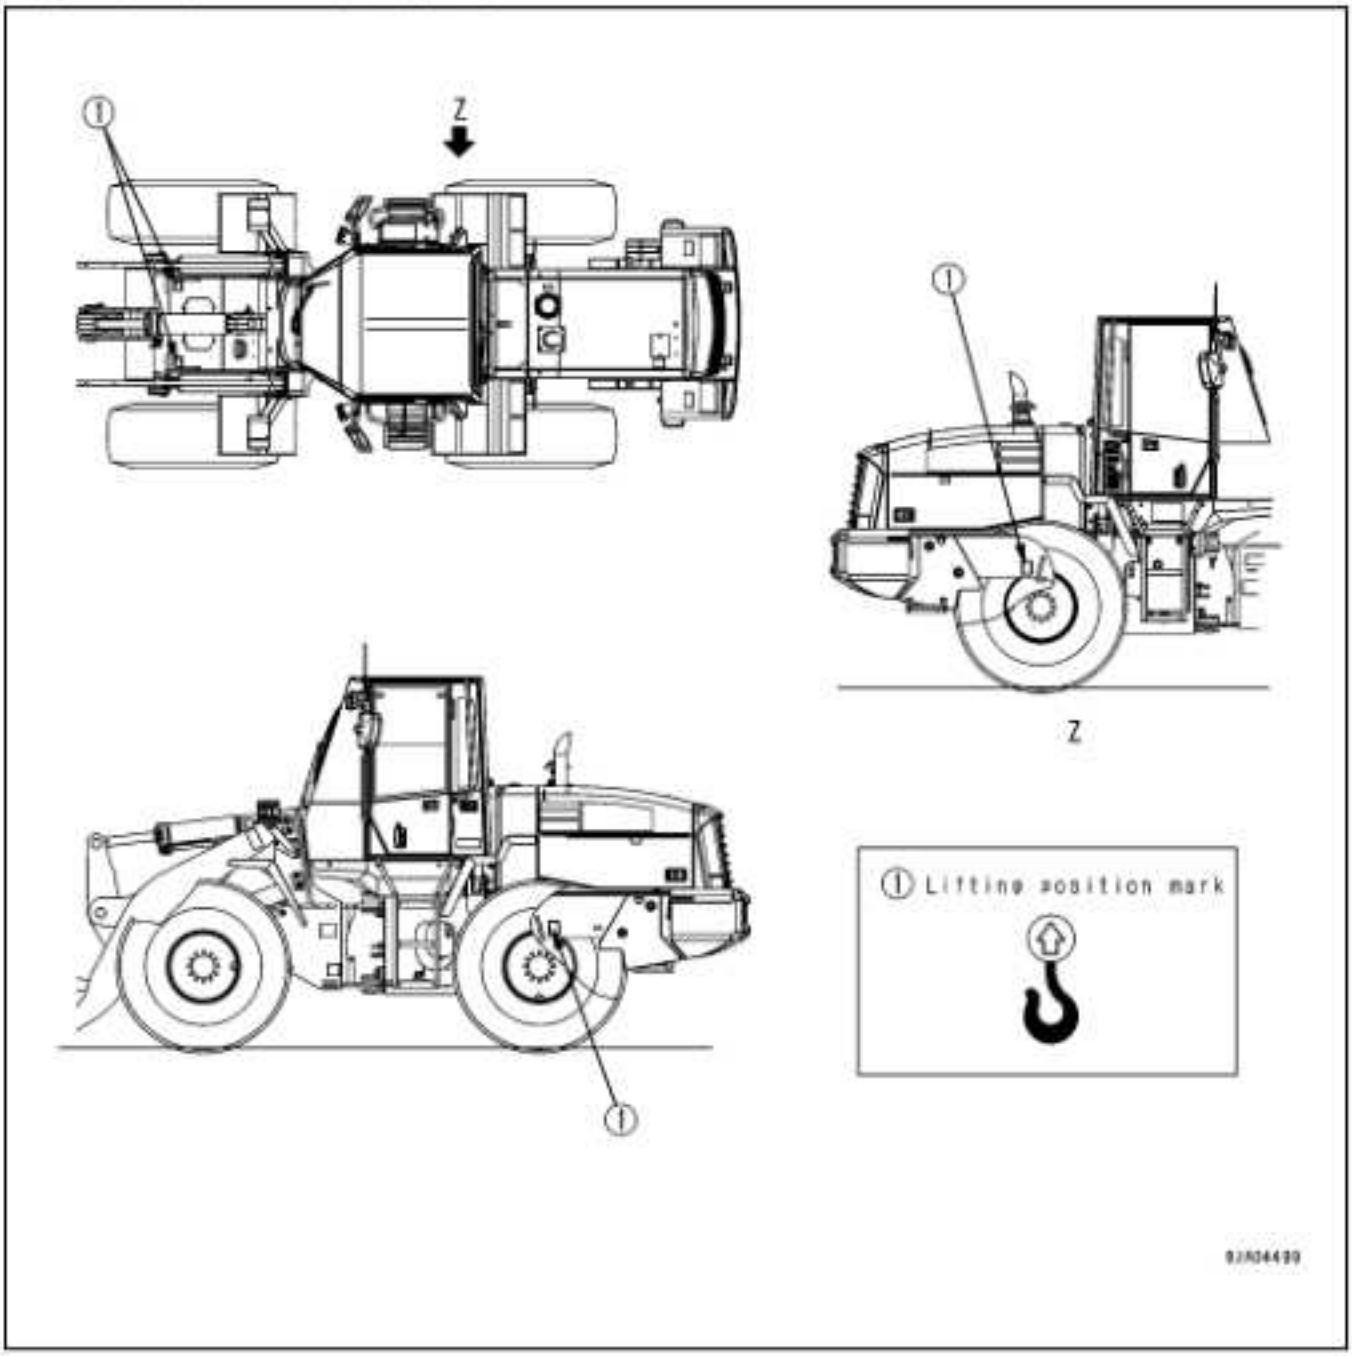

WEIGHT TABLE

	Machine Weight	Front Wheel Load	Center of Gravity
WA250PT-5	12,200 kg (26,901 lb)	5,350 kg (11,797 lb)	1,630 mm (64 in)

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

CLEAN ELEMENT IN AIR CONDITIONER RECIRCULATION FILTER	3-40
LUBRICATING	3-41
EVERY 500 HOURS SERVICE	
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE	3-42
REPLACE FUEL FILTER CARTRIDGE	3-43
EVERY 1000 HOURS SERVICE	
CHANGE OIL IN TRANSFER CASE	3-44
CLEAN TRANSFER CASE BREATHER	3-45
REPLACE HST OIL FILTER ELEMENT	3-46
LUBRICATING	3-47
CHECK TIGHTENING PARTS OF TURBOCHARGER	3-47
CHECK PLAY OF TURBOCHARGER ROTOR	3-47
CHECK FAN BELT TENSION, REPLACE	3-47
EVERY 2000 HOURS SERVICE	
CHANGE OIL IN HYDRAULIC TANK, REPLACE HYDRAULIC FILTER ELEMENT	3-48
REPLACE HYDRAULIC TANK BREATHER ELEMENT	3-49
CHANGE AXLE OIL (*)	3-50
REPLACE ELEMENT IN AIR CONDITIONER RECIRCULATION AIR FILTER, FRESH AIR FILTER	3-50
CHECK ALTERNATOR, STARTING MOTOR	3-50
CHECK ENGINE VALVE CLEARANCE, ADJUST	3-50
CHECK BRAKE DISC WEAR	3-51
CLEAN AND CHECK TURBOCHARGER	3-51
CHECK ACCUMULATOR GAS PRESSURE	3-51
CHECK VIBRATION DAMPER	3-51
CHECK VIBRATION DAMPER	3-51
*: The interval of 2000 hours for changing the axle oil is for standard operations. If the brake is used frequently or the brakes make noise, change the oil after a shorter interval.	
EVERY 4000 HOURS SERVICE	
LUBRICATING	3-52
CHECK WATER PUMP	3-52

MidWestTech | Komatsu WA250PT-5L Wheel Loader Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >