CEAM024000

Operation & Maintenance Manual

730E Trolley

DUMP TRUCK

SERIAL NUMBERS **A30600 - A30616**

KOMATSU®

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

INTRODUCTION **10-1**

FOREWORD 10-1
TRUCK MODEL ILLUSTRATION 10-2
ABOUT THIS MANUAL 10-3
ALERTS PAGE 10-4
TABLE OF CONTENTS 10-5

STANDARD CHARTS AND TABLES **12-1**

GENERAL SAFETY **20-1**

PERSONAL SAFETY 20-1
Safety Rules 20-1
Truck Safety Features 20-1
Clothing And Personal Items 20-1
Unauthorized Modification 20-1
Leaving The Operator's Seat 20-1
Mounting And Dismounting 20-1
Fire Extinguishers And First Aid Kits 20-2
Precautions For High Temperature Fluids 20-2
Asbestos Dust Hazard Prevention 20-2
Fire Prevention For Fuel And Oil 20-2
ROPS Precautions 20-3
Preventing Injury From Work Equipment 20-3
Precautions For Optional Attachments 20-3
Precautions When Starting The Machine 20-3
PRECAUTIONS FOR TRUCK OPERATION 20-4
Safety Is Thinking Ahead 20-4
Safety At The Work Site 20-4
Fire Prevention 20-4
Preparing For Operation 20-4
Ventilation For Enclosed Areas 20-4
Mirrors, Windows, And Lights 20-4
In The Operator's Cab - Before Starting The Engine 20-5
OPERATING THE MACHINE 20-5
Starting The Engine 20-5
Truck Operation - General 20-5
Traveling In The Truck 20-6
Precautions When Traveling In Reverse 20-6
Traveling On Slopes 20-6

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS (cont.)

Ensuring Good Visibility 20-7
Operating On Snow 20-7
Avoid Damage To The Dump Body 20-7
Driving Near High-Voltage Cables 20-7
When Loading The Truck 20-7
When Dumping 20-7
Working On Loose Ground 20-7
Parking The Machine 20-8
TOWING 20-8
WORKING NEAR BATTERIES 20-8
Battery Hazard Prevention 20-8
Jump-Starting With Booster Cables 20-9
Jump Starting With Receptacles 20-9
PRECAUTIONS FOR MAINTENANCE 20-10
BEFORE PERFORMING MAINTENANCE 20-10
Stopping The Engine Before Service 20-10
Warning Tag 20-10
Proper Tools 20-10
Securing The Dump Body 20-10
DURING MAINTENANCE 20-11
Personnel 20-11
Attachments 20-11
Working Under The Machine 20-11
Keeping The Machine Clean 20-11
Rules To Follow When Adding Fuel Or Oil 20-11
Radiator Coolant Level 20-11
Use Of Lighting 20-11
Precautions With The Battery 20-12
Handling High-Pressure Hoses 20-12
Precautions With High-Pressure Oil 20-12
Maintenance Near High Temperatures And High Pressures 20-12
Rotating Fan And Belts 20-12
Waste Materials 20-12
TIRES 20-13
Handling Tires 20-13
Tire Maintenance 20-14
Storing Tires After Removal 20-14
ADDITIONAL JOB SITE RULES 20-15
WHEN REPAIRS ARE NECESSARY 20-16

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS (cont.)

WARNINGS AND CAUTIONS **22-1**

OPERATING INSTRUCTIONS **30-1**

PREPARING FOR OPERATION 30-1
SAFETY IS THINKING AHEAD 30-1
WALK AROUND INSPECTION 30-1
ENGINE START-UP 30-5
AFTER ENGINE HAS STARTED 30-6
EMERGENCY STEERING SYSTEM 30-7
Operation 30-7
Pre-Operation Testing 30-7
Additional Guidelines 30-8
MACHINE OPERATION SAFETY PRECAUTIONS 30-8
LOADING 30-9
HAULING 30-9
PASSING 30-10
DUMPING 30-10
To Raise The Dump Body: 30-10
To Lower The Dump Body (When dumping over a berm or into a crusher): 30-11
To Lower The Dump Body (When dumping on flat ground): 30-11
SAFE PARKING PROCEDURES 30-12
ENGINE SHUTDOWN PROCEDURE 30-12
DELAYED ENGINE SHUTDOWN PROCEDURE 30-13
SUDDEN LOSS OF POWER 30-13
DISABLED TRUCK DUMPING PROCEDURE 30-14
Hookup 30-14
Raising the Body 30-14
Lowering the Body 30-14
TOWING 30-15
TROLLEY OPERATING INSTRUCTIONS 30-15
AFTER THE ENGINE HAS STARTED 30-15
OPERATING IN DIESEL MODE 30-16
OPERATING IN TROLLEY LINE MODE 30-16
GETTING ON LINE 30-17
Operating On Trolley 30-18
GETTING OFF LINE 30-20
LINE STATUS SIGNALS 30-20
LINE STATUS SIGNAL MARKINGS 30-21
TRAFFIC CONSIDERATION FOR TROLLEY LINE OPERATION 30-21
APPROACHING SLOW MOVING VEHICLES IN A TROLLEY ASSISTED TRUCK 30-21
OPERATING SLOW MOVING VEHICLES ON TROLLEY ASSIST RAMPS 30-22
TRUCK FAILURE WHILE ON TROLLEY 30-22

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

INSTRUMENT PANEL

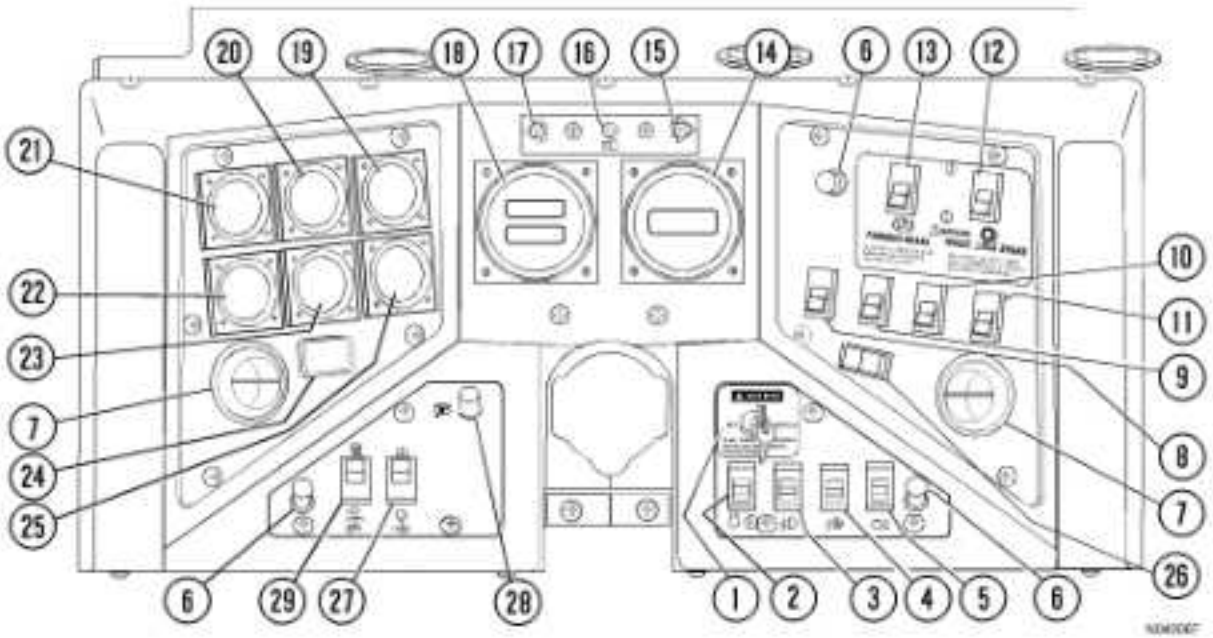


FIGURE 32-10. PANEL, GAUGES, INDICATORS, AND CONTROLS

1. Key Switch
2. Timer Delayed Engine Shutdown Switch
3. Fog Light Switch (Optional)
4. Ladder Light Switch
5. Backup Light Switch
6. Panel Illumination Lights
7. Vent(s) - Cab Air Conditioner/Heater
8. Engine Cold Weather Starting Aid Switch (Optional)
9. Rotating Beacon Light Switch (Optional)
10. Heated Mirror Switch (Optional)
11. Not Used
12. Wheel Brake Lock Switch
13. Parking Brake Switch
14. Digital Tachometer
15. Right Turn Signal Indicator Light
16. High Beam Headlight Indicator Light
17. Left Turn Signal Indicator Light
18. Digital Speedometer/Payload Meter Display
19. Voltmeter Gauge
20. Engine Oil Pressure Gauge
21. Engine Water Temperature Gauge
22. Fuel Gauge
23. Gauge - Not Used In This Application
24. Engine Hourmeter
25. Gauge - Not Used In This Application
26. Switch - Not Used In This Application
27. Headlight Switch
28. Panel Illumination Lights Dimmer Rheostat
29. Payload Meter Switch

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

50 HOUR LUBRICATION AND MAINTENANCE CHECKS

Truck Serial Number_____ **Site Unit Number**_____ **Date**_____
Hourmeter_____ **Name of Service Technician**_____

	TASK	COMMENTS	CHECKED	INITIALS
1.	FUEL FILTERS - Change the fuel filters, (fuel separators). Refer to engine manufacturer's maintenance manual for fuel filter replacement instructions.			
2.	HYDRAULIC SYSTEM FILTERS - Replace filter elements only, after the initial 50, 100, and 250 hours of operation; then at each 500 hours of operation thereafter.			
3.	FAN DRIVE ASSEMBLY - After the first 50 hours of operation (new truck or new fan installation), check the tightness of the fan mounting cap screws - **122 N·m (90 ft lbs).**			
4.	MOTORIZED WHEELS - Check oil level. Refer to Motorized Wheel Maintenance Schedule in Section P of the shop manual for the lubrication specifications and service intervals.			

Complete the 10 hour lube and maintenance checks.

100 HOUR LUBRICATION AND MAINTENANCE CHECKS

Truck Serial Number_____ **Site Unit Number**_____ **Date**_____
Hourmeter_____ **Name of Service Technician**_____

	TASK	COMMENTS	CHECKED	INITIALS
1.	HYDRAULIC SYSTEM FILTERS - Replace filter elements only, after the **initial** 100 and 250 hours of operation; then at each 500 hours of operation thereafter.			

Complete the 10 and 50 hour lubrication and maintenance checks.

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

MAJOR COMPONENT DESCRIPTION

The Komatsu model 730E standard dump truck is an electric drive, off-highway, rear dump truck with a gross vehicle weight of 324,319 kg (715,000 lbs) that is rated for a nominal payload of 185 t (203 tons). Some Trolley versions may have a higher GVW. Refer to the grade/speed chart in the operator's cab for the appropriate GVW.

ENGINE

The Komatsu 730E dump truck is powered by a Komatsu SSA16V159 engine rated at 2000 HP (1492 kW).

ALTERNATOR (GE GTA-22)

The diesel engine drives an alternator mounted in-line with the engine. The Alternating Current (AC) output of the alternator is rectified to Direct Current (DC) and sent to the DC drive wheel motors.

WHEEL MOTORS (GE 788)

The output of the alternator supplies electrical energy to the two wheel motors attached to the rear axle housing. The two wheel motors convert electrical energy back to mechanical energy through built-in gear trains within the wheel motor assembly. The direction of the wheel motors is controlled by a forward or reverse hand selector switch located on a console to the right side of the operator.

BLOWER

The blower supplies cooling air for the rectifiers, AC alternator, and to both wheel motors, where it is then exhausted to the atmosphere.

OPERATOR'S CAB

The operator's cab for the Komatsu 730E dump truck has been engineered for operator comfort and to allow for efficient and safe operation of the truck.

The cab provides for wide visibility, with an integral four-post Rollover Protective Structure/Falling Object Protective Structure (ROPS/FOPS), and an advanced analog operator environment. It includes a tinted safety-glass windshield and power-operated side windows, a deluxe interior with a fully adjustable seat with lumbar support, a fully adjustable/tilt steering wheel, controls mounted within easy reach of the operator, and an analog instrument panel which provides the operator with all instruments and gauges, which are necessary to control and/or monitor the truck's operating systems.

POWER STEERING

The Komatsu 730E dump truck is equipped with a full-time power steering system, which provides positive steering control with a minimum of effort by the operator. The system includes nitrogen-charged accumulators which automatically provide emergency power if the steering hydraulic pressure is reduced below an established minimum.

DYNAMIC RETARDING

Dynamic retarding is used to slow the truck during normal operation or control the speed coming down a grade. The dynamic retarding ability of the DC electric system is controlled by the operator through the activation of the retarder pedal in the operator's cab and by setting the RSC (Retarder Speed Control). Dynamic retarding is automatically activated if the truck goes to a preset overspeed setting.

BRAKE SYSTEM

The wheel service brakes are caliper/dry disc brakes applied by an all hydraulic actuation system. Depressing the brake pedal actuates wheel-speed single disc front brakes and armature-speed dual disc rear brakes. The rear brakes can also be activated by operating a switch on the instrument panel.

All wheel brakes will be applied automatically if the system pressure decreases below a preset minimum.

The parking brake is a caliper/disc type, mounted on each rear wheel motor, and is spring-applied and hydraulically-released with wheel speed application protection (will not apply with the truck moving.)

SUSPENSION

HydrairBll suspension cylinders, located at each wheel, provide a smooth and comfortable ride for the operator and dampens shock loads to the chassis during loading and operation.

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

PLM III SYSTEM CONFIGURATION


Starting Communications

The PDM software allows users to download and configure the system.



82941

Before connecting to the payload meter, select "Change Program Options" and confirm that the program has selected the correct laptop serial port. Most laptops use Comm 1 for serial communications. The units displayed for reports and graphs by the PC software can be set on this form. Click "Done" to return to the main menu.

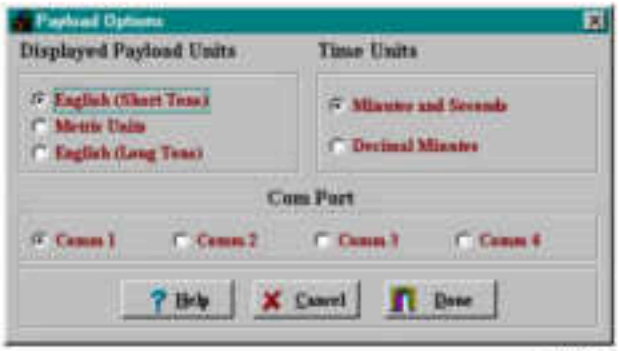

82940

From the main menu, click the "Connect to Payload Meter" button. The PC will try to connect to the payload meter and request basic information from the system. In the event of communications trouble, the PC will try 3 times to connect before "timing-out". This may take several seconds.

Displayed Payload Units

Three options are available for the display of units in the PC software, reports, and graphs:



82949

Short Tons: Payload is displayed in short tons, distances and speeds will be displayed in Miles

Metric Tons: Payload is displayed in metric tons, distances and speeds are displayed in Kilometers

Long Tons: Payload is displayed in long tons, distances and speeds are displayed in Miles

Time Units

Minutes and Seconds Example:
Five minutes and thirty-two seconds = 5:32

Decimal Minutes Example:
Five minutes and thirty-two seconds = 5.53

Connection Menu



The connection screen displays basic system information to the user.

- Frame S/N should agree with the truck serial number from the serial plate located on the truck frame.
- Truck Number is an ID number assigned to the truck by the mine.
- The Payload Meter Date / Time values come from the payload meter at the moment of connection.
- Number of Haul Cycle Records is the number of haul cycles records stored in memory and available for download.
- Number of Active Alarms shows how many alarms are currently active in the system at the time of connection. If there are active alarms, the "Display Active Alarms" button is available.
- Number of Inactive Alarms shows how many alarms have been recorded in memory and are available for download.
- PLM Software Version displays the current version of software in the payload meter.

The information on the connection menu comes from the configuration of the payload system on the truck.

MidWestTech | Komatsu 730E Trolley Dump Truck Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >