CEAM031502

Operation & Maintenance Manual

930E-4SE

DUMP TRUCK

SERIAL NUMBERS 930E-4SE A31937 and up

ENGINE 18V170

April 2017

KOMATSU®

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

INTRODUCTION
FOREWORD 1-2
ABOUT THIS MANUAL 1-3
WARNINGS 1-4
California Proposition 65 Warnings 1-4
ALERTS 1-5
TRUCK MODEL ILLUSTRATION 1-6
NON-OEM PARTS IN CRITICAL SYSTEMS 1-7
STANDARD CHARTS AND TABLES
GENERAL INFORMATION 2-2
Effect Of Special Lubricants 2-2
Suggested Sources For Rust Preventive Grease 2-2
STANDARD TIGHTENING TORQUES 2-3
Class 10.9 Capscrews And Class 10 Nuts 2-3
SAE Grade 5 And Grade 8 Capscrews 2-4
SAE Grade 9 Capscrews 2-5
T-Bolt Clamps 2-5
Split Flange Clamps 2-6
Flared Tube And Hose Fittings 2-6
JIC 37° Swivel Nuts 2-7
Pipe Thread Fittings 2-8
O-Ring Boss Fittings 2-9
O-Ring Face Seal Fittings 2-10
CONVERSION MULTIPLIERS 2-11
Metric To English 2-11
English To Metric 2-12
Temperature Conversions 2-13
GENERAL SAFETY
GENERAL SAFETY 3-2
Safety Rules 3-2
Truck Safety Features 3-2
Clothing And Personal Items 3-2
Unauthorized Modification 3-2
Leaving The Operator's Seat 3-2
Mounting And Dismounting 3-2
Fire Extinguishers And First Aid Kits 3-3
Precautions For High Temperature Fluids 3-3
Asbestos Dust Hazard Prevention 3-3
Fire Prevention 3-3
ROPS Precautions 3-3
Preventing Injury From Work Equipment 3-4
Precautions For Optional Attachments 3-4
Precautions When Starting The Machine 3-4
PRECAUTIONS FOR TRUCK OPERATION 3-5
Safety Is Thinking Ahead 3-5
Safety At The Worksite 3-5
Preparing For Operation 3-5
Ventilation For Enclosed Areas 3-5
Mirrors, Windows, And Lights 3-5
Before Starting The Engine 3-5
Seat Belts And Tethers 3-5
Emergency Egress Ladders 3-6
OPERATING THE MACHINE 3-7
General Information 3-7

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >


Starting The Engine 3-7
Traveling In The Machine 3-7
Traveling In Reverse 3-8
Traveling On Slopes 3-8
Traveling On Snow 3-8
Traveling Near High Voltage Cables 3-8
Traveling On Loose Ground 3-8
Ensuring Good Visibility 3-8
Avoid Damage To The Dump Body 3-8
Safe Parking Of The Machine 3-9
Loading The Machine 3-9
Dumping The Machine 3-9
Towing The Machine 3-9
EXTERIOR LIGHTING 3-10
Fog Lights 3-10
Headlights 3-10
Mirror Mounted Backup Lights 3-10
Deck Mounted Flood Lights and Ladder Lights 3-10
Brake Lights 3-11
Retard Lights 3-11
Clearance/Turn Signal Lights 3-11
Backup Lights 3-11
Retard Lights 3-11
Brake Lights 3-12
Backup Alarm 3-12
Backup Lamp 3-12
PRECAUTIONS FOR MAINTENANCE 3-13
BEFORE PERFORMING MAINTENANCE 3-13
Electrical System Isolation 3-13
Securing The Dump Body 3-14
Jack Point Locations 3-15
DURING MAINTENANCE 3-16
Warning Tag 3-16
Proper Tools 3-16
Attachments 3-16
Working Under The Machine 3-16
Keeping The Machine Clean 3-16
Adding Fuel Or Oil To The Machine 3-16
Radiator Coolant Level 3-17
Use Of Lighting 3-17
Handling High Pressure Hoses 3-17
Precautions With High Pressure Oil 3-17
Maintenance Near High Temperatures And High Pressures 3-17
Rotating Fan And Belts 3-17
Waste Materials 3-17
Use Of Tie-Off Anchor During Maintenance 3-17
Handling Tires 3-18
Tire Maintenance 3-18
Storing Tires After Removal 3-18
Battery Hazard Prevention 3-19
Jump Starting With Jumper Cables 3-19
Jump Starting With Receptacles 3-20
WHEN REPAIRS ARE NECESSARY 3-21
Observe The Following Precautions 3-21

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

SPECIAL PRECAUTIONS 3-22
Preliminary Procedures Before Welding Or Performing Maintenance 3-22
Engine Shutdown Procedure Before Welding or Performing Maintenance 3-22
Before Welding On The Machine, Obey The Following Guidelines: 3-22
Discharging Control Cabinet Capacitors 3-23
WARNING AND CAUTIONS
GENERAL INFORMATION 4-2
PIN PLATE 4-2
GRADE SPEED CHART 4-3
MACHINE SAFETY 4-3
KEY SWITCH 4-5
OIL FILL AND CHECK 4-5
HIGH PRESSURES 4-6
BATTERY AND ISOLATION BOX 4-9
HIGH VOLTAGE 4-12
WELDING 4-15
LIFTING POINTS 4-16
EMERGENCY DUMPING 4-17
AUTOMATIC LUBRICATION FILL 4-18
ROPS/FOPS 4-18
TOWING 4-18
LUBRICATION CHART 4-19
OPERATING INSTRUCTIONS
PREPARING FOR OPERATION 5-2
Safety Is Thinking Ahead 5-2
Walk Around Inspection 5-2
RETRACTABLE LADDER SYSTEM (If Equipped) 5-7
General Information 5-7
Ladder System Description 5-7
Ladder System Operation 5-7
In-Cab Control Panel 5-8
Ground Level Control Box 5-10
Emergency Down Valve 5-11
PRE-SHIFT BRAKE TEST 5-12
Operation 5-12
Service Brake Test 5-13
Parking Brake Test 5-13
Retard System Test 5-14
Brake Test Exit Criteria 5-14
TRUCK OPERATION 5-15
ENGINE START-UP SAFETY 5-15
After Engine Has Started 5-15
MACHINE OPERATION SAFETY PRECAUTIONS 5-16
Machine Operation On The Haul Road 5-17
Starting On A Grade With A Loaded Truck 5-17
Retarding On A Grade 5-17
Passing 5-18
Loading 5-18
Overload Speed Limit Function 5-18
Dumping 5-19
Lowering The Dump Body (When Dumping On Flat Ground) 5-20
Lowering The Dump Body (When Dumping Over A Berm Or Into A Crusher) 5-21
SUDDEN LOSS OF ENGINE POWER OR LOSS OF DRIVE SYSTEM FUNCTION 5-21
EMERGENCY STEERING SYSTEM 5-22

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

Monitor Panel

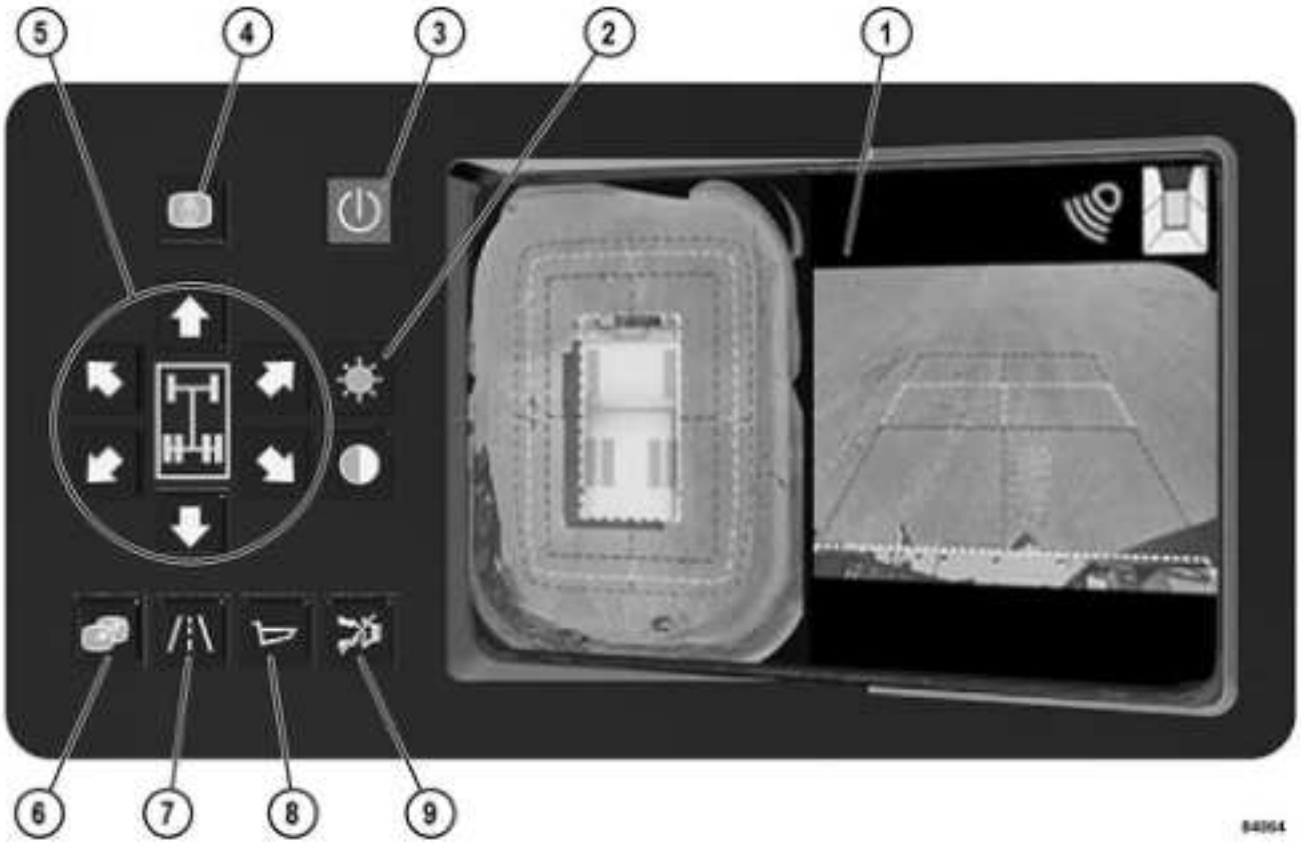

1. Monitor Display
2. Brightness Switches
3. System Power Status Indicator
4. Force Display Switch
5. Camera Switches
6. Monitor Display Mode Switch
7. Reference Line Display Switch
8. Lower Body Display Switch
9. Object Clear Switch

Figure 5-12 MONITOR PANEL

Brightness Switches

Pressing this switch makes the monitor display lighter.



Pressing this switch makes the monitor display darker.



The level of brightness that is selected at the time of system shutdown will remain the same at the time of the next system startup. The operator should adjust the level of brightness as needed at the beginning of operation.

System Power Status Indicator

System ON — Green light is on.

System warming up — Green light is blinking.

System OFF — Green light is off.




Force Display Switch

Pressing this switch disables the non-display mode of the monitor display when the truck is traveling at 15 kph (9 mph).



Camera Switches

Pressing any of these switches will change the camera view on the monitor display to the selected camera.

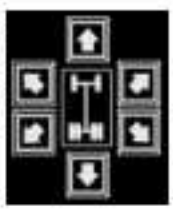

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

EVERY 10 HOUR (DAILY) MAINTENANCE	
Item	**Task**
AUTOMATIC LUBE SYSTEM	• Check the grease reservoir; fill as required. (Lube Key "D"). • When filling the reservoir, check the grease filter indicator. Clean or replace the grease filter if the indicator detects a problem. • Inspect the system and check for proper operation. Ensure the following important areas are receiving grease. (Lube Key "D"). • Steering Linkage • Final Drive Pivot Pin • Rear Suspension Pin Joints - Upper & Lower • Body Hinge Pins - Both Sides • Hoist Cylinders Pins - Upper & Lower • Anti-sway Bar - Both Ends
PRE-SHIFT BRAKE TEST	• See PRE-SHIFT BRAKE TEST, page 5-12 to perform the pre-shift brake test.
WHEELS AND TIRES	• Inspect tires for proper inflation and wear. • Check for embedded debris in tread and remove. • Inspect for damaged, loose, or missing wheel mounting nuts and studs.
WASHER FLUID	Check the level of washer fluid in the bottle behind the cab. Fill as needed.
FUEL TANK	• Check the quick fill fuel receivers for excessive wear, leaks and mud buildup. • Check the vent on the back of the fuel tank at the bottom for mud buildup or any other obstructions. Clean if necessary. See EVERY 1000 HOURS LUBRICATION AND MAINTENANCE, page 7-19 for cleaning instructions.
TERMINALS AND WIRES	Check for wire cuts, short-circuits, or loose terminals. Fix anything that is wrong immediately.

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

MAJOR COMPONENT DESCRIPTION C.3-0000051647

Truck and Engine A.2-0000061081

The 930E-4SE dump truck is an off-highway, rear dump truck with AC electric drive. The gross vehicle weight is 505 611 kg (1,114,670 lbs). The engine is a Komatsu SSDA18V170 rated at 2 611 kW (3,500 HP).

Traction Alternator D.18-0000051645

The diesel engine drives an in-line alternator at engine speed. The alternator produces AC current which is rectified to DC within the main control cabinet.

Cooling air for the control / power group and wheel motors, as well as the alternator itself, is provided by a fan mounted on the alternator shaft.

Main Control Cabinet A.2-0000060880

Each phase module contains paired positive and negative semiconductor switches referred to as insulated gate bipolar transistors (IGBT). The IGBTs cycle on and off at varying frequencies to create an AC power signal from the DC supply.

The AC power signal produced by each inverter is a variable-voltage, variable-frequency (VVVF) signal. Frequency and voltage are changed to suit the operating conditions.

AC Induction Traction Motorized Wheels C.3-0000051644

The alternator output supplies electrical energy to the two wheel motors attached to the rear axle housing. The motorized wheels use three-phase AC induction motors with full-wave AC power.

The two wheel motors convert electrical energy back to mechanical energy through built-in gear trains within the wheel motor assembly. The direction of the wheel motors is controlled by a forward or reverse hand selector switch located on the center console.

Suspension D.3-0000051643

Hydrair II® suspension cylinders located at each wheel provide a smooth and comfortable ride for the operator and dampens shock loads to the chassis during loading and operation.

Operator's Cab D.27-0000051642

The operator cab has been engineered for operator comfort and to allow for efficient and safe operation of the truck. The cab provides wide visibility, with an integral 4-post ROPS/FOPS structure, and an advanced analog operator environment. It includes a tinted safety-glass windshield and power-operated side windows, a deluxe interior with a fully adjustable seat with lumbar support, a fully adjustable tilt/telescope steering wheel, controls mounted within easy reach of the operator, and a digital/analog instrument panel which provides the operator with all instruments and gauges which are necessary to control and/or monitor the truck's operating systems.

Power Steering D.1-0000051641

The truck is equipped with a full time power steering system which provides positive steering control with minimum operator effort. The system includes nitrogen-charged accumulators which automatically provide emergency power if the steering hydraulic pressure is reduced below an established minimum.

Dynamic Retarding Grid E.26-0000051640

The dynamic retarding grid is used to slow the truck during normal operation or control speed coming down a grade. The dynamic retarding ability of the electric system is controlled by the operator through the activation of the retarder pedal (or by operating a lever on the steering column) in the operator's cab and by setting the speed control. Dynamic Retarding is automatically activated if the truck speed goes to a preset overspeed setting.

Brake System B.15-0000060879

Service brakes at each wheel are oil-cooled multiple disc brakes applied by an all-hydraulic actuation system. Depressing the brake pedal actuates both front and rear brakes after first applying the retarder. All wheel brakes will be applied automatically if the brake system pressure decreases below a preset minimum.

The parking brake is a dry disc type, mounted inboard on each rear wheel motor, and is spring-applied and hydraulically-released with wheel speed application protection (will not apply with truck moving).

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

NOTE: *Some of the configuration parameters require a password to change. The password for all parameters except the Payload Gain is "**Kac2300**". This is case sensitive. The password for the payload gain, which is a critical setting, is not included in this document.*


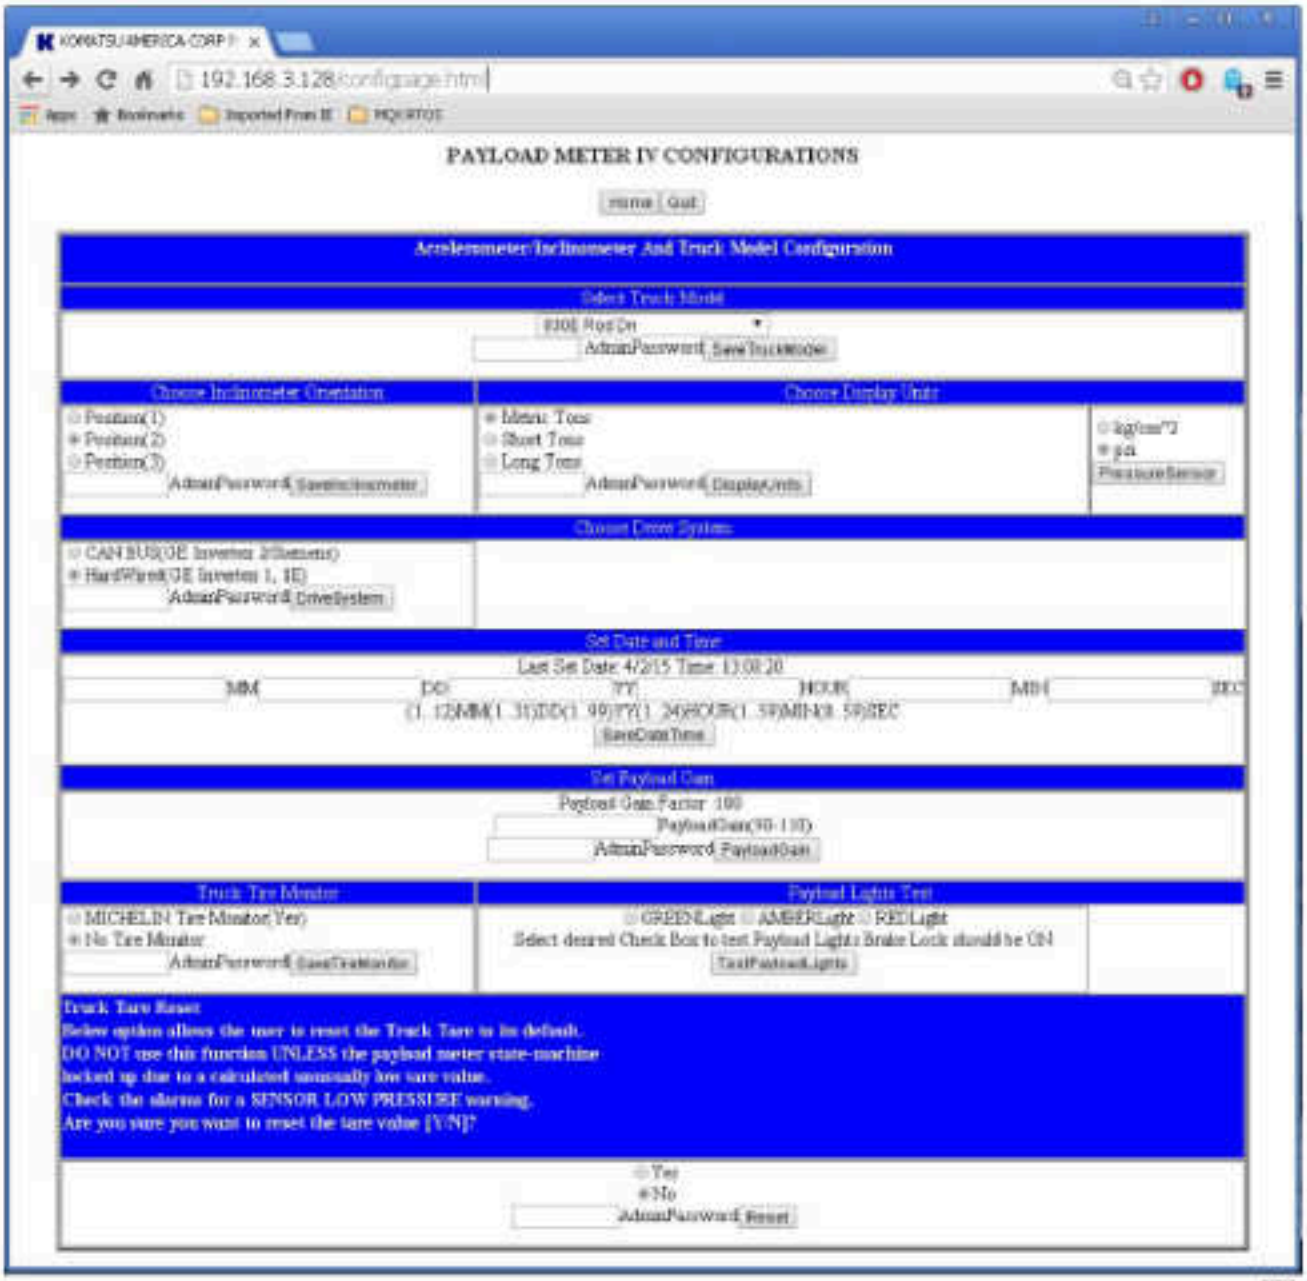


Figure 5-36 PAYLOAD METER IV CONFIGURATIONS

There are ten configuration parameters on this page. Below is a description of each.

- Truck Model
- PLM IV Mounting Orientation
- Gauge Display Units
- Pressure Sensor Units (for RTD web page only)
- Date and Time
- Payload Gain Factor
- Payload Light Test
- Truck Tare Reset

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

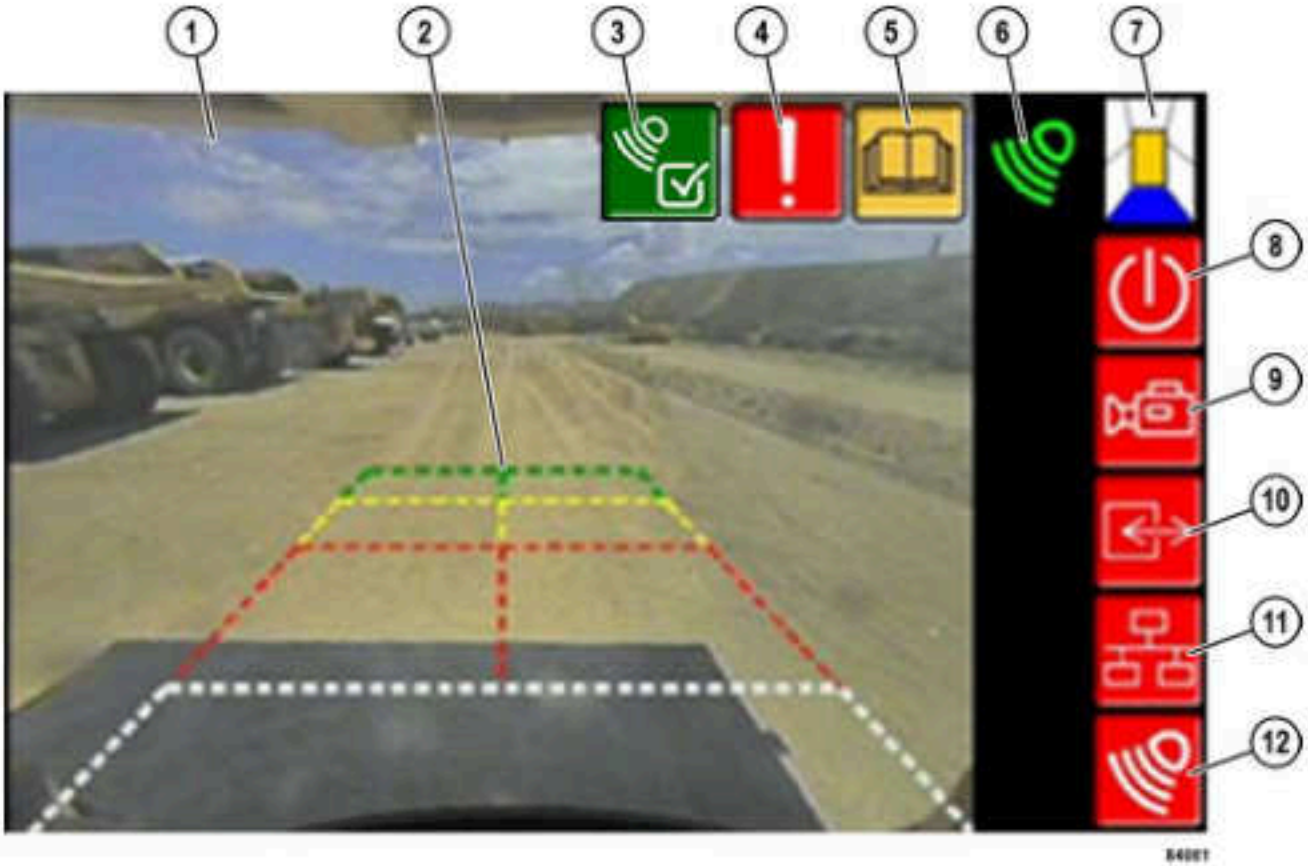

1. Camera Display
2. Reference Lines
3. Radar Startup Inspection Mode Indicator
4. Fault Indicator
5. Read Manual Indicator
6. Radar System On/Off Indicator
7. Bird's Eye Camera Indicator
8. System Error Indicator
9. Camera Error Indicator
10. Input/Output Error Indicator
11. Communication Error Indicator
12. Radar Error Indicator

Figure 5-13 MONITOR DISPLAY — SINGLE DISPLAY MODE

MidWestTech | Komatsu 930E-4SE Dump Truck Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >