CEBM016602

Shop Manual

KOMATSU®

WB156-5

BACKHOE LOADER

SERIAL NUMBERS **WB156-5** **A63001** and UP

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

June 2010
Printed in USA

Copyright 2010 Komatsu
DataKom Publishing Division

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM016602 Order the manual at mid-west-tech.com >

The affected pages are indicated by using the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action
❍	New page to be added	Add
●	Page to be replaced	Replace
⟨ ⟩	Page to be deleted	Discard

Mark	Page	Rev
●	00-1	②
●	00-2	②
●	00-2-1	②
●	00-2-2	②
●	00-2-3	②
●	00-2-4	②
●	00-2-5	②
●	00-2-6	②
●	00-3	②
●	00-4	②
●	00-5	②
●	00-6	②
●	00-7	②
●	00-8	②
●	00-9	②
●	00-10	②
●	00-11	②
●	00-12	②
●	00-13	②
●	00-14	②
●	00-15	②
●	00-16	②
●	00-17	②
●	00-18	②
●	00-19	②
●	00-20	②
●	00-21	②
●	00-22	②
❍	00-23	②

Mark	Page	Rev
❍	00-24	②
●	01-1	②
●	01-2	②
●	01-3	②
●	01-4	②
●	01-5	②
●	01-6	②
❍	01-7	②
❍	01-8	②
❍	01-9	②
❍	01-10	②
❍	01-11	②
❍	01-12	②
❍	01-13	②
❍	01-14	②
❍	01-15	②
❍	01-16	②
●	10-1	②
●	10-2	②
●	10-3	②
●	10-4	②
●	10-5	②
●	10-6	②
●	10-7	②
●	10-8	②
●	10-9	②
●	10-10	②

Mark	Page	Rev
●	10-11	②
●	10-12	②
●	10-13	②
●	10-14	②
●	10-15	②
●	10-16	②
●	10-17	②
●	10-18	②
●	10-19	②
●	10-20	②
●	10-21	②
●	10-22	②
●	10-23	②
●	10-24	②
●	10-25	②
●	10-26	②
●	10-27	②
●	10-28	②
●	10-29	②
●	10-30	②
●	10-31	②
●	10-32	②
●	10-33	②
●	10-34	②
●	10-35	②
●	10-36	②
●	10-37	②
●	10-38	②
●	10-39	②

Mark	Page	Rev
●	10-40	②
●	10-41	①
●	10-42	②
●	10-43	①
●	10-44	②
●	10-45	①
●	10-46	②
●	10-47	①
●	10-48	②
●	10-49	①
●	10-50	②
●	10-51	①
●	10-52	②
●	10-53	①
●	10-54	②
●	10-55	①
●	10-56	②
●	10-57	①
●	10-58	②
●	10-59	①
●	10-60	②
●	10-61	①
●	10-62	②
●	10-63	①
●	10-64	②
●	10-65	①
●	10-66	②
●	10-67	①
●	10-68	②

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM01... Order the manual at mid-west-tech.com >

Mark	Page	Rev
●	10-69	②
●	10-70	②
●	10-71	②
●	10-72	②
●	10-73	②
●	10-74	②
●	10-75	②
●	10-76	②
●	10-77	②
●	10-78	②
●	10-79	②
●	10-80	②
●	10-81	②
●	10-82	②
●	10-83	②
●	10-84	②
●	10-85	②
●	10-86	②
❍	10-87	②
❍	10-88	②
●	20-1	②
●	20-2	②
●	20-3	②
●	20-4	②
●	20-5	②
●	20-6	②
●	20-7	②
●	20-8	②
●	20-9	②
●	20-10	②
●	20-11	②
●	20-12	②

Mark	Page	Rev
●	20-13	②
●	20-14	②
●	20-15	②
●	20-16	②
●	20-17	②
●	20-18	②
●	20-19	②
●	20-20	②
●	20-21	②
●	20-22	②
●	20-23	②
●	20-24	②
●	20-25	②
●	20-26	②
●	20-27	②
●	20-28	②
●	20-29	②
●	20-30	②
●	20-31	②
●	20-32	②
●	20-33	②
●	20-34	②
●	20-35	②
●	20-36	②
●	20-37	②
●	20-38	②
●	20-39	②
●	20-40	②
●	20-41	②
●	20-42	②
●	20-43	②
●	20-44	②
●	20-45	②

Mark	Page	Rev
●	20-46	②
●	20-47	②
●	20-48	②
●	20-49	②
●	20-50	②
●	20-51	②
●	20-52	②
●	20-53	②
●	20-54	②
●	20-55	②
●	20-56	②
●	20-57	②
●	20-58	②
●	20-59	②
●	20-60	②
❍	20-61	②
❍	20-62	②
●	30-1	②
●	30-2	②
●	30-3	②
●	30-4	②
●	30-5	②
●	30-6	②
●	30-7	②
●	30-8	②
●	30-9	②
●	30-10	②
●	30-11	②
●	30-12	②
●	30-13	②
●	30-14	②
●	30-15	②

Mark	Page	Rev
●	30-16	②
●	30-17	②
●	30-18	②
●	30-19	②
●	30-20	②
●	30-21	②
●	30-22	②
●	30-23	②
●	30-24	②
●	30-25	②
●	30-26	②
●	30-27	②
●	30-28	②
●	30-29	②
●	30-30	②
●	30-31	②
●	30-32	②
●	30-33	②
●	30-34	②
●	30-35	②
●	30-36	②
●	30-37	②
●	30-38	②
●	30-39	②
●	30-40	②
●	30-41	②
●	30-42	②
●	30-43	②
●	30-44	②
●	30-45	②
●	30-46	②
●	30-47	②
●	30-48	②

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM01... Order the manual at mid-west-tech.com >

Mark	Page	Rev
●	30-49	②
●	30-50	②
●	30-51	②
●	30-52	②
●	30-53	②
●	30-54	②
●	30-55	②
●	30-56	②
●	30-57	②
●	30-58	②
●	30-59	②
●	30-60	②
●	30-61	②
●	30-62	②
●	30-63	②
●	30-64	②
●	30-65	②
●	30-66	②
●	30-67	②
●	30-68	②
●	30-69	②
●	30-70	②
●	30-71	②
●	30-72	②
●	30-73	②
●	30-74	②
●	30-75	②
●	30-76	②
●	30-77	②
●	30-78	②
●	30-79	②
●	30-80	②
●	30-81	②

Mark	Page	Rev
●	30-82	②
●	30-83	②
●	30-84	②
●	30-85	②
●	30-86	②
●	30-87	②
●	30-88	②
●	30-89	②
●	30-90	②
●	30-91	②
●	30-92	②
●	30-93	②
●	30-94	②
●	30-95	②
●	30-96	②
●	30-97	②
●	30-98	②
●	30-99	②
●	30-100	②
●	30-101	②
●	30-102	②
●	30-103	②
●	30-104	②
●	30-105	②
●	30-106	②
●	30-107	②
●	30-108	②
●	30-109	②
●	30-110	②
●	30-111	②
●	30-112	②
●	30-113	②
●	30-114	②

Mark	Page	Rev
●	30-115	②
●	30-116	②
●	30-117	②
●	30-118	②
●	30-119	②
●	30-120	②
●	30-121	②
●	30-122	②
●	30-123	②
●	30-124	②
●	30-125	②
●	30-126	②
●	30-127	②
●	30-128	②
●	30-129	②
●	30-130	②
●	30-131	②
●	30-132	②
●	30-133	②
●	30-134	②
●	30-135	②
●	30-136	②
●	30-137	②
●	30-138	②
●	30-139	②
●	30-140	②
●	30-141	②
●	30-142	②
●	30-143	②
●	30-144	②
●	30-145	②
●	30-146	②
●	30-147	②

Mark	Page	Rev
●	30-148	②
●	30-149	②
●	30-150	②
●	30-151	②
●	30-152	②
●	30-153	②
●	30-154	②
●	30-155	②
●	30-156	②
●	30-157	②
●	30-158	②
●	30-159	②
●	30-160	②
●	30-161	②
●	30-162	②
●	30-163	②
●	30-164	②
●	30-165	②
●	30-166	②
●	30-167	②
●	30-168	②
●	30-169	②
●	30-170	②
●	30-171	②
●	30-172	②
●	30-173	②
●	30-174	②
●	30-175	②
●	30-176	②
●	30-177	②
●	30-178	②
●	30-179	②
●	30-180	②


MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM01...

Order the manual at mid-west-tech.com >

SPECIFICATION DRAWING

SPECIFICATIONS

MACHINE DIMENSIONS AND WEIGHTS

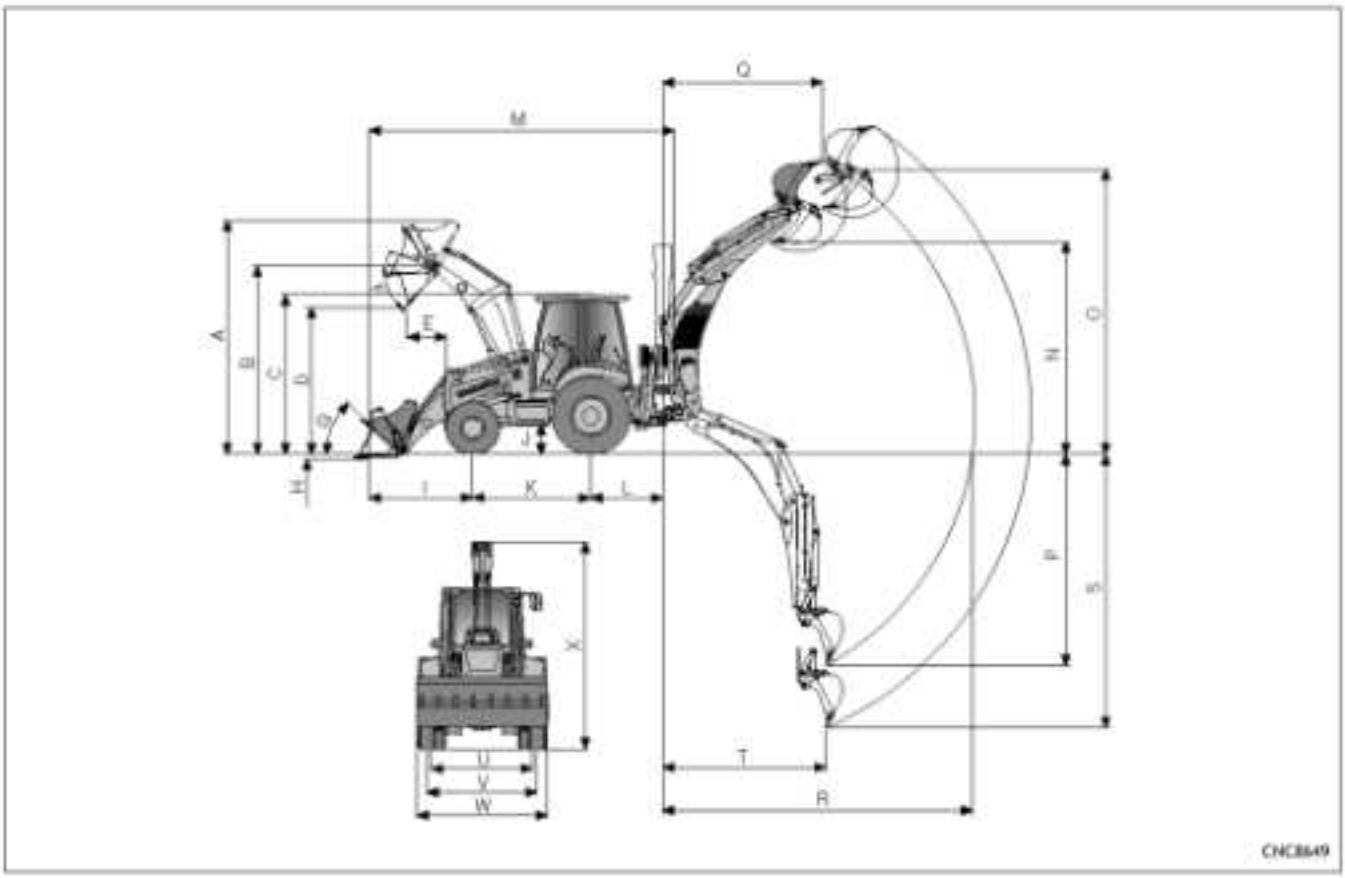


A	Maximum height	4230 mm (13'11")	O	Maximum digging height	5525 mm (18'2")
B	Hinge pin height	3367 mm (11'1")		-with telescopic arm	6136 mm (20'2")
C	Overall height, ROPS Cab	2935 mm (9'8")	P	Digging depth (2' level bottom)	4670 mm (15'4")
D	Maximum dumping height	2622 mm (8'7")		-with telescopic arm	5916 mm (19'5")
E	Reach at maximum height and 45° dump angle	750 mm (2'5")	Q	Reach at maximum height	3046 mm (10'0")
				-with telescopic arm	4239 mm (13'11")
F	Dumping angle	45°	R	Maximum reach from swing center	6034 mm (19'10")
G	Rollback angle	45°		-with telescopic arm	7164 mm (23'6")
H	Digging depth	138 mm (5'4")	S	Maximum digging depth	4725 mm (15'6")
I	Bucket reach (transport)	2023 mm (6'8")		-with telescopic arm	5970 mm (19'7")
J	Ground clearance	430 mm (1'5")	T	Digging reach	2320 mm (7'7")
K	Wheel base	2175 mm (7'2")	U	Rear tread	1800 mm (5'11")
L	Backhoe swing center distance	1175 mm (3'10")	V	Front tread	1874 mm (6'2")
M	Transport length	7504 mm (24'7")	W	Overall width (with bucket)	2356 mm (7'9")
N	Dumping height (SAE)	3761 mm (12'4")	X	Backhoe transport height	3676 mm (12'1")
	-arm retracted	3747 mm (12'4")		-with telescopic arm	3746 mm (12'4")
	-arm extended	4435 mm (14'7")			

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM01... Order the manual at mid-west-tech.com >

Full Lever, Actuator → Neutral

- When lever ① is moved fully to the left, valves ② are fully rotated.
- Port **P1** is then connected directly to delivery duct **A** whereas port **P2** is connected to tank circuit only, and the spool of the control valve performs its full travel.

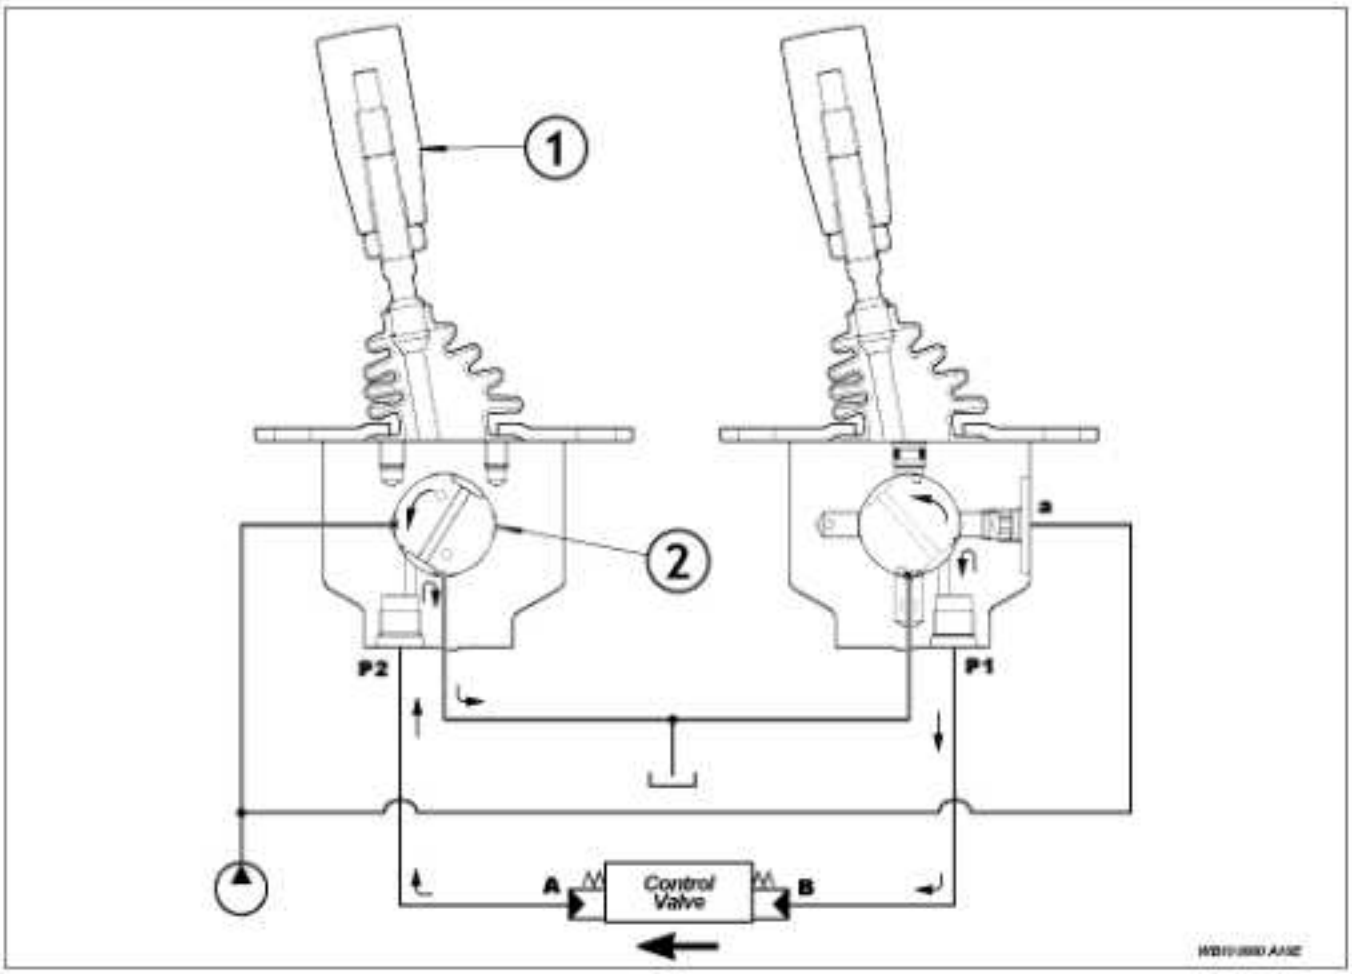

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM01...
Order the manual at mid-west-tech.com >

REAR AXLE

Wheel vibration; front tire resistance; half shaft breakage.	
CAUSES	**REMEDY**
Incorrect installation	Correct installation.
Defective axle	Replace the differential in case it does not survive any of the test phases.
Overloading/incorrect weight distribution	Remove excessive weight and redistribute load following instructions related to the vehicle.
Different rotation radius of the tires	Replace the tire or adjust pressure to have the same radius on both tires.
Bent half shaft	Replace half shaft.

Steering is difficult; vehicle goes straight while trying to turn it.	
CAUSES	**REMEDY**
Incorrect installation	Correct installation.
Defective axle	Replace the differential in case it does not survive any of the test phases.
Overloading/incorrect weight distribution	Remove excessive weight and redistribute load following instructions related to the vehicle.
Different rotation radius of the tires	Replace the tire or adjust pressure to have the same radius on both tires.
Broken half shaft	Replace half shaft.

No differential action; jamming while steering.	
CAUSES	**REMEDY**
Incorrect installation	Correct installation.
Defective axle	Replace the differential in case it does not survive any of the test phases.
Broken half shaft	Replace half shaft.
Bent half shaft	Replace half shaft.

Excess noise	
CAUSES	**REMEDY**
Incorrect installation	Correct installation.
Defective axle	Replace the differential in case it does not survive any of the test phases.
Overloading/incorrect weight distribution	Remove excessive weight and redistribute load following instructions related to the vehicle.
Different rotation radius of the tires	Replace the tire or adjust pressure to have the same radius on both tires.
Bent or broken half shaft	Replace half shaft.
Incorrect wheel adjustment	Verify group integrity and wheel side bearings.
Contamination in the axle box or incorrect assembly of parts	Look for foreign particles. Check for proper assembly of the various parts of the axle.

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM01... Order the manual at mid-west-tech.com >

LEGEND FOR WIRING SCHEMATIC

ITEM	DESCRIPTION
A6	Machine Function Unit
B13	Return To Dig Sensor
B59	Brake Oil Low Level Switch
B97	Rear Horn Switch
B105	Transmission Oil Temperature Sender
B111	Fuel Level Sender
B112	Thermistor
B113	Air Filter Switch
B115	Engine Oil Pressure Switch
B121	Horn
E136	Right Rear Wok Light
E138	Left Rear Work Light
E143	Right Front Wok Light
E146	Left Front Work Light
E147	Left Indicator
E148	Beacon Lamp
E151	Right Indicator
E152	Cab Light
E154	Rear Left Light
E155	Left Indicator Light
E155	Right Indicator Light
E156	Rear Right Light
E400	Right Front Work Light
E401	Left Front Work Light
E402	Left Rear Work Light
E403	Right Rear Work Light
F1	Front Work Light 15A Fuse
F2	Rear Work Light 15A Fuse
F3	Right Position Light 3a Fuse
F4	Left Position Light 3a Fuse
F5	Horn 10A Fuse
F6	Rear Work Light 15A Fuse
F7	Front Window Washer 7.5A Fuse
F8	Stop Light Switch 7.5A Fuse
F9	Front Work Light 15A Fuse
F10	Front Wiper 10A Fuse
F11	Optional 7.5A Fuse
F12	Instruments And Buzzer 5A Fuse
F13	Lever Grip 10A Fuse
F14	Light And Optional Switch 10A Fuse
F15	Safety Starter 10A Fuse
F16	Beacon Light 10A Fuse
F17	Warning Switch 10A Fuse
F18	Cab Light And Cigar Lighter 10A Fuse

ITEM	DESCRIPTION
F19	Low Beam Light 15A Fuse
F20	Main Beam Light 15A Fuse
F21	Return To Dig Sensor 10A Fuse
F22	EC Power 7.5A Fuse
F23	Steering Unit 10A Fuse
F24	Flasher 7.5A Fuse
F25	Reverse Buzzer Switch 10A Fuse
F27	General 175A Fuse
G1	Battery
G118	Starter Motor
G119	Alternator
H17	Buzzer
K1	Starter Lock Out Unit
K2	Flasher
K3	Low Beam Light Relay
K4	Main Beam Light Relay
K5	Front Horn Relay
K6	Return To Dig Solenoid Relay
K7	Stop Light Relay
K8	Starter Relay
K9	Forward Speed Relay
K10	Reverse Speed Relay
K11	Declutch Relay
K45	Reheating Relay
K56	Safety Start Relay
K61	Services Relay
K111	
M42	Rear Window Wiper
M55	Window Washer Pump
M58	Front Window Wiper
M116	AC Compressor Clutch
P43	Instrument Panel
P63	Front Control Panel
R114	Preheater
S2	EC Power Switch Solenoid Valve
S3	MP Bucket Close Switch
S4	Declutch Switch
S5	MP Bucket Open Switch
S6	Differential Locking Switch

ITEM	DESCRIPTION
S24	Starting Switch
S40	Seat Switch
S41	Rear Horn Switch
S46	Parking Brake Switch
S53	Stop Light Switch
S54	Stop 4WD Switch
S57	Steering Column Gear Shift
S60	Steering Column Light Switch
S80	Ride Control Switch
S81	Boom Unlock Switch
S83	EC Power Switch
S84	EMPI Solenoid Valve Switch
S85	Rear Horn Switch
S86	General Light Switch
S87	4WD Switch
S88	PPC Switch
S89	Warning Switch
S97	Rear Horn Switch
S104	4th Speed Switch
S107	Declutch Switch
S167	Beacon Light Switch
S168	Front Working Light Switch
S169	Rear Working Light Switch
X1.s	Unit Connector
X2.s	Unit Connector
X3.s	Unit Connector
X4.s	Unit Connector
X5.s	Unit Connector
X7.p	Motor Harness Connector
X7.s	Driver Site Harness Connector
X8.p	Gear Harness Connector
X8.s	Driver Site Harness Connector
X9.p	Front Dashboard Harness Connector
X9.s	Driver Site Harness Connector
X10.p	Front Dashboard Harness Connector
X10.s	Driver Site Harness Connector
X11.p	Solenoid Valve Harness Connector
X11.s	Driver Site Harness Connector
X12.p	Chassis Harness Connector
X12.s	Driver Site Harness Connector
X15.p	Optional Harness Connector
X25.p	Switch Panel Harness Connector
X25.s	Driver Site Harness Connector
X26.p	Switch Panel Harness Connector
X26.s	Driver Site Harness Connector

ITEM	DESCRIPTION
X27.s	AC Harness Connector
X28.s	Heater Connector
X44.p	Cab Harness Connector
X44.s	Driver Site Harness Connector
X65.p	Motor Harness Connector
X128.s	Driver Site Harness Connector
X140	Cab Harness Connector
X142	Cab Harness Connector
X166.p	Switch Harness Connector
X166.s	Cab Harness Connector
X177.s	Work Light Harness Connector
X30	Cigar Lighter
Y48	Float Solenoid
Y49	Return To Dig Solenoid
Y60	EMPI Solenoid
Y90	Rear PPC Solenoid
Y91	EC Power Solenoid
Y92	Back Up Alarm
Y93	PPC Solenoid
Y94	Differential Lock Solenoid
Y95	Boom Unlock Solenoid
Y96	Solenoid
Y98	MP Bucket Close Solenoid
Y99	MP Bucket Open Solenoid
Y106	4WD Solenoid
Y108	Forward Speed Solenoid

ITEM	DESCRIPTION

MidWestTech | Komatsu WB156-5 Backhoe Loader Service Manual | Publication CEBM016602 Order the manual at mid-west-tech.com >