CEBM022205

Shop Manual

930E-4

DUMP TRUCK

SERIAL NUMBERS **A30796 - A30989**

Tier II

KOMATSU®

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT . . . . . SECTION

GENERAL INFORMATION . . . . . A

STRUCTURES . . . . . B

ENGINE C

ELECTRICAL SYSTEM (24VDC NON-PROPULSION) . . . . . D

ELECTRIC PROPULSION SYSTEM . . . . . E

REAR AXLE, SPINDLES AND WHEELS . . . . . G

HYDRAIR® II SUSPENSIONS . . . . . H

BRAKE CIRCUIT . . . . . J

HYDRAULIC SYSTEM L

OPTIONS AND SPECIAL TOOLS . . . . . M

OPERATOR CAB AND CONTROLS . . . . . N

LUBRICATION AND SERVICE . . . . . P

ALPHABETICAL INDEX . . . . . Q

SYSTEM SCHEMATICS . . . . . R

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >

SECTION A
GENERAL INFORMATION
INDEX

MAJOR COMPONENTS & SPECIFICATIONS A2

SAFETY AND OPERATING INSTRUCTIONS A3

WARNINGS AND CAUTIONS. A4

TORQUE TABLES AND CONVERSION CHARTS A5

STORAGE AND IDLE MACHINE PREPARATION A7

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >

Fault Code A007: Right rear suspension pressure sensor signal is high


Operator Action	None
Fault Code	A007
Description	Right rear suspension pressure sensor signal is high.
Fault Conditions	Sets if pressure signal is out of range high (sensor current over 22 ma). Resets if reading returns to normal.
Operator Alerting System Response	PLM Display: ------
Resulting Problem(s)	Bad payload computation.
Related Information	

Table

1. This fault is generated by PLM in response to a problem in the sensor circuit. This sensor circuit may have a related fault that can be used to resolve the problem. Refer to the Troubleshooting Instructions for the active parameter fault(s).
2. If there are no active parameter fault codes, then, based on the truck's setup while this fault is active, determine which of the parameters in the Table is not shown in its expected state on the IM Realtime Data Monitor program. Refer to the schematic to identify which item(s) may be causing the parameter(s) to be in the unexpected state. Troubleshoot these items.
3. If this fault is not currently active or if no parameters are currently in the unexpected state and the malfunction is still unresolved, then check each of the parameters in the Table for proper functionality. Troubleshoot all item(s) related to the parameter(s) which are found to be malfunctioning.

Parameter	Expected State and/or Related Fault(s)
Right Rear Pressure Sensor (PLM3 36,40)	Sensor current > 22 ma: failed high Sensor current < 2 ma: failed low Sensor current > 2 ma but less than 22 ma: valid readings Fault(s): A008

Related circuit diagram

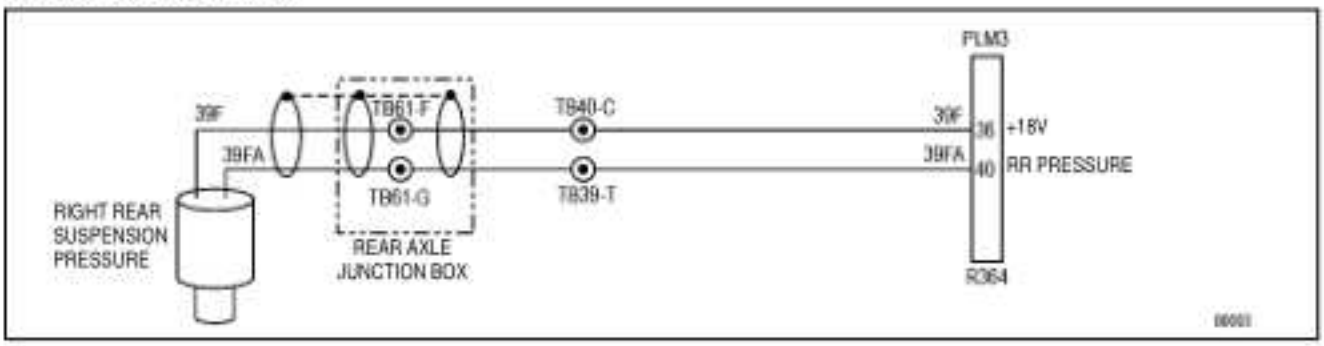

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >

Fault Code A358: Overload on output 1P

Operator Action	Go to shop now
Fault Code	A358
Description	Overload on output 1P.
Fault Conditions	Sets if driver chip detects overcurrent or over temp on output 1P. Output is turned off when overload is detected. Resets at power down.
Operator Alerting System Response	Amber "IM Maintenance" Lamp No Buzzer Right Lamp Module Row 5, Column 3
Resulting Problem(s)	Normal steering bleeddown after shutdown will not occur.
Related Information	A laptop running "IM Realtime Data Monitor" software may be required to resolve this fault.

Table

1. This fault's logic contains just one parameter, which may have additional fault code(s). This fault may be resolved by resolving the parameter(s) active fault code(s). Refer to the Troubleshooting Instructions for the active parameter fault(s).
2. If there are no active parameter fault codes, then based on the truck's setup while this fault is active, determine which of the parameters in the Table is not shown in its expected state on the IM Realtime Data Monitor program. Refer to the schematic to identify which item(s) may be causing the parameter(s) to be in the unexpected state. Troubleshoot these items.
3. If this fault is not currently active or if no parameters are currently in the unexpected state and the malfunction is still unresolved, then check each of the parameters in the Table for proper functionality. Troubleshoot all item(s) related to the parameter(s) which are found to be malfunctioning.

Parameter	Expected State and/or Related Fault(s)
Steering Bleed Valve (IM1 P)	Status - Open Load: Expected with key switch on. No problem. Otherwise, unexpected. Must troubleshoot. Status - Normal: Expected only with key off and steering bleed in process. Troubleshoot if found with key on. Status - Shorted to Ground: Unexpected. Troubleshoot. Status - Overload: Unexpected. Troubleshoot. 0: steering bleed valve is off. This is expected in normal running operation. 1: steering bleed valve is on. This is expected after key off initiates steering bleed operation. Fault(s): A235, A236, A253, A262, A263
IM Maintenance Lamp (IM1 X)	Status - Open Load: Unexpected. Troubleshoot Status - Normal: Expected Status - Shorted to Ground: Unexpected. Troubleshoot Status - Overload: Unexpected. Troubleshoot. 0: Lamp Off (IM output at B+) 1: Lamp On (IM output at ground) Fault(s): A363

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >

7. Close any bleed valves that are open.
8. Attach the charging valve adapter to the accumulator gas valve. Make sure that the hose does not loop or twist. Tighten the swivel nut to **14 - 20 N·m (10 - 15 in lb)**.
9. Turn the "T" handle clockwise to open the accumulator gas valve. Do not turn the "T" handle all the way down as it will damage the valve core.
10. Set the regulator for 172 kPa (25 psi), then slightly open the nitrogen container and slowly fill the accumulator. The proper fill rate for these 10 gallon accumulators is approximately three minutes.

⚠CAUTION

If the precharge is not added slowly, the bladder may suffer permanent damage. A "starburst" rupture in the lower end of the bladder is a characteristic failure caused by charging too quickly.

11. When 172 kPa (25 psi) of precharge pressure is obtained, close the nitrogen valve. Set the regulator for the operating precharge pressure based on the current ambient temperature. Refer to Table 1. Then, open the nitrogen container and fill the accumulator.
12. Let the precharge set for 15 minutes. This will allow the gas temperature to stabilize. If the desired precharge is exceeded, close the nitrogen container valve and slowly open the bleed valve until the correct precharge pressure is obtained. Refer to Table 1.

⚠CAUTION

Do not reduce the precharge by depressing the valve core with a foreign object. High pressure may rupture the rubber valve seat.

13. Hold the gas valve stationary and loosen the swivel nut to remove the assembly. Use a common leak reactant to check for nitrogen leaks.
14. Install the gas valve cap finger-tight. The gas valve cap serves as a secondary seal.

Temperature variation can affect the precharge pressure of an accumulator. As the temperature increases, the precharge pressure increases. Conversely, decreasing temperature will decrease the precharge pressure. In order to ensure the accuracy of the accumulator precharge pressure, the temperature variation must be accounted for.

A temperature variation factor is determined by the ambient temperature when charging the accumulator on a truck that has been shut down for one hour. Refer to Table 1 for charging pressures in different ambient operating conditions that the truck is currently exposed to during the charging procedure.

For example, assuming that the ambient temperature is 10°C (50°F), charge the accumulator to 9 294 kPa (1,348 psi).


TABLE 1. Relationship Between Charging Pressure and Ambient Temperature

Ambient Temperature	Charging Pressure ± 70 kPa (10 psi)
-23°C (-10°F) and below	8 232 kPa (1194 psi)
-17°C (0°F)	8 412 kPa (1220 psi)
-12°C (10°F)	8 584 kPa (1245 psi)
-7°C (20°F)	8 763 kPa (1271 psi)
-1°C (30°F)	8 943 kPa (1297 psi)
4°C (40°F)	9 122 kPa (1323 psi)
10°C (50°F)	9 294 kPa (1348 psi)
16°C (60°F)	9 473 kPa (1374 psi)
21°C (70°F)	9 653 kPa (1400 psi)
27°C (80°F)	9 832 kPa (1426 psi)
32°C (90°F)	10 011 kPa (1452 psi)
38°C (100°F)	10 184 kPa (1477 psi)
43°C (110°F)	10 363 kPa (1503 psi)
49°C (120°F)	10 542 kPa (1529 psi)


NOTE: A precharge pressure below 8232 kPa (1194 psi) is not recommended because of low precharge pressure warnings. The low accumulator precharge warning switch activates at 7584 ± 310 kPa (1100 ± 45 psi).

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >


4. Confirm the proper communications port for the programming laptop. This is usually COM 1. Press "NEXT".

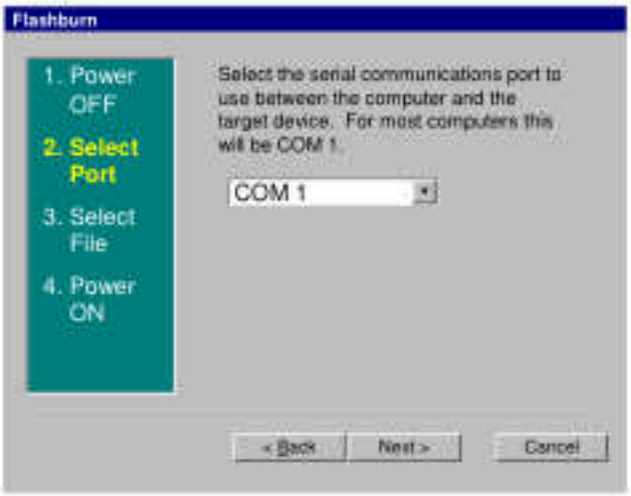

5. Press "BROWSE" and select the ".kms" file to program into the payload meter. Press "NEXT".

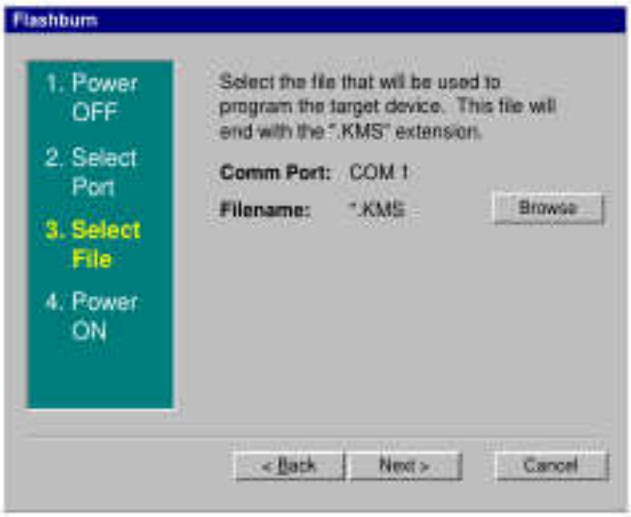

6. When instructed, turn the key switch ON in order to power-up the payload meter. The PC will begin to reprogram the payload meter. This process takes approximately 5 minutes.

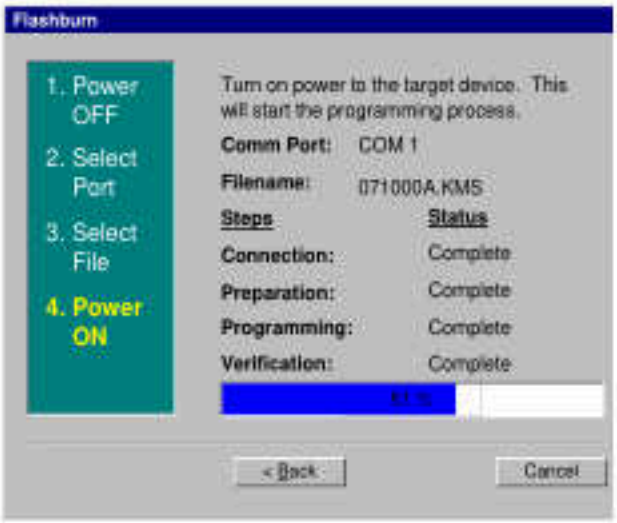

7. After successful programming, turn the key witch OFF.
8. Wait 20 seconds and turn the key switch ON.
9. The payload meter will need to be configured as instructed in the manual using the Payload Data Manager software on the laptop computer.

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >

A/C DRIVE BELT CHECKOUT PROCEDURE

This procedure must be performed each time any component in the accessory drive is serviced, such as replacing a belt or removing the compressor. In addition, a 250 hour inspection of the AC drive belt is mandatory. The belts must be inspected for indications of wear and damage that may hinder performance. Replace as necessary and perform the following procedure.

Pulley Alignment

1. Install alignment tool (EL8868) onto the pulleys to check the alignment. Refer to Figure 4-15. If misalignment of the pulleys exceeds 3 mm (0.13 in.), the position of the compressor must be adjusted.

Belt Tension Check

NOTE: This procedure has been written for use with belt tension tool (XA3379), shown in Figure 4-13. Other tension tools may differ in functionality.



FIGURE 4-13. BELT TENSION TOOL - XA3379

2. Refer to Figure 4-16 for the proper distance from the centerline of the drive pulley to the centerline of the compressor pulley. Set the tension tool accordingly on the "deflection" scale by moving the deflection O-ring to the corresponding distance on the scale.
3. Slide the O-ring for the "force" scale to zero.



FIGURE 4-14. DEFLECTION MEASUREMENT

4. Find the approximate center of the belt between the two pulleys. Place the tip of the tool onto the outer face of the belt and apply pressure, as shown in Figure 4-14. The tool must be perpendicular to the belt. Push on the tool until the bottom edge of the deflection scale O-ring is even with the outer face of the adjacent drive belt. If only one belt is used, rest a straight edge across both pulleys to serve as the indicating plane.
5. The O-ring on the force scale indicates the force used to deflect the belt. The belt must deflect 5.3 mm (0.21 in.) under a force of 1.6 ± 0.1 kgf (3.44 ± 0.11 lbf). If not, adjust the belt accordingly and recheck the tension.

MidWestTech | Komatsu 930E -4 Tier II Dump Truck Service Manual | Publication CEBM02... Order the manual at mid-west-tech.com >

COMPONENT	SHEET
AID MODULE	11,12,13
ALTERNATOR, BATTERY CHARGING	26
ALTERNATOR, PROPULSION	16
BATTERY, ENGINE CRANKING	9
BATTERIES, START	26,33
CB 13 - CLEARANCE LIGHTS (RB1)	10,22
CB 14 - TURN SIGNAL FLASHER	10,22
CB 15 - TAIL LIGHTS (RB1)	10,22
CB 16 - RETARD LIGHTS (RB3)	10,19
CB 17 - MANUAL BACK-UP LTS (RB3)	10,19
CB 18 - STOP LIGHTS (RB3)	10,12
CB 19 - BACKUP LTS & HORN (RB3)	10,19
CB 20 - PARK BRAKE FAILURE (RB4)	10,27
CB 21 - SERV. LTS, HORN BTN. (RB4)	10,18
CB 22 - ENGINE CONTROL POWER (RB4)	10,27
CB 23 - HDLIGHTS LFT LO BEAM (RB5)	10,23
CB 24 - HDLIGHTS RT LO BEAM (RB5)	10,23
CB 25 - HDLIGHTS LFT HI BEAM (RB5)	10,23
CB 26 - HDLIGHTS RT HI BEAM (RB5)	10,23
CB 27 - HDLIGHTS & DASH LTS (RB5)	10,23
CB 60 - 12V POWER	26,33
CB 61 -	33
CB 62 -	33
CONVERTER, 24VDC TO 12VDC	10,21,26
DIODE BOARD 1 (DB1)	7,11,12, 15,20,27
DIODES, STARTER ISOLATOR (SID-1)	26,33
D.I.D. PANEL	9,29
ENGINE ECU - FAN CLUTCH SIGNAL	17
ENGINE ECU - CUMMINS	7
ENGINE INTERFACE MODULE	7
FUEL TANK	32
FUSE 300A, PRE LUBE PUMP	26
FUSE-FB1-1 15A, A/C HTR BLOW MOTOR	10
FUSE-FB1-2 10A, WINDSHLD WASH/WIPE	10
FUSE-FB1-3 5A, FUEL, TEMP GA. VOLTM	10
FUSE-FB1-4 10A, CAB KEY POWER	10
FUSE-FB1-5 10A, HOIST SOLENOID	10
FUSE-FB1-6 15A, TURN/CLEAR LIGHTS	10
FUSE-FB1-7 10A, ENGINE OPTIONS	10
FUSE-FB1-8 10A, AID & INDIC. LTS	10
FUSE-FB1-9 10A, ENG START FAIL.	10
FUSE-FB1-10 10A, ENG. SHUTTERS	10
FUSE-FB1-11 10A, DOME LIGHT SW.	10
FUSE-FB1-13 10A, RADIO RELAY	10,21,26
FUSE-FB1-17 15A, GROUND LEVEL PWR	10,25
FUSE-FB1-18 5A, PLM III POWER	10,28
FUSE-FB1-19 5A, PLM III POWER	10,28
FUSE-FB2-1 15A, SERVICE LIGHTS	10
FUSE-FB2-2 15A, DOME,FOG,LADDER LTS	10
FUSE-FB2-3 15A, HAZARD LIGHTS	10
FUSE-FB2-4 10A, INTERFACE MODULE	10,32
FUSE-FB2-5 10A, ORBCOM/VHMS POWER	10
FUSE-FB2-6 20A, M M HUB POWER	10,29
FUSE-FB2-7 10A, DISPLAY MODULE	10
FUSE-FB2-8 15A, HID HEADLIGHTS	10,16
FUSE-FB2-9 15A, OIL RESERVE PUMP	10
FUSE-FB2-10 15A, RESERVE CTRL MODULE	10
FUSE-FB2-11 20A, BLEEDDOWN PWR SUPPLY	10
FUSE-FB2-12 10A, ENG LOAD CNTRL PWR	10
FUSE-FB2-13 10A, KEYSWITCH POWER	8,10,25
FUSE-FB2-17 20A, ENGINE ECM POWER	10
FUSE-FB2-18 20A, ENGINE ECM POWER	10
FUSE-FB2-19 20A, ENGINE ECM POWER	10
FUSE-FB2-20 20A, ENGINE ECM POWER	10
FUSE-FB3-1 15A, CAB DRIVE SYS. PWR	10
FUSE-FB3-2 10A, AUTO LUBE TIMER	10,15
FUSE-FB3-3 15A, GE PWR INTERFACE MOD	10,32
FUSE-FB3-4 20A, OP-CAB SEAT POWER	10
FUSE-FB3-13 10A, L. FRT WHEEL SPS	9,10
FUSE-FB3-14 10A, R. FRT WHEEL SPS	9,10
FUSE-FB3-17 10A, 12V POWER PLUGS	10,21
FUSE-FB3-18 20A, R.H. WINDOW	10,21
FUSE-FB3-19 20A, L.H. WINDOW	10,21
FUSE-FB4-1 10A, BRAKE CIRCUITS	10,32
FUSE-FB4-2 5A, PLM III	10
FUSE-FB4-3 5A, INTERFACE MODULE	10,32
FUSE-FB4-4 10A, VHMS MODULE	10
FUSE-FB4-5 5A, M M HUB POWER	10,29
FUSE-FB4-6 5A, DISP MODULE	10
FUSE-FB4-7 15A, BLEEDDOWN POWER	10
FUSE-FB4-8 10A, LIGHTED SW POWER	10
FUSE-FB4-9 10A, DIRECT SEL. SW.	10,32
FUSE-FB4-17 5A, GAUGE VOLTAGE	10
FUSE-FB4-18 5A, PEDAL VOLTAGE	10
FUSE-FB4-19 5A, ENGINE INTERFACE	10

COMPONENT	SHEET
GAUGE, BRAKE HYD. TEMPERATURE	32
GAUGE, FUEL	16,32
GAUGE, HOURMETER	16
GAUGE, OIL PRESSURE	16
GAUGE, WATER TEMPERATURE	16
GOIC- OPERATOR DISPLAY	29
HEATER A/C SYSTEM	17
HORN BUTTON	18
HORN, FORWARD #1	18
HORN, LEFT REAR BACKUP	19
HORN, RIGHT REAR BACKUP	19
INCLINOMETER	28
INDICATOR, BATT. CHG. SYS. FAILURE	32
INDICATOR, BODY UP	12
INDICATOR, BRAKE HYD. TEMP. HIGH	32
INDICATOR, CHECK ENGINE	12
INDICATOR, CIRCUIT BREAKER TRIPPED	11
INDICATOR, DYNAMIC RETARD	12
INDICATOR, ELECTRIC SYS FAULT	11
INDICATOR, ENGINE STOP	12
INDICATOR, HYDRAULIC OIL FILTER	32
INDICATOR, IM WARNING	32
INDICATOR, LINCOLN LUBE LOW PRESSURE	15
INDICATOR, LOW ACCUM PRECHARGE	11
INDICATOR, LOW BRAKE PRESSURE	11
INDICATOR, LOW FUEL	16,32
INDICATOR, LOW HYDRAULIC TK LEVEL	11
INDICATOR, LOW STEERING PRESSURE	11
INDICATOR, MANUAL BACK UP LIGHTS	13
INDICATOR, PARK BRAKE	32
INDICATOR, PROPUL. SYS AT REST	14
INDICATOR, PROPUL. SYS CAUTION	13
INDICATOR, PROPUL. SYS NO PROPEL	13
INDICATOR, PROPUL. SYS NO PROP/RET	13
INDICATOR, PROPUL. SYS NOT READY	14
INDICATOR, PROPUL. SYS REDUCED LVL	14
INDICATOR, PROPUL. SYS TEMP CAUTION	13
INDICATOR, RETARD AT REDUCED LEVEL	14
INDICATOR, RETARD SPEED CONTROL	13
INDICATOR, SERVICE BRAKE	12
INDICATOR, STARTER FAILURE	32
INDICATOR, TIMED ENGINE SHUTDOWN	25
INTERFACE MODULE	25,29,32
LIGHT, AIR RESTRICTION GAUGE	24
LIGHT, BRAKE HYD. TEMP. GAUGE	24
LIGHT, CAB DOME	23
LIGHT, DIGITAL TACHOMETER	24
LIGHT, DOME 1-5	10,15
LIGHT, DYNAMIC RETARD (OPT)	19
LIGHT, ENGINE MAINTENANCE	24
LIGHT, FUEL GAUGE	24
LIGHT, HIGH BEAM INDICATING	23
LIGHT, INTERFACE MODULE DOWNLOADING	24
LIGHT, LEFT DECK	19
LIGHT, LEFT DECK BACK UP	19
LIGHT, LEFT DIAGONAL LADDER	19
LIGHT, LEFT ENGINE SERVICE #1	18
LIGHT, LEFT ENGINE SERVICE #2	18
LIGHT, LEFT FRONT FOG	23
LIGHT, LEFT FRONT TURN/CLEARANCE	22
LIGHT, LEFT HIGH BEAM	23
LIGHT, LEFT HI-MTD HIGH BEAM	23
LIGHT, LEFT HI-MTD LOW BEAM	23
LIGHT, LEFT HYDRAULIC CABINET	18
LIGHT, LEFT LOW BEAM	23
LIGHT, LEFT REAR BACK UP	19
LIGHT, LEFT REAR FOG	23
LIGHT, LEFT REAR RETARD	19
LIGHT, LEFT REAR TURN/CLEARANCE	22
LIGHT, LEFT TAIL/STOP	12
LIGHT, LEFT TURN INDICATING	22
LIGHT, LINK ENERGIZED	24
LIGHT, OIL PRESSURE GAUGE	24
LIGHT, RIGHT DECK (OPT)	19
LIGHT, RIGHT DECK BACK UP	19
LIGHT, RIGHT DIAGONAL LADDER (OPT)	19
LIGHT, RIGHT ENGINE SERVICE #1	18
LIGHT, RIGHT ENGINE SERVICE #2	18
LIGHT, RIGHT FRONT FOG	23
LIGHT, RIGHT FRONT TURN/CLEAR	22
LIGHT, RIGHT HIGH BEAM	23
LIGHT, RIGHT HI-MTD HIGH BEAM	23
LIGHT, RIGHT HI-MTD LOW BEAM	23
LIGHT, RIGHT HYDRAULIC CABINET	18
LIGHT, RIGHT LOW BEAM	23
LIGHT, RIGHT REAR BACK UP	19

COMPONENT	SHEET
LIGHT, RIGHT FOG REAR (OPT)	23
LIGHT, RIGHT REAR RETARD	19
LIGHT, RIGHT REAR TURN/CLEARANCE	22
LIGHT, RIGHT TAIL/STOP	12
LIGHT, RIGHT TURN INDICATING	22
LIGHT, ROTATING BEACON (OPT)	16
LIGHT, SERVICE BRAKE (CAB ROOF)	12
LIGHT, WATER TEMPERATURE GAUGE	24
LIGHTS, LEFT DECK PAYLOAD	28
LIGHTS, RIGHT DECK PAYLOAD	28
MIRROR, HEATED LEFT FLAT (OPT)	16
MIRROR, HEATED RIGHT CONCAVE (OPT)	16
MODULAR MINING COMMUNICATION PORT	9,28,29
MODULAR MINING HUB	29
MOTOR, LEFT WINDOW	21
MOTOR, RIGHT WINDOW	21
MOTOR, STARTER #1	26
MOTOR, STARTER #2	26
MOTOR, WINDSHIELD WIPER	31
ORBCOM MODULE	29
PAYLOAD METER 3 CONTROL MODULE	10,28,29
PEDAL, ACCELERATOR	20
PEDAL, RETARD	20
POTENTIOMETER, RETARD SPEED	20
POWER PLUGS, 12V	21
PROBE, ALTERNATOR ANB. TEMP.	9,20
PUMP, RESERVE OIL CIRCULATING (OPT)	30
PUMP, PRE-LUBE HI FLOW	26
PUMP, WINDSHIELD WASHER	31
RADIO	21
RB1 K1 RELAY (LEFT TURN SIGNAL)	22
RB1 K2 RELAY (RIGHT TURN SIGNAL)	22
RB1 K3 RELAY (CLEARANCE LIGHT)	22
RB1 K4 RELAY (FLASHER)	22
RB3 K1 RELAY (MANUAL BACKUP LTS)	19
RB3 K2 RELAY (STOP LIGHT)	12
RB3 K3 RELAY (RETARD LIGHT)	19
RB4 K1 RELAY (PARK BRAKE STATUS)	27
RB4 K2 RELAY (CRANK INTERLOCK)	26
RB4 K3 RELAY (HORN)	18
RB4 K4 RELAY (BODY UP INVERT)	12,28
RB5 K1 RELAY (LEFT LOW BEAM HOLT)	23
RB5 K2 RELAY (RIGHT LOW BEAM HOLT)	23
RB5 K3 RELAY (LFT HI BEAM HOLT)	23
RB5 K4 RELAY (RIGHT HI BEAM HOLT)	23
RB6 K1 RELAY (BACK UP HORN)	19
RB6 K2 RELAY (ENGINE INTERLOCK)	27
RB6 K3 RELAY (LINCOLN LUBE SOLENOID)	15
RB6 K4 RELAY (BLEEDDOWN POWER SUPPLY)	18
RB6 K5 RELAY (ETHER START)	7
RB6 K7 RELAY (HID HEADLIGHT)	16
RB6 K8 RELAY (LINCLON LUBE TIMER)	15
RB7 K1 RELAY (BRAKE LOCK LIMITATION)	18
RB7 K2 RELAY (BRAKE LOCK LIMITATION)	18
RB7 K3 RELAY (BRAKE LOCK LIMITATION)	18
RB7 K4 RELAY (BRAKE LOCK LIMITATION)	18
RB7 K5 RELAY (IM WARNING)	32
RB7 K6 RELAY (TIMED ENGINE SHUTDOWN LT)	25
RB7 K7 RELAY (BRAKE LOCK LIMITATION)	18
RB7 K8 RELAY (TIMED ENGINE SHUTDOWN)	10,25
RB8 K1 RELAY (TC1-70X)	28
RB8 K2 RELAY (TC1-100X)	28
RB8 K3 RELAY (A/C SHUTTER CONTROL)	7
RB8 K4 RELAY (PLM3 LIGHTS)	28
RB8 K5 RELAY (SCHUTTER CONTROL)	7
RB8 K6 RELAY (PLM3 RED LIGHTS)	28
RB8 K7 RELAY (PLM3 AMBER LIGHTS)	28
RB8 K8 RELAY (PLM3 GREEN LIGHTS)	28
RB9 K1 RELAY (START CIRCUIT)	10,26
RB9 K2 RELAY (AUTO BRAKE APPLY POWER)	32
RB9 K3 RELAY (LOW STEERING PRESS. PWR)	11
RB9 K4 RELAY (PARK BRAKE OFF)	32
RB9 K5 RELAY (KEYSW START ACTIVATION)	8
RB9 K6 RELAY (LOW STEERING PRESS. END)	11
RELAY, BRAKE WARNING	11
RELAY, CONTROL POWER (CPR)	10
RELAY, ENGINE START	26,33
RELAY, GENERATOR FIELD (GFR)	10
RELAY, GROUND LEVEL POWER	8,10,25,28
RELAY, KEYSWITCH POWER	8,10,25
RELAY, KONTROL POWER (KPR)	2,8,10
RELAY, MAINTAIN PRE-LUBE RUN (MPRR)	26
RELAY, RADIO	21
RELAY, WIPER (HI)	31
RELAY, WIPER (LO)	31
RELAY, 12V POWER (AUX-BOX)	10,21

COMPONENT	SHEET
RELAY, 12V POWER (BATTERY BOX)	26,33
RELAY BOARD 1	10,11,22
RELAY BOARD 3	10,11,12,19
RELAY BOARD 4	10,11,12,18
	26,27,28
RELAY BOARD 5	10,11,23
RELAY BOARD 8	28
RETARD LEVER	20
RHEOSTAT, PANEL DIMMER	14
RHEOSTAT, DASH LIGHT	24
SCOREBOARD, LEFT PLM3	28
SCOREBOARD, RIGHT PLM3	28
SENDER, ENGINE TEMPERATURE	16
SENDER, FUEL LEVEL	16
SENDER, OIL PRESSURE	16
SENSOR, AMBIENT AIR TEMP	32
SENSOR, BAROMETRIC PRESSURE	9
SENSOR, HOIST PUMP #1 PRESSURE	32
SENSOR, HOIST PUMP #2 PRESSURE	32
SENSOR, HYD. LEVEL	11
SENSOR, LEFT FRONT HYD. BRAKE TEMP	32
SENSOR, LEFT FRONT SUSPENSION PRESS.	28
SENSOR, LEFT FRONT WHEEL SPEED	9
SENSOR, LEFT REAR HYD. BRAKE TEMP	32
SENSOR, LEFT REAR SUSPENSION PRESS.	28
SENSOR, RESERVE OIL LEVEL (OPT)	30
SENSOR, RIGHT FRONT HYD. BRAKE TEMP	32
SENSOR, RIGHT FRONT SUSPENSION PRESS.	28
SENSOR, RIGHT FRONT WHEEL SPEED	9
SNESOR, RIGHT REAR HYD. BRAKE TEMP	32
SENSOR, RIGHT REAR SUSPENSION PRESS.	28
SENSOR, SERVICE BRAKE PRESSURE	32
SENSOR, STEERING PRESSURE	32
SOLENOID, A/C COMPRESSOR	17
SOLENOID, AUTO BRAKE APPLY (OPT)	32
SOLENOID, BRAKE LOCK	18
SOLENOID, ETHER START	7
SOLENOID, HOIST LIMIT	15
SOLENOID, LUBE PUMP	15
SOLENOID, PARK BRAKE	32
SOLENOID, SHUTTER CONTROL	7
SOLENOID, STEERING ACCUM. BLEEDDOWN	18
SONALERT, #1 (CAB OVERHEAD)	11
SONALERT, #2 (IM FAULTS)	32
SPEAKER, RADIO LEFT FRONT	21
SPEAKER, RADIO LEFT REAR	21
SPEAKER, RADIO RIGHT FRONT	21
SPEAKER, RADIO RIGHT REAR	21
SPEEDOMETER	16,28
STEERING BLEED DOWN IC CHIP	18
SWITCH, A/C RECEIVER/DRIER PRESSURE	17
SWITCH, BLOWER PRESSURE	14
SWITCH, BODY UP	12,28
SWITCH, BODY UP OVERRAIDE	20
SWITCH, BRAKE LOCK	18,28
SWITCH, COOLANT LEVEL	27
SWITCH, DATA STORE	20,29
SWITCH, DIMMER COMBO	31
SWITCH, DIRECT SELECTOR	20,32
SWITCH, DOME LIGHT (AUX-BOX)	10,15
SWITCH, ENGINE LEFT SERVICE LIGHT	18
SWITCH, ENGINE OIL PRESSURE	26
SWITCH, ENGINE RIGHT SERVICE LIGHT	18
SWITCH, ENGINE RUN OIL PRESSURE	16
SWITCH, FOG LIGHT	23
SWITCH, GROUND LEVEL SHUTDOWN	2,8,10 25,28
SWITCH, HAZARD LIGHT	22
SWITCH, HEADLIGHT	10,23
SWITCH, HEATED MIRROR	16

COMPONENT	SHEET
SWITCH, HID LIGHT (OPT)	16
SWITCH, HOIST LIMIT	15
SWITCH, HOIST FILTER PRESSURE #1	11
SWITCH, HOIST FILTER PRESSURE #2	11
SWITCH, KEY	8,10,25
SWITCH, LADDER LIGHTS GROUND LEVEL	19
SWITCH, LADDER LIGHTS OP-CAB	19
SWITCH, LAMP TEST	11
SWITCH, LEFT WINDOW	21
SWITCH, LINC. LUBE LOW LEVEL (OPT)	15
SWITCH, LINCOLN LUBE PRESSURE	15
SWITCH, LOW BRAKE PRESSURE	11
SWITCH, LOW ACCUM. PRE-CHARGE #1	11
SWITCH, LOW ACCUM. PRE-CHARGE #2	11
SWITCH, LOW STEERING PRESSURE	11
SWITCH, MANUAL BACK UP LIGHT	19
SWITCH, PARK BRAKE PRESSURE	32
SWITCH, PLM CONTROL	28
SWITCH, PRE-LUBE PRESSURE	26
SWITCH, PRESSURE (2500 psi)	15
SWITCH, RESERVE OIL PRESSURE	30
SWITCH, RESET REQUEST	14
SWITCH, RETARD SPEED CONTROL	20
SWITCH, RIGHT WINDOW	21
SWITCH, ROTATING BEACON (OPT)	16
SWITCH, SECONDARY ENGINE SHUTDOWN	27
SWITCH, SERVICE BRAKE DEGRADE PRESS.	11
SWITCH, SERVICE BRAKE PRESS.	12
SWITCH, START BATTERY DISCONNECT	26,33
SWITCH, STEERING FILTER PRESS.	11
SWITCH, STEERING ACCUM. PRESS.	18
SWITCH, SYSTEM BATTERY DISCONNECT	26,28,33
SWITCH, TURN SIGNAL COMBO	31
SWITCH, WINDSHLD WASH/WIPE COMBO	31
TACHOMETER	16
TIMER, LINCOLN LUBE	15
TIMER, PRE-LUBE	26
TIMER, STEERING BLEED DOWN	18
TIMER, TURN SIGNAL FLASHER	22
TIMER, WINDSHLD WASH/WIPE	31
TIMER, WINDSHLD WIPER DELAY MODULE	31
VHMS MODULE	29

XS6235-0 APR 08
ELECTRICAL SCHEMATIC
CIRCUIT LOCATOR
930E-4 TIER II
A30693 - A31001
Sheet 35 of 35

Order the manual at mid-west-tech.com >