TOYOTA

REPAIR MANUAL

6FGU33-45 / 6FDU33-45
6FGAU50 / 6FDAU50

CU020

MidWestTech | Toyota 6FGU33-45, 6FDU33-45, 6FGAU50, 6FDAU50 Forklift Service Manu... Order the manual at mid-west-tech.com >


ENGINE

Page

ENGINE EXTERIOR VIEWS 1-2
MAJOR SPECIFICATIONS 1-3
ENGINE PERFORMANCE CURVES 1-4
ENGINE ASSY 1-5
REMOVAL·INSTALLATION 1-5
ENGINE SPEED ADJUSTMENT (GM6-262) 1-8
ELECTRONIC GOVERNOR 1-11
ENGINE SPEED ADJUSTMENT (13Z) 1-32
AIR CLEANER 1-33
GENERAL 1-33
SPECIFICATIONS 1-33
COMPONENTS 1-34
AIR CLEANER CLEANING·INSPECTION 1-34
CLOGGING WARNING SYSTEM INSPECTION 1-35
RADIATOR 1-36
COMPONENTS 1-36
SPECIFICATIONS 1-36
FAN DRIVE 1-37
REMOVAL·INSTALLATION 1-37
DISASSEMBLY·INSPECTION·REASSEMBLY 1-39
MUFFLER & EXHAUST PIPE 1-42
COMPONENTS 1-42
REMOVAL·INSTALLATION 1-43
BATTERY·SPARK PLUG (GM6-262) 1-44
COMPONENTS 1-44
SPECIFICATIONS 1-44
STARTING MOTOR 1-47
REMOVAL·INSTALLATION 1-47
ALTERNATOR 1-48
REMOVAL·INSTALLATION 1-48
ACCELERATOR PEDAL 1-50
COMPONENTS 1-50
ACCELERATOR PEDAL ADJUSTMENT 1-51

MidWestTech | Toyota 6FGU33-45, 6FDU33-45, 6FGAU50, 6FDAU50 Forklift Service Manu... Order the manual at mid-west-tech.com >

13Z ENGINE MODEL (12V)

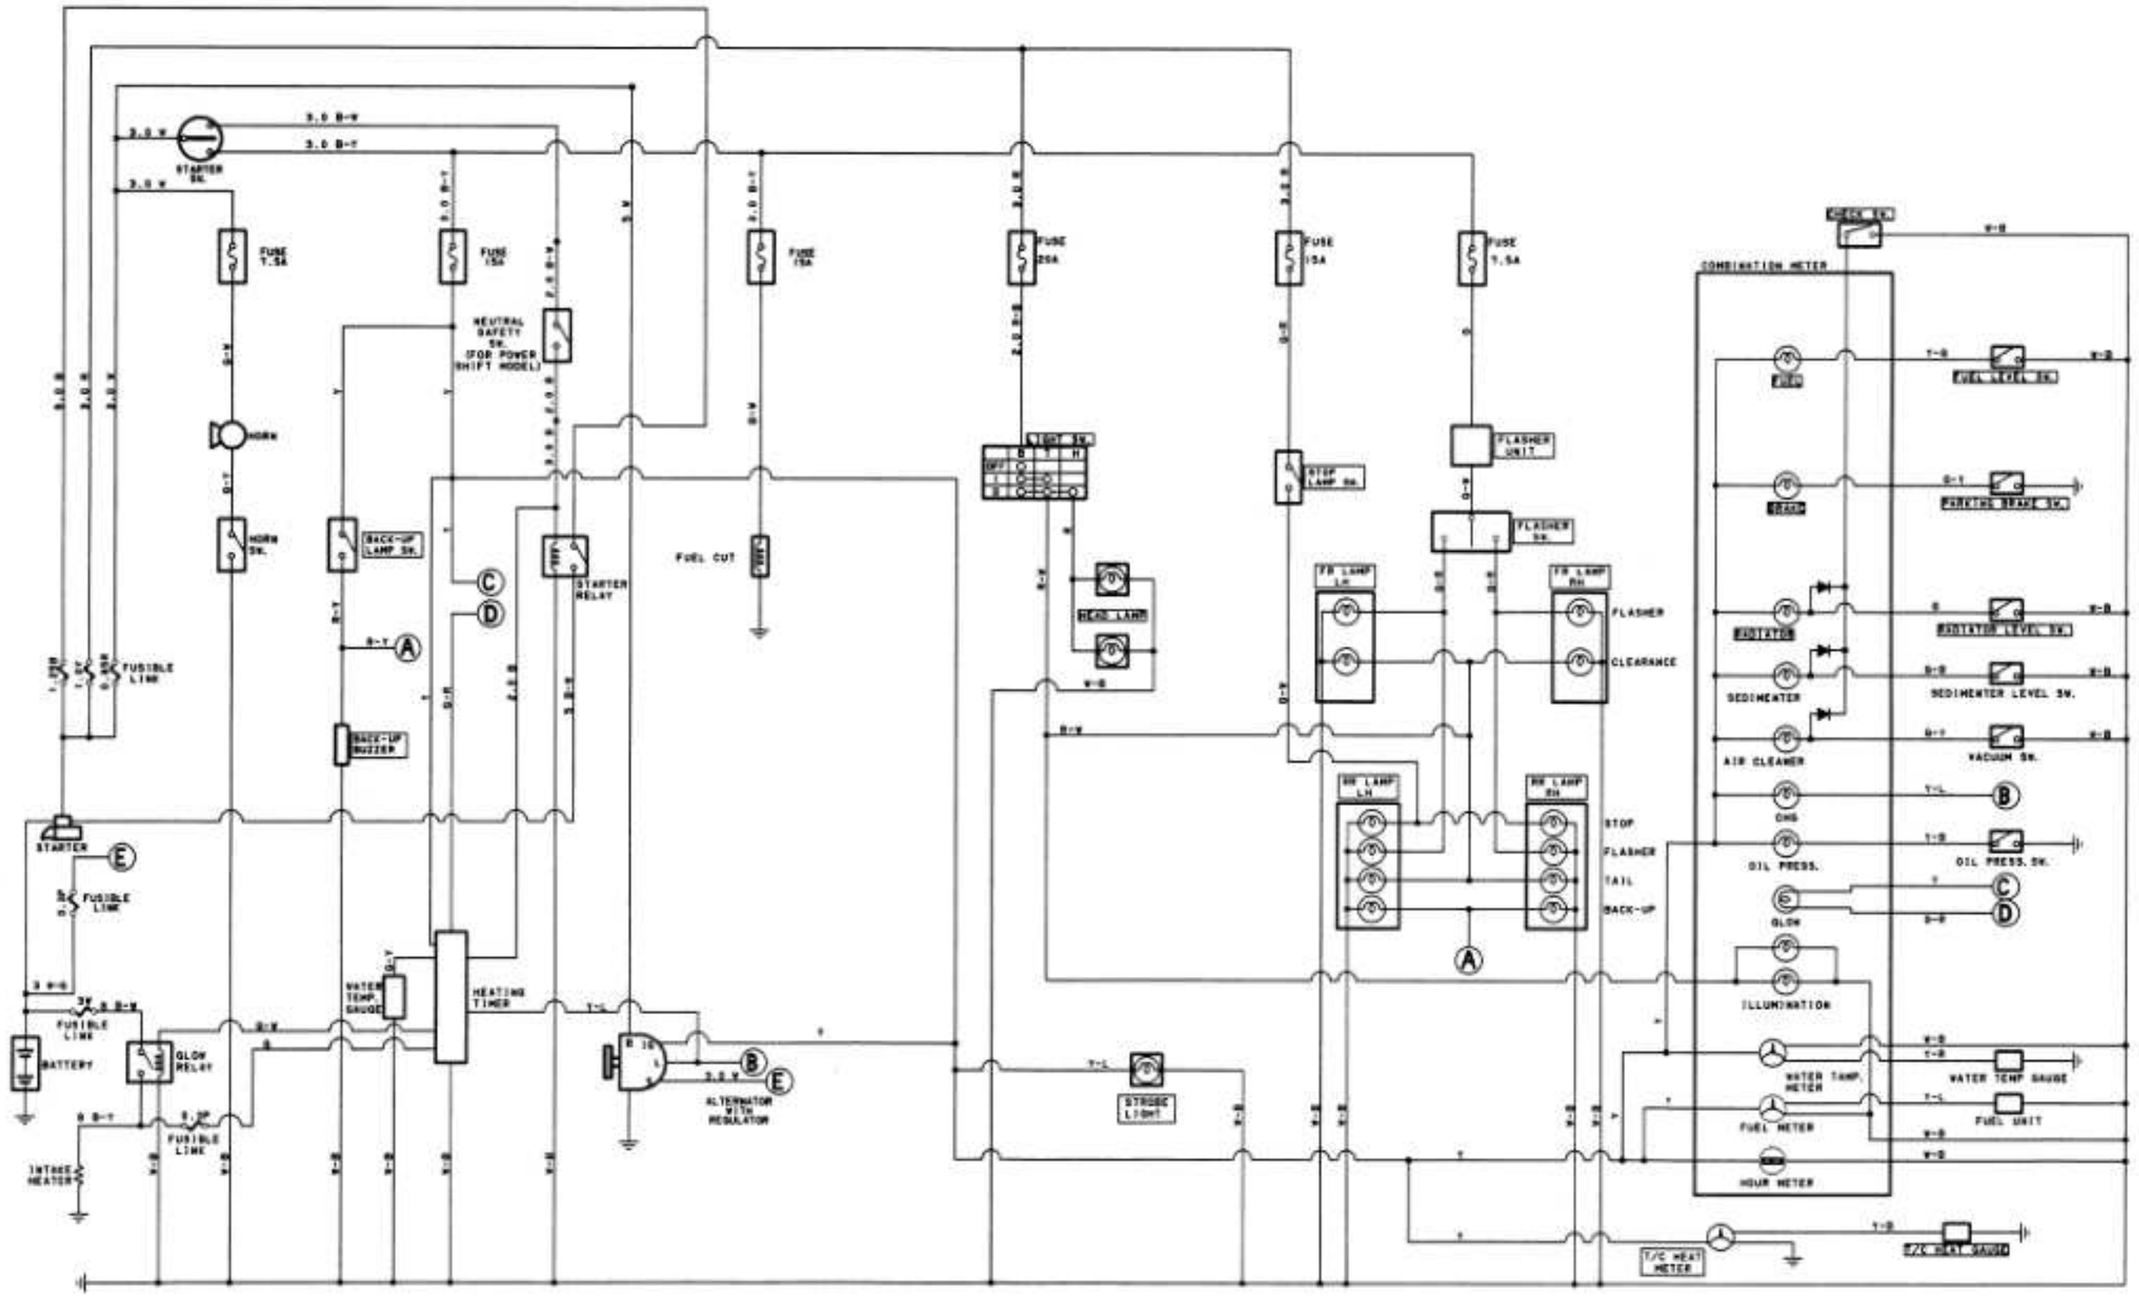

Order the manual at mid-west-tech.com >