PART No. EM16R –2 – 1

Operator's Manual

ZAXIS

500LC
500LCH

Excavator

Serial No. 3001 and up

HITACHI

MidWestTech | Hitachi Zaxis 500LC, 500LCH Excavator Operator's Manual | Publication E... Order the manual at mid-west-tech.com >

CONTENTS

MACHINE NUMBERS

SAFETY

Recognize Safety Information....S-1
Understand Signal Words....S-1
Follow Safety Instructions....S-2
Prepare for Emergencies....S-2
Wear Protective Clothing....S-3
Protect Against Noise....S-3
Inspect Machine....S-3
General Precautions for Cab....S-4
Use Handholds and Steps....S-5
Adjust the Operator's Seat....S-5
Fasten Your Seat Belt....S-6
Move and Operate Machine Safely....S-6
Operate Only from Operator's Seat....S-7
Jump Starting....S-7
Keep Riders off Machine....S-7
Investigate Job Site Beforehand....S-8
Protect Against Falling Stones and Debris....S-8
Provide Signals for Jobs Involving Multiple Numbers of Machines....S-9
Confirm Direction of Machine to be Driven....S-9
Drive Machine Safely....S-10
Avoid Injury from Rollaway Accidents....S-11
Avoid Injury from Back-Over and Swing Accidents....S-12
Keep Person Clear from Working Area....S-13
Never Position Bucket Over Anyone....S-13
Avoid Undercutting....S-13
Avoid Tipping....S-14
Never Undercut A High Bank....S-14
Dig with Caution....S-15
Operate With Caution....S-15
Avoid Power Lines....S-15
Object Handling....S-16
Protect Against Flying Debris....S-16
Park Machine Safely....S-17
Handle Fluids Safely-Avoid Fires....S-17
Practice Safe Maintenance....S-18
Warn Others of Service Work....S-19
Support Machine Properly....S-19
Stay Clear of Moving Parts....S-19
Prevent Parts from Flying....S-20
Store Attachments Safely....S-20
Prevent Burns....S-21
Replace Rubber Hoses Periodically....S-21
Avoid High-Pressure Fluids....S-22
Prevent Fires....S-23
Evacuating in Case of Fire....S-24
Beware of Exhaust Fumes....S-24
Precautions for Welding and Grinding....S-25
Avoid Heating Near Pressurized Fluid Lines....S-26
Avoid Applying Heat to Lines Containing Flammable Fluids....S-26
Remove Paint Before Welding or Heating....S-26
Prevent Battery Explosions....S-27
Service Air Conditioning System Safely....S-27
Handle Chemical Products Safely....S-28
Dispose of Waste Properly....S-28

SAFETY SIGNS....S-29

COMPONENTS NAME....1-1

GETTING ON/OFF THE MACHINE....1-2

OPERATOR'S STATION

Cab Features....1-3
Monitor Panel....1-4
Coolant Temperature Gauge....1-5
Fuel Gauge....1-5
Auto-Idle Indicator....1-5
Auto-Acceleration Indicator....1-5
Fuel Level Indicator....1-6
Air Filter Restriction Indicator....1-6
Overheat Indicator....1-6
Engine Oil Pressure Indicator....1-6
Alternator Indicator....1-6
Engine Oil Level Indicator....1-7
Coolant Level Indicator....1-7
Preheat Indicator....1-7
Precision Mode Indicator....1-7
Auto-Lubrication Indicator....1-7
Liquid Crystal Display (LCD)....1-8
Display Selection Switch....1-8
Hour Meter....1-8
Trip Meter 1 and Trip Meter 2....1-9
User's Mode....1-9
Set Switch....1-10
Work Mode Switch....1-11
Switch Panel....1-12
Engine Control Dial....1-12
Auto-Idle/Acceleration Selector....1-13
Power Mode Switch....1-14
Travel Mode Switch....1-14
Work Light Switch....1-15
Wiper/Washer Switch ZAXIS500LC....1-16
Wiper/Washer Switch ZAXIS500LCH....1-17
Switch Panel (Optional)....1-18
Key Switch....1-20
Power Boost Switch....1-20
Horn Switch....1-20
Cigar Lighter....1-21
Cab Light....1-22
Installing Fire Extinguisher....1-22
Pilot Control Shut-Off Lever....1-23
Engine Stop Knob....1-23
Fuse Box....1-24
Air Conditioner Operation....1-25
Auto Air Conditioner....1-26
Cab Heater Operation....1-32
Cooling Operation....1-32

MidWestTech | Hitachi Zaxis 500LC, 500LCH Excavator Operator's Manual | Publication EM16R-2-1 Order the manual at mid-west-tech.com >

CONTENTS

Defroster Operation 1-33
Tips for Optimal Air Conditioner Usage 1-34
AM/FM Radio Operation 1-36
Digital Clock Setting Procedure 1-37
AM/FM Radio Operation 1-38
Digital Clock Setting Procedure 1-39
Cab Door Release Lever 1-40
Opening Upper Front Window (ZAXIS500LC) 1-40
Closing Upper Front Window (ZAXIS500LC) 1-41
Removing and Storing Lower Front Window (ZAXIS500LC) 1-42
Opening Side Windows (ZAXIS500LC) 1-43
Opening/Closing Overhead Window (ZAXIS500LC) 1-44
Emergency Exit (ZAXIS500LC) 1-45
Headguard-Integrated Cab (ZAXIS500LCH) 1-46
Emergency Exit (Headguard-Integrated Cab) (ZAXIS500LCH) 1-47
Adjusting the Seat 1-48
Adjusting Console Height 1-50
Seat Belt 1-51

BREAK-IN

Observe Engine Operation Closely 2-1
Every Eight Hours or Daily 2-1
After The First 50 Hours 2-1
After The First 100 Hours 2-1

OPERATING THE ENGINE

Inspect Machine Daily Before Starting 3-1
Before Starting Engine 3-2
Level Check 3-3
Starting the Engine in Ordinary Temperature 3-4
Starting in Cold Weather 3-5
Check Instruments After Starting 3-6
Using Booster Batteries 3-7
Stopping the Engine 3-9

DRIVING THE MACHINE

Drive the Machine Carefully 4-1
Steering the Machine Using Pedals 4-2
Steering the Machine Using Levers 4-3
Travel Mode Switch 4-4
Travel Alarm (Optional) 4-4
Traveling 4-5
Operating on Soft Ground 4-6
Raise One Track Using Boom and Arm 4-6
Towing Machine a Short Distance 4-7
Operating in Water or Mud 4-8
Precautions for Traveling on Slopes 4-9
Parking the Machine on Slopes 4-10
Parking the Machine 4-10

OPERATING THE MACHINE

Control Lever (ISO Pattern) 5-1
Control Lever (HITACHI Pattern) 5-2
Pilot Control Shut-Off Lever 5-3
Engine Speed Control 5-6
Auto-Idle 5-7
Auto Acceleration 5-8
Work Mode 5-10
Power Boost 5-10
Power Mode 5-11
Precautions for Operations 5-12
Operate the Machine Safely 5-13
Operating Backhoe 5-14
Grading Operation 5-14
Face Shovel Operation 5-15
Avoid Abusive Operation 5-15
Operating Tips 5-16
Select Correct Track Shoes 5-16
Precaution for Arm Roll-In/ Bucket Roll-In Combined Operation 5-17
Object Handling — If Equipped 5-18
Electronic Control System Bypass Procedure 5-19
Overnight Storage Instructions 5-20

TRANSPORTING

Transporting by Road 6-1
Transporting the Machine by Trailer 6-1
Loading/Unloading on a Trailer 6-1
Backhoe (ZAXIS500LC) 6-5
Backhoe (ZAXIS500LCH) 6-8
Retracting or Extending the Side Frame 6-11
Retracting the Side Frame 6-12
Extending the Side Frame 6-13
Counterweight Removal — If Equipped 6-16
Counterweight Installation — If Equipped 6-22

MAINTENANCE

Correct Maintenance and Inspection Procedures 7-1
Check the Hour Meter Regularly 7-2
Use Correct Fuels and Lubricants 7-2
Prepare Machine for Maintenance 7-3
Hood and Access Covers 7-4
Periodic Replacement of Parts 7-5
Hydraulic System 7-6
Main Circuit 7-7
ZX500LC/500LCH Electrical Circuit Diagram 7-9
Maintenance Guide 7-11
A. Greasing 7-14
Auto Lubrication — If Equipped 7-15
Front Joint Pins 7-16
Swing Bearing 7-18
Electric Grease Gun — If Equipped 7-19
Swing Internal Gear 7-23
B. Engine Oil 7-24
Engine Oil Level 7-25
Change Engine Oil 7-25
Replace Engine Oil Filters 7-25
C. Oil 7-28

MidWestTech | Hitachi Zaxis 500LC, 500LCH Excavator Operator's Manual | Publication EM16R-2-1 Order the manual at mid-west-tech.com >

CONTENTS

Swing Reduction Gear 7-29
Travel Reduction Gear 7-31
D. Hydraulic System 7-33
Inspection and Maintenance of Hydraulic Equipment 7-34
Check Hydraulic Oil Level 7-36
Drain Hydraulic Oil Tank Sump 7-38
Change Hydraulic Oil 7-39
Suction Filter Cleaning 7-39
Replace Hydraulic Oil Tank Filter 7-42
Replace Pump Drain Filter 7-43
Replace Pilot Oil Filter 7-44
Check Hoses and Lines 7-45
Service Recommendations for Hydraulic Fittings 7-48
E. Fuel System 7-50
Refueling 7-50
Drain Fuel Tank Sump 7-52
Check Water Separator 7-52
Bleed Air from Fuel System 7-53
Replace Fuel Filter 7-54
Clean Feed Pump Strainer 7-54
Check Fuel Hoses 7-55
F. Air Cleaner 7-56
Clean Air Cleaner Outer Element 7-56
Replace Air Cleaner Outer and Inner Elements 7-56
G. Cooling System 7-58
Check Coolant Level 7-60
Check and Adjust Fan Belt Tension 7-60
Change Coolant 7-61
Clean Radiator Interior 7-61
Clean Radiator Core 7-62
Clean Radiator Interior 7-62
Clean Oil Cooler Front Screen 7-62
H. Air Conditioner 7-63
Clean and Replace Air Conditioner Filter 7-64
Check Refrigerant (Gas) Quantity 7-66
Check Compressor Belt Tension 7-66
Clean Condenser Core 7-67
Check Looseness at Each of Fastened Areas 7-67
Check In-Season and Off-Season 7-68
I. Electrical System 7-69
Batteries 7-69
Replace Batteries 7-73
Replacing Fuses 7-73
Connecting Batteries 7-74
J Miscellaneous 7-75
Check Bucket Teeth 7-76
Change Bucket 7-81
Convert Bucket Connection Into Face Shovel 7-82
Adjust the Bucket Linkage (Backhoe) 7-83
Remove the Travel Levers 7-84
Check and Replace Seat Belt 7-85
Check Windshield Washer Fluid Level 7-85
Check Track Sag 7-86
Adjust Track Sag 7-86
Loosen the Track 7-87
Tighten the Track 7-87
Replace the Track 7-87
Clean Cab Floor 7-88
Check Tightening Torque of Bolts and Nuts 7-89
Check O-rings in Bucket Joints 7-101

MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS

Maintenance Under Special Environmental Conditions 9-1

STORAGE

Storing the Machine 10-1
Removing the Machine from Storage 10-2
Installing Vandal-Proof Covers 10-3
Help Prevent Crime 10-4
Record Identification Numbers 10-4
Keep Proof of Ownership 10-4
Park Indoors out of sight 10-4
When Parking Outdoors 10-5
Reduce Vandalism 10-5
Report Thefts Immediately 10-5

TROUBLESHOOTING

Engine 11-1
Electrical System 11-5
Mode Selection 11-8
Control Levers 11-9
Hydraulic System 11-9

SPECIFICATIONS


ZAXIS500LC (Backhoe)
Specifications 12-1
Working Ranges 12-2
Shoe Types and Applications 12-3
Bucket Types and Applications 12-4
ZAXIS500LCH (Backhoe)
Specifications 12-5
Working Ranges 12-6
Shoe Types and Applications 12-7
Bucket Types and Applications 12-8
Lifting Capacities 12-9
Sound Level Results (89/514/EEC) 12-15

OPTIONAL ATTACHMENTS AND DEVICES

Hydraulic Breaker 13-1
Breaker Operation 13-2
Precautions for Breaker Operation 13-4
Breaker Maintenance 13-8
Replace Breaker Circuit Return Oil Filter 13-9

MidWestTech | Hitachi Zaxis 500LC, 500LCH Excavator Operator's Manual | Publication EM16R-2-1 Order the manual at mid-west-tech.com >

ZX500LC/500LCH ELECTLICAL CIRCUIT DIAGRAM

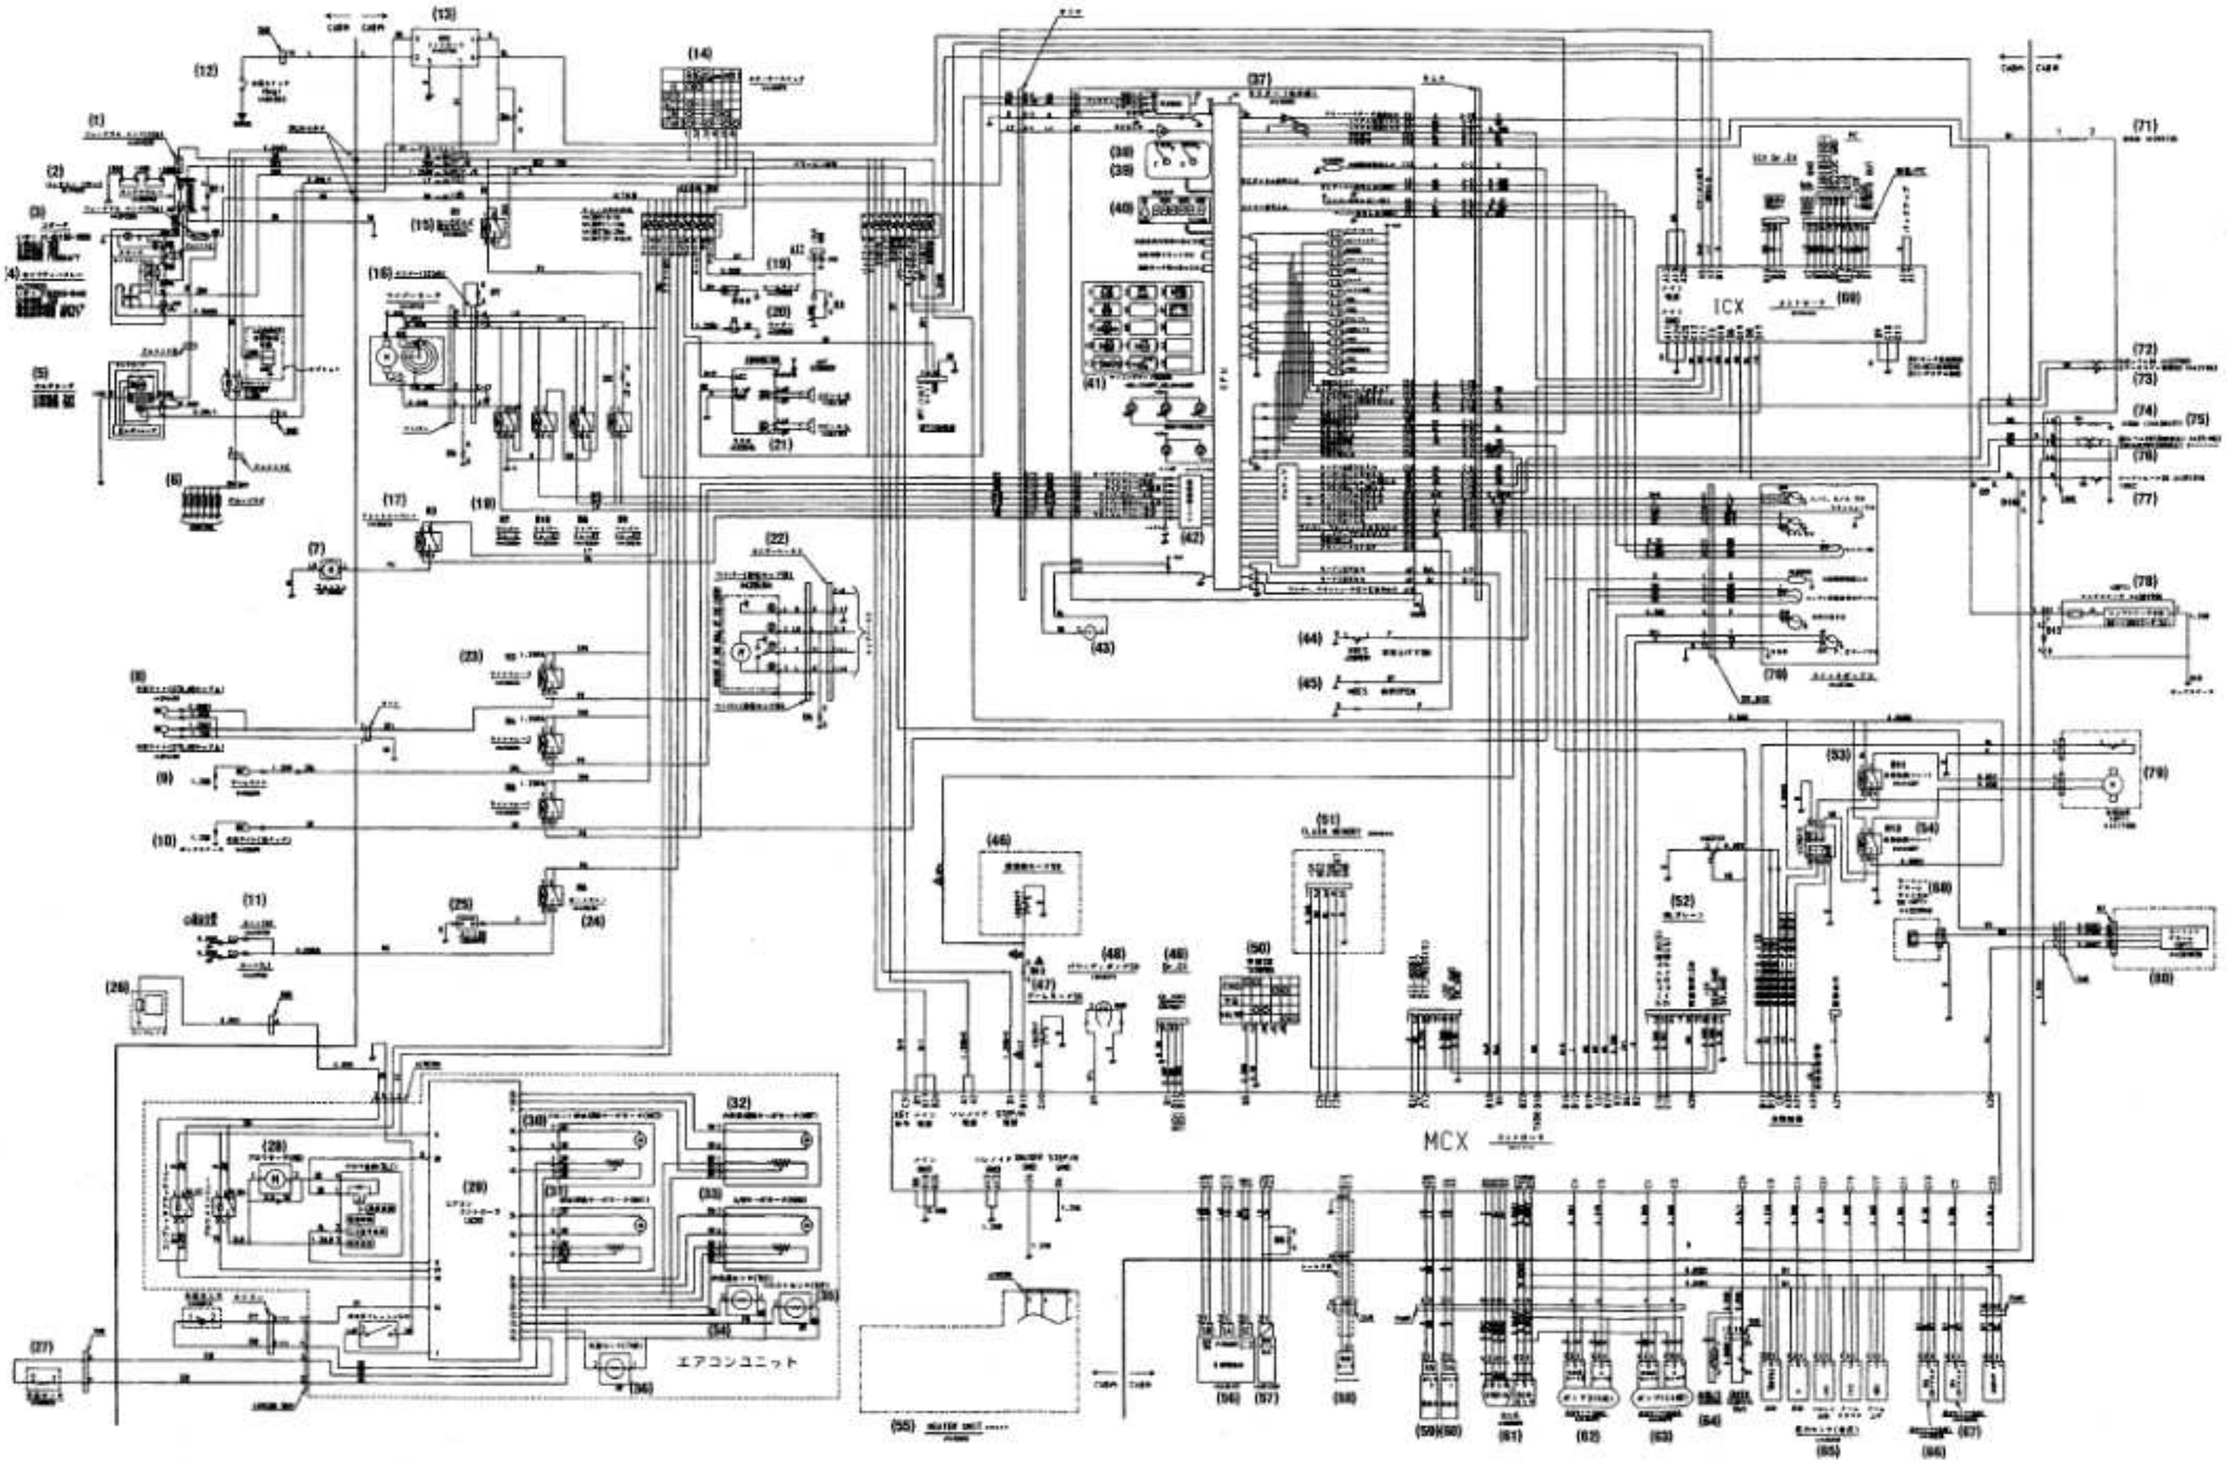

MidWestTech | Hitachi Zaxis 500LC, 500LCH Excavator Operator's Manual | Publication EM16R-2-1

Order the manual at mid-west-tech.com >