PART No. EM17E – 2 – 1

Operator's Manual

EX1100-3
Excavator

Serial No. 002123 and up

HITACHI


MidWestTech | Hitachi EX1100-3 Excavator Operator's Manual | Publication EM17E-2-1 Order the manual at mid-west-tech.com >

MACHINE NUMBERS

MACHINE TYPE AND SERIAL NUMBER

MODEL/TYPE:_____

PRODUCT
IDENTIFICATION
NUMBER:_____

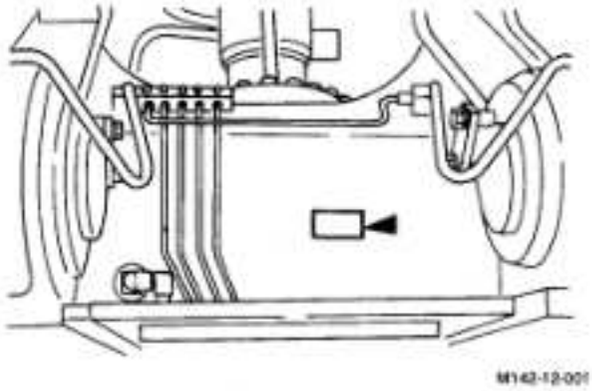


M142-12-001

PRODUCT IDENTIFICATION NUMBER

PRODUCT
IDENTIFICATION
NUMBER:_____

NOTE:

17EP002123
Marks to indicate the start and end of the PIN
PRODUCT IDENTIFICATION NUMBER (PIN)

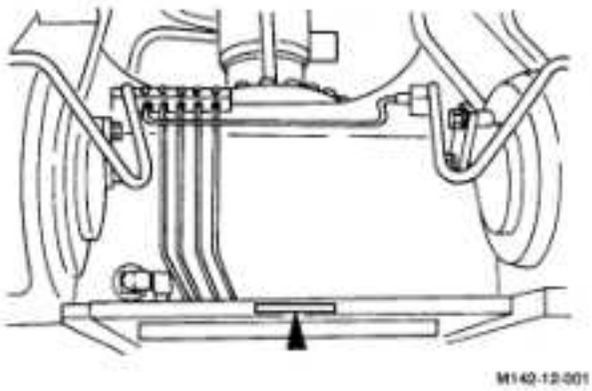


M142-12-001

ENGINE TYPE AND SERIAL NUMBER

MODEL:_____

MFG. NO.:_____

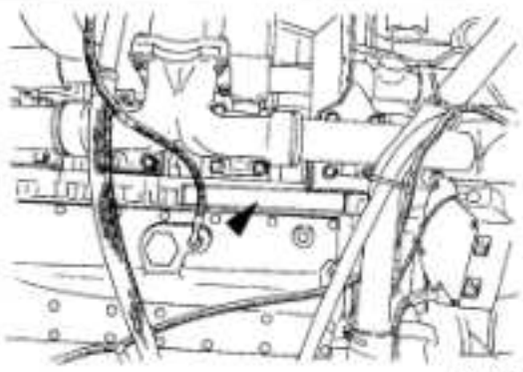


M144-12-001

TRAVEL MOTOR TYPE AND SERIAL NUMBER

MODEL:_____

MFG. NO.:_____

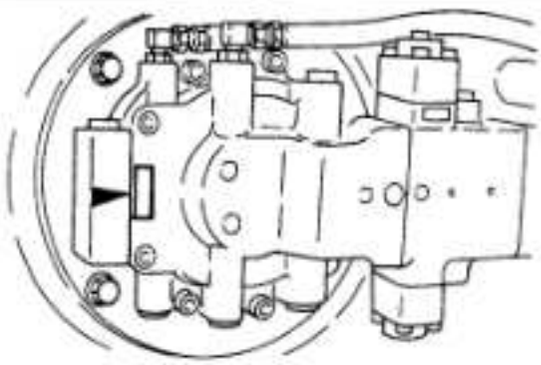

M142-12-002

Order the manual at mid-west-tech.com >

CONTENTS

MACHINE NUMBERS
Machine Type and Serial Number
Product Identification Number
Engine Type and Serial Number
Travel Motor Type and Serial Number
Swing Motor Type and Serial Number
Hydraulic Pump Type and Serial Number

SAFETY
Recognize Safety Information S1
Understand Signal Words S1
Follow Safety Instructions S2
Prepare for Emergencies S2
Wear Protective Clothing S3
Protect Against Noise S3
Inspect Machine S3
Use Handholds and Steps S4
Adjust the Operator' s Seat S4
Fasten Your Seat Belt S5
Move and Operate Machine Safely S5
Operate Only from Operator' s Seat S6
Handle Starting Aids Safely S6
Jump Starting S7
Keep Riders off Machine S7
Investigate Job Site Beforehand S8
Protect Against Falling Stones and Debris S8
Provide Signals for Jobs Involving Multiple Numbers of Machines S9
Confirm Direction of Machine to be Driven S9
Drive Machine Safely S10
Avoid Injury from Rollaway Accidents S11
Avoid Injury from Back-Over and Swing Accidents S12
Keep Personnel Clear from Working Area S13
Never Position Bucket Over Anyone S13
Avoid Undercutting S13
Avoid Tipping S14
Never Undercut a High Bank S14
Dig with Caution S15
Operate With Caution S15
Avoid Power Lines S15
Object Handling S16
Protect Against Flying Debris S16
Park Machine Safely S17
Handle Fluids Safely-Avoid Fires S17
Practice Safe Maintenance S18
Warn Others of Service Work S19
Support Machine Properly S19
Stay Clear of Moving Parts S19
Prevent Parts from Flying off S20
Store Attachments Safely S20
Prevent Burns S21
Replace Rubber Hoses Periodically S21
Avoid High-Pressure Fluids S22
Prevent Fires S23
Evacuating in Case of Fire S24
Beware of Exhaust Fumes S25
Avoid Heating Near Pressurized Fluid Lines . S25
Avoid Applying Heat to Lines Containing Flammable Fluids S25
Remove Paint Before Welding or Heating S26
Prevent Battery Explosions S26
Service Air Conditioning System Safely S27
Avoid Harmful Asbestos Dust S27
Handle Chemical Products Safely S28
Dispose of Waste Properly S28

SAFETY SIGNS S29

COMPONENTS NAME 1

GETTING ON/OFF THE MACHINE 2

EMERGENCY ROPE
Emergency Rope (Elevated Cab) 3
Emergency Exit 4

OPERATOR' S STATION
Cab Features 5
Front Right Panel and Right Console 6
Monitor Panel 7
Overhead Monitor Panel 7
Coolant Temperature Gauge 8
Warm Up Complete Indicator 8
Fuel Gauge 8
S/P (Super Power) Mode Indicator 8
E (Economy) Mode Indicator 9
Auto-Idle Indicator 9
Hydraulic Oil Level Indicator 9
Auto-Lubrication Indicator (Optional) 9
Air Filter Restriction Indicator 10
Fuel Level Indicator 10
Engine Stop Indicator 10
Engine Warning Indicator 10
Work Light Indicator 11
Engine Protection Indicator 11
Alternator Indicator 12
Pump Transmission Oil Pressure Indicator 12
Engine Oil Level Indicator 12
Coolant Level Indicator 12
Quick Idle Indicator 13
Heavy Lift Indicator (Optional) 13
Switch Panel 13
Level Check Switch 14
Buzzer and Buzzer Stop Switch 14
Auto-Idle Switch 15
Travel Mode Switch 15
Wiper Switch 16

MidWestTech | Hitachi EX1100-3 Excavator Operator's Manual | Publication EM17E-2-1 Order the manual at mid-west-tech.com >