PART NO. EM18G-1-1

Operator's Manual

EX8000

HYDRAULIC EXCAVATOR

Serial No. 000101 and up

HITACHI

MidWestTech | Hitachi EX8000 Excavator Operator's Manual | Publication EM18G-1-1 Order the manual at mid-west-tech.com >

CONTENTS

MACHINE NUMBERS

SAFETY

Recognize Safety Information S-1
Understand Signal Words S-1
Follow Safety Instructions S-2
Prepare for Emergencies S-2
Wear Protective Clothing S-3
Protect Against Noise S-3
Inspect Machine S-3
Use Handholds and Steps S-4
Adjust the Operator's Seat S-4
Fasten Your Seat Belt S-5
Move and Operate Machine Safely S-5
Handle Starting Aide Safety S-5
Operate only from Operator's Seat S-6
Jump Starting S-6
Keep Riders Off Machine S-6
Investigate Job Site Beforehand S-7
Protect Against Falling Stones and Debris S-7
Provide Signals for Jobs Involving Multiple Numbers of Machines S-8
Confirm Direction of Machine to be Driven S-8
Drive Machine Safely S-9
Avoid Injury from Rollaway Accidents S-10
Avoid Injury from Back-Over and Swing Accidents S-11
Keep Person Clear from Working Area S-12
Never Position Bucket Over Anyone S-12
Avoid Undercutting S-12
Avoid Tipping S-13
Never Undercut a High Bank S-13
Dig with Caution S-14
Operate with Caution S-14
Avoid Power Lines S-14
Object Handling S-15
Protect Against Flying Debris S-15
Park Machine Safely S-16
Handle Fluids Safely-Avoid Fires S-16
Practice Safe Maintenance S-17
Warn Others of Service Work S-18
Support Machine Properly S-18
Stay Clear of Moving Parts S-18
Prevent Parts from Flying S-19
Store Attachments Safely S-19
Prevent Burns S-20
Replace Rubber Hoses Periodically S-20
Avoid High-Pressure Fluids S-21
Prevent Fires S-22
Evacuating in Case of Fire S-23
Beware of Exhaust Fumes S-23
Avoid Heating Near Pressurized Fluid Lines S-24
Avoid Applying Heat to Lines Containing Flammable Fluids S-24
Remove Paint before Welding or Heating S-24
Prevent Battery Explosions S-25
Service Air Conditioning System Safely S-25
Handle Chemical Products Safely S-26
Dispose of Waste Properly S-26

SAFETY SIGNS S-27

COMPONENTS NAME 1-1

HANDLING
LADDER/Emergency Rope

Using Ladder 1-2
Operating Ladder 1-2
Emergency Escape 1-3
Emergency Exit 1-4
Evacuating in Case of Fire 1-5

OPERATOR'S STATION

Cab Features 1-7
Monitor Display 1-8
Starting Check Screen 1-8
Meter Check Screen 1-9
Tachometer 1-10
Coolant Temperature Gauge 1-10
Hydraulic Oil Temperature Gauge 1-10
Fuel Gauge 1-10
Hour Meter 1-11
Warning Indicators 1-11
Alternator Indicator 1-11
Pump Transmission Oil Pressure Indicator 1-11
Engine Stop Indicator 1-11
Engine Oil Pressure Indicator 1-12
Coolant Overheat Indicator 1-12
Coolant Level Indicator 1-12
Exhaust Temperature Indicator 1-12
Engine Over Run Indicator 1-13
Hydraulic Oil Level Indicator 1-13
Auto-Lubrication Indicator 1-14
Fast-Filling Indicator 1-14
Emergency Engine Stop Indicator 1-15
Tension Indicator 1-15
Electric Lever Indicator 1-15
Caution Indicators 1-15
Engine Warning Indicator 1-15
Hydraulic Oil Overheat Indicator 1-16
Pump Contamination Indicator 1-16
Ladder Position Indicator 1-16
Air Cleaner Restriction Indicator 1-16
Status Indicators 1-17
Auto-Idle Indicator 1-17
Travel Mode Indicator 1-17
Preheat Indicator 1-17
Left Console 1-18
Warning Lamp 1-18
Caution Lamp 1-18

Order the manual at mid-west-tech.com >

CONTENTS

Key Pad 1-18
Monitor Contrast Switch 1-18
Wiper Switch 1-19
Washer Switch 1-19
Wiper Delay Selector Switch 1-19
Air Conditioners 1-20
Designations and Functions of Controls .. 1-21
Cooling 1-23
Heating 1-23
Dehumidifying and Heating 1-23
Defrosting 1-24
Blower Operation without Cooling or Heating 1-24
Ventilation the Cab 1-24
FM/AM Radio Operation 1-25
Digital Clock Setting Procedure 1-26
Right Console 1-27
Key Switch 1-27
Emergency Engine Stop Switch 1-28
Engine Start Switch 1-28
Engine Stop Switch 1-28
Engine Speed Control Dial 1-29
Work Light Switch 1-30
Dome Light Switch 1-31
Maintenance Light Switch 1-32
Entrance Light Switch 1-33
Travel Mode Switch 1-34
Auto-Idle Switch 1-34
Buzzer Stop Switch 1-35
Fast-Filling System 1-36
Preheat Switch 1-37
Rear Console 1-38
Camera Monitor Display 1-38
Horn Switch 1-39
Adjusting the Seat 1-40
Seat Belt 1-43
Cab Door Release Button 1-44
Opening Cab Left Window 1-44

BREAK-IN

Observe Machine Closely 2-1
Every 10 Hours or Each Shift 2-1
After the First 50 Hours 2-2

OPERATING THE ENGINE

Inspect Machine Daily Before Starting 3-1
Before Turning Power ON 3-3
Turning Power ON 3-4
Starting the Engine 3-8
Starting in Cold Weather 3-9
Check Instruments After Starting 3-10
Using Booster Batteries 3-11
Stopping the Engine 3-13
Stopping the Engine in Emergency (in the Cab) 3-14
Stopping the Engine in Emergency (Except in the Cab) 3-15

OPERATING THE MACHINE

Control Lever (ISO Pattern Loading Shovel) 4-1
Control Lever (HITACHI Pattern Loading Shovel) 4-2
Bucket Open-Close Pedals (Loading Shovel) 4-3
Pilot Control Shut-Off Lever 4-4
Engine Speed Control 4-5
Auto-Idle 4-6
Warming-Up Operation 4-7
Warming-Up the Cylinders and Motors 4-8
Precautions for Operations 4-9
Operate the Machine Safely 4-10
Loading Shovel Operation 4-11
Prohibited Operation 4-11
Object Handling --- if Equipped 4-13
Overnight Storage Instructions 4-14

DRIVING THE MACHINE

Drive the Machine Carefully 5-1
Steering the Machine Using Pedals 5-2
Steering the Machine Using Levers 5-3
Travel Mode Switch 5-4
Travel Alarm 5-5
Traveling 5-6
Operating On Soft Ground 5-7
Raise One Track Using Boom and Arm 5-7
Towing Machine a Short Distance 5-8
Operating in Water or Mud 5-9
Precautions for Traveling On Slopes 5-10
Parking the Machine On Slopes 5-11
Parking the Machine 5-11

MAINTENANCE

Correct Maintenance and Inspection Procedures 7-1
Check the Hour Meter Regularly 7-2
Use Correct Fuels and Lubricants 7-2
Prepare Machine for Maintenance 7-3
Access Covers 7-4
Inspection/Maintenance Lights 7-5
Use a Chain to Prevent Falling Accidents 7-6
Electric Pump 7-7
Construction Outline 7-9
Hydraulic System 7-10
Loading Shovel 7-11
Periodic Replacement of Parts 7-13
Maintenance Interval Guide 7-28
A. Greasing 7-31
Loading Shovel Front Joint Pins 7-32
Swing Bearing 7-36
Swing Internal Gear 7-37

Order the manual at mid-west-tech.com >

CONTENTS

Center Joint 7-38
Operating the Lubricator 7-39
B. Engine 7-41
Engine Oil Level 7-42
Change Engine Oil 7-43
Replace Engine Oil Main and Bypass Filters 7-43
Check Alternator Belt Tension 7-44
Check Injection Nozzle 7-45
Inspect Bolts and Nuts Outside Engine 7-45
Inspect and Adjust Valve Clearance 7-45
Check Fuel Injection Timing 7-45
Check Starter and Alternator 7-45
Check Turbocharger 7-45
C. Transmission 7-46
Pump Transmission 7-46
Pump Transmission Oil Level 7-47
Change Pump Transmission Oil 7-48
Replace Pump Transmission Oil Filter 7-48
Clean Breather 7-49
Swing and Travel Transmission 7-50
Swing Transmission Oil Level 7-50
Change Swing Transmission Oil 7-51
Clean Swing Transmission Breather 7-52
Travel Transmission Oil Level 7-52
Change Travel Transmission Oil 7-53
D. Hydraulic System 7-54
Inspection and Maintenance of Hydraulic Equipment 7-54
Hydraulic Oil Level 7-56
Drain Hydraulic Tank Sump 7-58
Replace Full-Flow Filter and Drain Filter 7-58
Replace Bypass Filter 7-59
Replace Pilot Oil Filter 7-60
Change Hydraulic Oil 7-61
Clean Suction Filter 7-63
Replace Suction Filter 7-64
Replace High-Pressure Filter 7-65
Clean Oil Cooler Core 7-67
Check Hoses and Lines 7-68
Service Recommendations for hydraulic Fittings 7-71
E. Fuel System 7-72
Drain Fuel Tank Sump 7-74
Water Separator Filter 7-74
Replace Fuel Filter 7-81
Check Fuel Hoses 7-77
F. Air Cleaner 7-79
Clean Air Cleaner Outer Element 7-79
Replace Air Cleaner Outer and Inner Elements 7-79
G. Cooling System 7-81
Check Coolant Level 7-82
Clean Intercooler Core 7-85
Clean Radiator Core 7-85
Clean Outside of Radiator 7-86
H. Air Conditioner 7-87
Recirculation Air Filter 7-87
Ventilation Air Filter 7-88
Check Refrigerant Quantity 7-89
Check Compressor Belt Tension 7-91
Clean Condenser Core 7-91
Check Tightening Torque 7-92
Seasonal Maintenance 7-93
I. Electrical System 7-94
Batteries 7-94
Replace Batteries 7-98
Replacing Fuses 7-99
Power Source Terminal 7-102
Fusible Link 7-103
Check Electrical Cables and Wire Harnesses for Short Circuits 7-105
Check Emergency Engine Stop Switch 7-107
J. Miscellaneous 7-108
Check Bucket Teeth 7-108
Inspect Emergency Evacuation Equipment and Hanger 7-111
Auto-Lubrication System 7-112
Check Windshield Washer Fluid Level 7-116
Check Track Sag 7-117
Check Accumulator 7-119
Check Side Frame Area 7-119
Check Tightening Torque of Bolts and Nuts 7-120

MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS

Maintenance Under Special Environmental Conditions 9-1

STORAGE

Storing the Machine 10-1
Removing the Machine from Storage 10-2
Transporting the Machine 10-3

TROUBLESHOOTING

Engine Diagnostic Switches 11-1
Engine 11-3
Electrical System 11-7
Mode Selection 11-9
Hydraulic System 11-10
Auto-Idle 11-12


SPECIFICATIONS

Specifications 12-1
Working Range (Loading Shovel) 12-2


INDEX 14-1

Order the manual at mid-west-tech.com >

FM/AM RADIO OPERATION

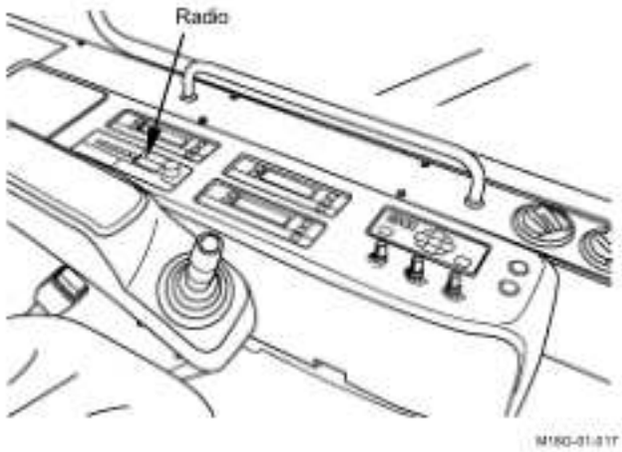

1. Controls on the radio
   1- Power Switch/Volume Control Knob
   2- Tone Adjustment Ring
   3- AM/FM Switch
   4- Station Preset
   5- Tuning Switch
   6- Display Mode Change Switch
   7- Digital Display
   8- Time Set Switch
   9- Set Switch

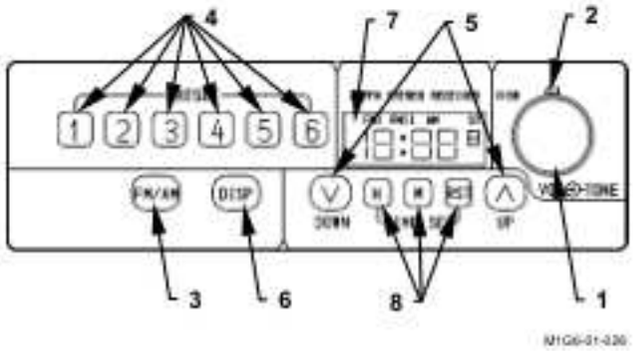

2. Tuning Procedure

   (1) Manual Tuning Procedure
   Repeatedly tap one of tuning switches (5) until the desired station is reached.
   Each time the tuning switch is pressed, the frequency changes at an interval.
   - Tap the tuning switch (∧) to increase the frequency.
   - Tap the tuning switch (∨) to decrease the frequency.

   Digital display (7) will return to the setting (the clock or the frequency, whichever one is set by the display mode change switch) approximately 5 seconds after tuning switches (5) are no longer tapped or pressed.

   (2) Automatic Search Function
   Press and hold one of tuning switches (5) for more than half a second until an electronic tone is heard, then release. The frequency display will move up to the next higher frequency station.
   - To go up to the next higher frequency station, press and hold the tuning switch (∧).
   - To go down to the next lower frequency station, press and hold the tuning switch (∨).

   After displaying the next frequency station, digital display (7) will return to the setting (the clock or the frequency, whichever one is set by the display mode change switch) in approximately 5 seconds.

In order to deactivate the automatic search function while it is operating (while searching the next available frequency station), simply tap tuning switches (5) again.
If the receiving radio waves are weak, i. e. such as when the machine is located between high rising buildings, etc., use the manual tuning procedure to select the desired station.

MidWestTech | Hitachi EX8000 Excavator Operator's Manual | Publication EM18G-1-1 Order the manual at mid-west-tech.com >

A. GREASING

Brand Names of Grease

Where to be applied / Manufacturer	Swing Gear		For Auto-Lubrication Backhoe Bucket and Link Pins	
	–20 to 40 °C (–4 to 104 °F)			
British Petroleum	BP Energrease	LS-EP2	BP Energrease	LS-EP1
Caltex Oil	Multifax	EP2	Multifax	EP1
Esso	Beacon	EP2	Beacon	EP1
Idemitsu Kosan	Daphne Coronex Grease	EP2	Daphne Coronex Grease	EP1
Mobil Oil	Mobilux	EP2	Mobilux	EP1
Nippon Oil	Epinoc Grease	AP2	Epinoc Grease	AP1
Shell Oil	Shell Alvania EP Grease	2	Shell Alvania EP Grease	1

NOTE: The machine is shipped from the factory is filled with lubricants marked with ☐.

MidWestTech | Hitachi EX8000 Excavator Operator's Manual | Publication EM18G-1-1 Order the manual at mid-west-tech.com >