PART NO. EPM18J-OP2-1

HITACHI

EX1200-6

LC-Type
(with 1000/1100 mm shoes)

Operator's Manual
Parts Catalog

Serial No. 001001 and up

MidWestTech | Hitachi EX1200-6 LC-Type w/1000, 1100mm shoes Excavator Operator's Ma... Order the manual at mid-west-tech.com >

CONTENTS

OPERATOR'S MANUAL

SAFETY
Recognize Safety Information..... 1-1
Understand Signal Words..... 1-1
Precautions for Operation of LC-type Machine ... 1-2

TRANSPORTING
Packing Dimensions and Weights
for Transportation 2-1


MAINTENANCE
Check Tightening Torque of Bolts and Nuts..... 3-1

SPECIFICATIONS
Backhoe Shoe Types and Applications 4-1

MidWestTech | Hitachi EX1200-6 LC-Type w/1000, 1100mm shoes Excavator Operator'... Order the manual at mid-west-tech.com >

PACKING DIMENSIONS AND WEIGHTS FOR TRANSPORTATION


Track

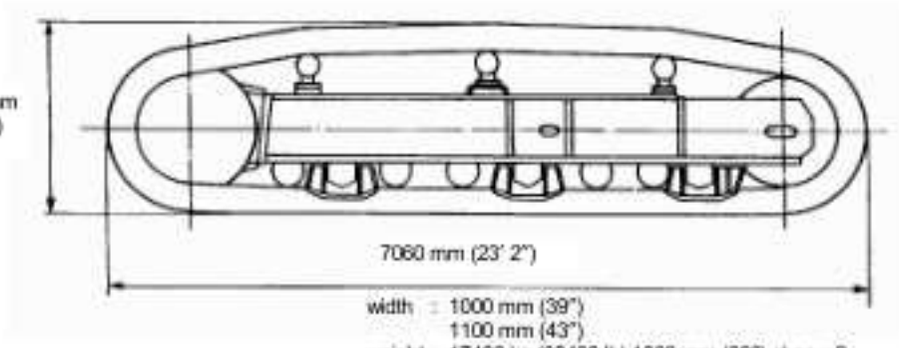

width : 1000 mm (39")
1100 mm (43")
weight : 17400 kg (38400 lb) 1000 mm (39") shoe x 2
17800 kg (39200 lb) 1100 mm (43") shoe x 2

M113-08-011


Ladder

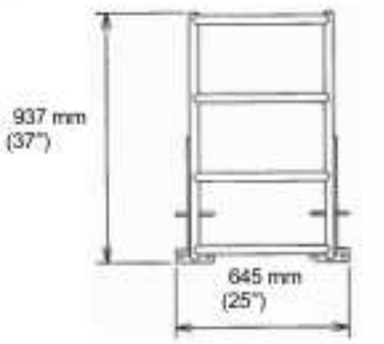

Width: 452 mm (18")
Weight: 24.6 kg x 2 (54.2 lb x 2)

M17F-08-005

Cover

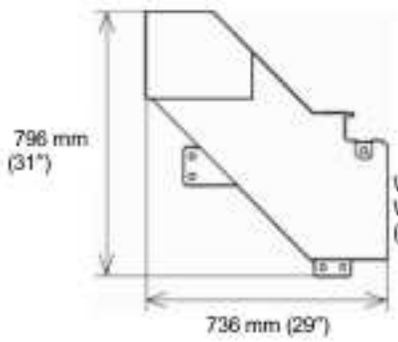

Width: 310 mm (12")
Weight: 29.2 kg x 2
(64.4 lb x 2)z

M18J-OP2-001

MidWestTech | Hitachi EX1200-6 LC-Type w/1000, 1100mm shoes Excavator Operator'... Order the manual at mid-west-tech.com >