# W7
# Loader

# Parts Catalog

**F1054**

CASE
CONSTRUCTION

MidWestTech | Case W7 Loader Parts Catalog | Publication F1054

Order the manual at mid-west-tech.com >

## Indexes

This Parts Catalog is arranged for easy identification of Genuine CASE Service Parts. An alphabetical index is provided at the front of this Catalog to locate the major groups or assemblies. A numerical index at the rear of the Catalog gives the part numbers and the pages on which they are described.

## Illustrations

All parts are illustrated in "Exploded Views" which show the individual parts in their normal relationship to each other. Reference numbers are used in the illustrations. These numbers correspond to those in the "Reference Number" column and are followed by the part number, description and quantity required.

## Orders

Orders should plainly specify correct part number, full description, quantity required, machine model and engine model, machine and engine serial numbers, method of shipment and shipping address.

## Changes

When changes to the machine make it necessary, revised pages for this book will be issued. The revised pages will be issued with the same page number as those they replace and the "issue" number and date will be advanced.

It is imperative that revised Parts Book pages be inserted into their respective Parts Books as soon as received. Failure to do so will lead to confusion and defeat the purpose of the book.


## Indented Description

Indented parts in the description list are a part of the preceding assembly or sub-assembly. The quantity shown in the "Number Required" column is the number of parts used on a machine except where parts are indented in descriptive list. In this case the quantity shown is the number required for the preceding assembly or sub-assembly.

| REF | | PART NO. | DESCRIPTION | REQ'D. |
|---|---|---|---|---|
| | A | 55159 | CYLINDER ASSY. - rear steering | 1 |
| 28 | A | 56208 | SOCKET ASSY. - rear cylinder | 1 |
| 29 | A | 55956 | PLUG - adjusting, socket assy. | 1 |
| 30 | A | 55957 | SEAT - socket ball | 2 |
| 31 | A | 56210 | SPRING - socket | 1 |
| 32 | A | 56209 | SEAT - socket spring | 1 |
| 33 | G | 45175 | CLAMP ASSY. - socket assy. | 1 |
| 34 | 16- | 836 | HHCS - 1 2" - 20 NF x 2-1/4" | 1 |
| 35 | 132- | 104 | PIN - cotter, 3/16" dia. x 3" | 1 |

## Terms "Right Hand" and "Left Hand"

"Right Hand" and "Left Hand" sides of the loader are determined by sitting in the operator's seat facing the loader.

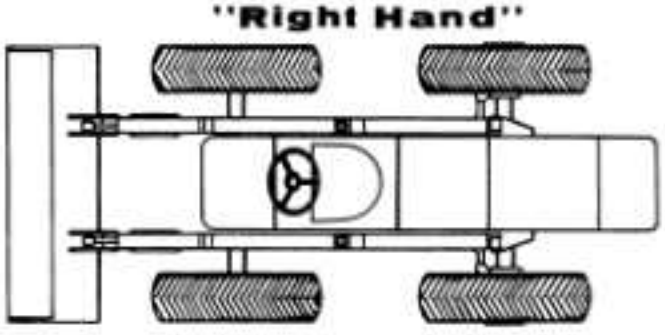



Order the manual at mid-west-tech.com >

# ALPHABETICAL INDEX

## ENGINE SECTION


### A

Air Cleaners - engine, diesel ..... 95
Air Cleaners - engine, gasoline ..... 97,103
Alternator - electrical ..... 75,77

### B

Balancer - engine, diesel ..... 25
Balancer - engine, gasoline ..... 59
Belt - drive, fan and alternator ..... 7
Block - cylinder, diesel ..... 11
Block - cylinder, gasoline ..... 45

### C

Camshaft - engine, diesel ..... 19
Camshaft - engine, gasoline ..... 53
Carburetor - engine, gasoline ..... 67,69
Coil - electrical, gasoline engine ..... 113,117,121
Crankshaft - engine, diesel ..... 21
Crankshaft - engine, gasoline ..... 55

### D

Decompressor - diesel ..... 29
Distributor - electrical, gasoline engine ..... 71,73
Dipstick - engine oil, diesel ..... 11
Dipstick - engine oil, gasoline ..... 45

### E

Electrical System - diesel ..... 111,119
Electrical System - diesel and gas ..... 105-109,115,117
Electrical System - gasoline ..... 113,121

### F

Fan - engine cooling ..... 7
Filter - engine oil, diesel ..... 27
Filter - engine oil, gasoline ..... 61
Filter - fuel, diesel ..... 37B,41
Filter System - fuel injection, diesel ..... 37,37B
Flywheel - engine, diesel ..... 21
Flywheel - engine, gasoline ..... 55
Fuel Tanks - engine ..... 99

### G

Gasket Kits - engine, diesel ..... 33
Gasket Kits - engine, gasoline ..... 65
Gauges - instrument panel ..... 135
Generator - electrical ..... 79
Governor - engine, gasoline ..... 63

### H

Head - cylinder, diesel ..... 13
Head - cylinder, gasoline ..... 47
Heater - manifold ..... 135

### I

Ignition System - engine, gasoline ..... 113,121
Index - basic tractor ..... 4
Index - loader ..... 5
Index - numerical ..... 298
Injection System - fuel, diesel ..... 35
Injection - fuel, diesel ..... 35

### K

Kit - alternator, diesel ..... 123
Kit - cold start, diesel ..... 31
Kits - piston and sleeve, diesel engine ..... 23
Kits - piston and sleeve, gasoline engine ..... 57

### L

Linkage - throttle control, diesel ..... 89
Linkage - throttle control, gasoline ..... 91,93

### M

Manifold - intake and exhaust, diesel ..... 9
Manifold - intake and exhaust, gasoline ..... 43
Manifold - water ..... 7
Muffler - exhaust ..... 9,43,87

### P

Pan - engine oil, diesel ..... 27
Pan - engine oil, gasoline ..... 61
Panel - instrument ..... 125-135
Pistons - engine, diesel ..... 23
Pistons - engine, gasoline ..... 57
Primer - diesel ..... 31,41
Pump - fuel injection, diesel ..... 39
Pump - engine oil, diesel ..... 25
Pump - engine oil, gasoline ..... 59
Pump - water ..... 7

### R

Radiator - engine cooling ..... 181
Rings - piston, diesel ..... 23
Rings - piston, gasoline ..... 57
Rocker Arm - engine, diesel ..... 15,17
Rocker Arm - engine, gasoline ..... 49,51
Rod - connecting, diesel ..... 23
Rod - connecting, gasoline ..... 57
Rod - push, diesel ..... 15,17
Rod - push, gasoline ..... 49,51
Rotor - distributor, gasoline engine ..... 71,73

### S

Sleeve - engine, diesel ..... 23
Sleeve - engine, gasoline ..... 57
Spark Plug - ignition, gasoline engine ..... 49,51
Starter - engine, diesel ..... 81,83
Starter - engine, gasoline ..... 85-85D

### T

Thermostat - coolant temperature ..... 7
Timing Gear Cover - engine, diesel ..... 11
Timing Gear Cover - engine, gasoline ..... 45

### V

Valve Cover - engine, diesel ..... 13
Valve Cover - engine, gasoline ..... 47
Valve Guides - engine, diesel ..... 15,17
Valve Guides - engine, gasoline ..... 49,51
Valves - engine, diesel ..... 15,17
Valves - engine, gasoline ..... 49,51
Ventilation - crankcase ..... 101


Printed in U.S.A.

691268 Issued October, 1969

MidWestTech | Case W7 Loader Parts Catalog | Publication F1054 Order the manual at mid-west-tech.com >

# MODEL W7 LOADER

## ALPHABETICAL INDEX

## BASIC TRACTOR SECTION


### A

Accumulator - hydraulic . . . . . 283
Alternator - electrical . . . . . 75,77
Axle - rigid, front . . . . . 223,225
Axle - steering, rear . . . . . 227-233

### B

Batteries - electrical . . . . . 105,113,117-121
Battery Cables - electrical . . . 105,111,113,117-121
Brake - parking, transmission . . . . . 209
Brake Controls - foot . . . . . 153-161
Brake Controls - parking . . . . . 163
Brake System - hydraulic . . . . . 153-157,167
Brake System - Hydrovac . . . . . 159,161,169-173

### C

Cab - operator . . . . . 287
Case - transmission . . . . . 205,205B
Chassis - tractor . . . . . 189,191
Cleaner - air, Hydrovac . . . . . 179
Clutch - high gear, transmission . . . . . 209
Clutches - forward, reverse and low gear, transmission . . . . . 207
Clutch Control - brake, hydraulic . . . . . 153-157
Clutch Control - brake, Hydrovac . . . . . 159,161
Converter - torque . . . . . 215,217
Cooling System - converter and transmission 199,201
Counterweights - rear . . . . . 189
Cylinder - Hydrovac . . . . . 175,177
Cylinder - master, brake . . . . . 165
Cylinder - wheel, brake . . . . . 167,243

### D

Decals - tractor . . . . . 285
Differential - tractor . . . . . 235-241
Drive Shafts - transmission and axle . . . . . 245
Drum - brake . . . . . 243

### E

Electrical System - cab . . . . . 289
Electrical System - tractor, diesel . . . . . 111,119
Electrical System - tractor, diesel and gas . . . . . 105,109,115,117
Electrical System - tractor, gasoline . . . . 113,121

### F

Fenders - tractor . . . . . 193
Filter - air Hydrovac . . . . . 179
Filter - converter oil . . . . . 203
Filter - hydraulic oil . . . . . 263
Floor Plates - tractor . . . . . 185,187

### G

Gauges - instrument panel . . . . . 125-135
Grille - radiator guard . . . . . 181

### H

Heater - cab . . . . . 291
Horn - tractor . . . . . 137,139
Hood - engine . . . . . 183
Hydraulic System - torque converter and transmission . . . . . 199,201
Hydraulics - power steering . . . . . 145,147

### I

Index - engine . . . . . 3
Index - loader . . . . . 5
Index - numerical . . . . . 296-
Instrument Panel - tractor . . . . . 125-135

### L

Lever - fuel shut-off, diesel . . . . . 89
Lights - dash . . . . . 137
Lights - front and rear . . . . . 137
Lights - stop . . . . . 137,139
Lights - turn signal . . . . . 293-297
Linkage - steering . . . . . 143

### M

Mounts - engine . . . . . 191
Muffler - exhaust . . . . . 9,43,87

### P

Panel - instrument . . . . . 125-135
Panels - engine side . . . . . 183
Pedal - throttle control . . . . . 89,91
Pedals - brake, hydraulic . . . . . 153-157
Pedals - brake, Hydrovac . . . . . 159,161
Plates - floor . . . . . 185,187
Platform - operator compartment . . . . . 185,187
Pump - charging, torque converter . . . . . 219
Pump - power steering . . . . . 149B,151
Pump - vacuum, Hydrovac . . . . . 179

### R

Radiator - engine cooling . . . . . 181
Reservoir - power steering . . . . . 151

### S

Seat - operator . . . . . 185,187
Shaft - input, transmission . . . . . 207
Shaft - output, transmission . . . . . 211
Shift Controls - transmission . . . . . 195,197
Shift-Out - rear axle . . . . . 211
Shutter - radiator . . . . . 181
Side Panels - engine . . . . . 183
Starter - electrical, diesel . . . . . 81,83
Starter - electrical, gasoline . . . . . 85-85D
Steering Cylinder - hydraulic . . . . . 149
Steering Gear - tractor . . . . . 141
Steering Hydraulics - tractor . . . . . 145,147
Steering Wheel - tractor . . . . . 95

### T

Tank - fuel . . . . . 99
Tank - hydraulic oil . . . . . 263
Tank - reserve, Hydrovac . . . . . 169,173
Transmission Controls - tractor . . . . . 195,197

### U

Universal Joints - drive shaft . . . . . 245

### V

Valve - accumulator . . . . . 283
Valve - check, Hydrovac . . . . . 179
Valve - clutch control . . . . . 163
Valve - control, transmission . . . . . 213
Valve - power steering cylinder . . . . . 149
Valve - regulating, torque converter . . . . . 221

### W

Wheels - drive . . . . . 243


691269


Order the manual at mid-west-tech.com >