ILLUSTRATED PARTS LIST
LISTE DES PIECES
STÜCK LISTE

KUBOTA

MODEL
MODELE
MODELL

F1900E·F1900

FRONT MOWER
TONDEUSE FRONTALE
FRONTMÄHER



Kubota

97698-40923
MAY
MAI 2008
MAI

MidWestTech | Kubota F1900E, F1900 Front Mower Parts Manual | Publication F1900 Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

MODEL:F1900E・F1900

PART NAME	PAGE
-A-	
ACCELERATOR LEVER	44
ACCELERATOR WIRE	44
ACCESSORIES	138
	140
	156
	172
ADAPTER	76
	77
	109
AIR CLEANER	42
AIR CLEANER ELEMENT	42
AIR CLEANER SUPPORT	42
ALTERNATOR	30
ALTERNATOR[COMPONENT PARTS]	31
ANTI-SCALP ROLLER	152
	168
	169
	189
	190
ARM,LIFT	113
ASSEMBLY MANUAL	138
	140
AUTO FUSE	60
	61
	62
	139
	140
	141
AXLE CASE	76
	77
	94
-B-	
BATTERY CABLE	54
BATTERY COVER	54
BATTERY GROUND CABLE	54
BATTERY SUPPORT	54
BEARING CASE COVER	10
BELT	27
	30
	146
	162
	182
	183
BELT COVER	147
BEVEL GEAR	72
	73
	92
	94
	96
	143
	174
	176
BEVEL GEAR CASE	143
	158
	174
	176
	177
BEVEL GEAR SHAFT	96
BEVEL GEAR SHAFT	143
	158
	174
	176
BLADE	144
	145
	159
	160
	178
	179
	180
	181
BLADE SHAFT	145
	160
	180
	181
BONNET	119
BONNET GRILLE	119
BRACKET	102
	104
BRACKET SEAT	123
BRAKE	81
	82
BRAKE COVER	81
	82
BRAKE DISK	71
BRAKE DRUM	81
	82
BRAKE PEDAL	86
	87
BRAKE PEDAL SHAFT	79
	80
	86
	87
BRAKE ROD	70
	83
	86
	87
BRAKE SHOE	81
	82
BREATHER PIPE	5
BRETHER ELEMENT	5
BULB	59
-C-	
CAM GEAR	12
CAMSHAFT	12
CAP,FUEL TANK	45
CARTRIDGE,OIL FILTER	7
	107
CENTER PIN	91
CENTER PULLEY	143
	158
	175
	177
CHANGE LEVER	89
CHANGE PEDAL	89
CLUTCH DISK	71
CLUTCH SHAFT	71
COMBINATION BOX	55
	57

Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

MODEL:F1900E・F1900

PART NAME	PAGE
CONNECTING ROD	13
CONNECTING ROD BEARING	13
CONTROL LEVER	84
CONTROL PLATE	75
CONTROL VALVE	109
CONTROL VALVE LEVER	109
	110
CONTROL VALVE[COMPONENT PARTS]	111
CONTROLLER	55
	57
COVER	26
	48
	66
	90
	120
	147
	148
	150
COVER(CONTROL FRAME)	184
CRANKCASE	1
CRANKPIN METAL	13
CRANKSHAFT	13
CRANKSHAFT GEAR	13
CRANKSHAFT METAL	10
	11
	14
CRUISE CONTROL LEVER	84
CRUISE CONTROL PLATE	75
CRUISE CONTROL SHAFT	84
CUSHION	42
	45
	48
	54
	119
	121
	122
	186
CYLINDER	113
CYLINDER HEAD	3
CYLINDER HEAD COVER	5
CYLINDER HEAD COVER GASKET	5
CYLINDER HEAD GASKET	3
CYLINDER HOSE	113
-D-	
DECAL	103
	105
	130
	131
	132
	134
	136
	142
	147
	148
	150
	157
	163
	165
	166
	184
DECAL	185
DELIVERY PIPE	106
DIFFERENTIAL	72
	73
DIFFERENTIAL CASE,FRONT	72
	73
DIFFERENTIAL CASE,REAR	92
DIFFERENTIAL GEAR	72
	73
	92
DIFFERENTIAL LOCK CLUTCH	74
DIFFERENTIAL LOCK PEDAL	88
DIFFERENTIAL LOCK SHAFT	74
DIFFERENTIAL LOCK WIRE	88
DIFFERENTIAL,REAR	92
DIPSTICK	8
	76
	77
DISCHARGE CHUTE	170
DISCHARGE COVER	153
	170
	191
	192
DRAG LINK	99
	100
DRAIN COCK	48
DRIVE SHAFT	65
	95
DUST PROOF RUBBER	49
DUSTPROOF COVER	62
DUSTPROOF PLATE	29
	49
DYNAMO	27
DYNAMO[COMPONENT PARTS]	28
	29
-E-	
ENGINE HOOK	3
ENGINE STOP LEVER	21
ENGINE STOP SOLENOID	50
ENGINE SUPPORT	117
	118
EXHAUST MANIFOLD	41
EXHAUST MANIFOLD GASKET	41
EXHAUST VALVE	38
EXHAUST VALVE GUIDE	3
-F-	
FAN	37
FAN BELT DRIVE PULLEY	27
	30
FAN PULLEY	37
FAN SHROUD	48
FAN,HST	69
FENDER	121
	122
FENDER COVER	121
	122
FLASHER UNIT	59

Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

MODEL:F1900E・F1900

PART NAME	PAGE
FLYWHEEL	15
FLYWHEEL COVER	43
FORK LEVER	19
FRAME	117
	118
	147
	148
	150
	163
	165
	166
FRICTION DISK	84
FRICTION PLATE	121
	122
FRONT AXLE	78
FRONT AXLE CASE	76
	77
	94
FRONT COVER	63
	184
FRONT FRAME	184
FRONT GAUGE WHEEL	151
	167
	187
	188
FRONT WHEEL	127
FRONT WHEEL CAP	128
	138
FRONT WHEEL SHAFT	151
	167
	187
	188
FUEL CAMSHAFT	16
FUEL FILTER	46
FUEL GAUGE SENSOR	45
FUEL PIPE	45
	46
	47
FUEL PUMP	46
FUEL PUMP COVER	26
FUEL TANK	45
FUEL TUBE	46
FUSE	60
	61
	62
	139
	140
FUSE BOX	60
	61
FUSIBLE LINK	139

-G-


GASKET, CYLINDER HEAD	3
GASKET, EXHAUST MANIFOLD	41
GASKET, INTAKE MANIFOLD	40
GASKET, MUFFLER	43
GASKET, WATER PUMP	36
GAUGE HOLDER	187
	188
GAUGE WHEEL PIN	152
GAUGE WHEEL PIN	168
GEAR CASE	4
	64
	143
GEAR CASE COVER	64
GEAR CASE GASKET	4
GLOW PLUG	23
GLOW PLUG CORD	23
GOVERNOR	19
GOVERNOR CASE	16
GOVERNOR LEVER	20
GREASE NIPPLE	66
	69
	85
	91
	95
	96
	114
	115
	142
	144
	145
	146
	151
	157
	159
	160
	162
	167
	178
	179
	180
	181
	182
	183
	187
	188
	189
	190
GRIP	44

-H-

HAZARD LIGHT	59
HEAD COVER GASKET	5
HEAD LIGHT	55
	57
HEAD LIGHT BULB	55
	57
HINGE PIN	155
	171
HOLDER	90
	155
	171
	194
HOOD	119
HOOD GRILLE	119
HOUR METER	55
	57
HST	66
HST FAN	69
HST PIPE	107

Order the manual at mid-west-tech.com >

A510 STOP SOLENOID
SOLENOIDE D'ARRET
STOPSOLENOID

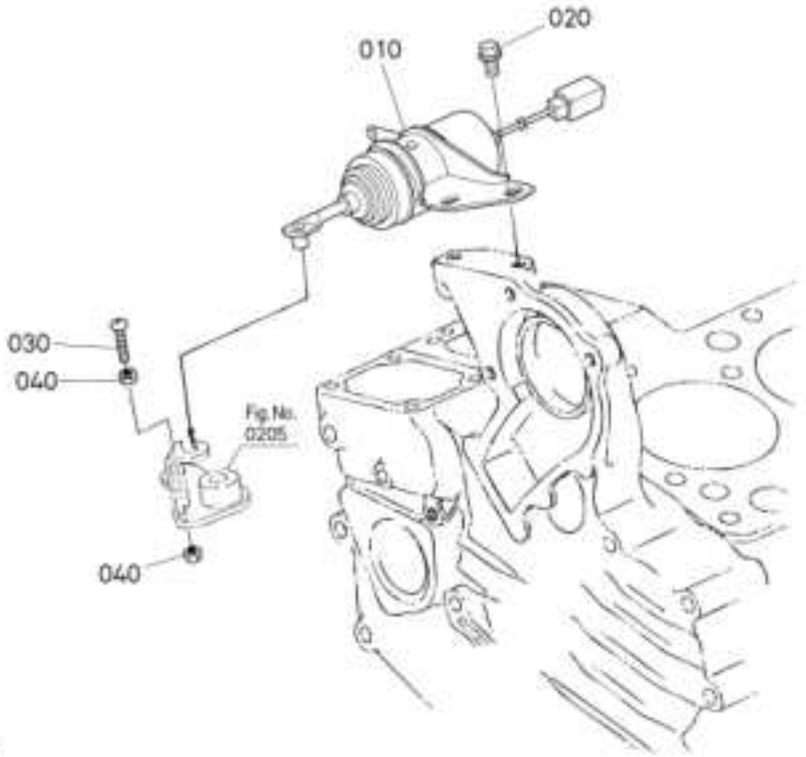

A:F1900E(FR) B:F1900E(UK) C:F1900(FR) D:F1900(UK)


REF.No. / RIS.Nr. / 引当番号	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S.No. Q'TE/No.S. STUECK/S.Nr. A	B	C	D	I.C.	REMARKS REMARQUES BEMERKUNGEN
010	16851-6001-0	SOLENOID, STOP	SOLENOIDE D'ARRET	STOPSOLENOID	1 <=11043	1 <=10813	1 <=11013	1 <=11198		ORDER BY REF.No.010 NEW PART
010	16851-6001-2	SOLENOID, STOP	SOLENOIDE D'ARRET	STOPSOLENOID	1 >=11044	1 >=10814	1 >=11014	1 >=11199	↔	ORDER BY REF.No.010 NEW PART
010	16851-6001-3	SOLENOID, STOP	SOLENOIDE D'ARRET	STOPSOLENOID	1 >=13089	1 >=10834	1 >=11099	1 >=11271	←	ORDER BY REF.No.010 NEW PART
010	16851-6001-4	SOLENOID, STOP	SOLENOIDE D'ARRET	STOPSOLENOID	1 >=11128	1 >=10861	1 >=11151	1 >=11392	←	
020	01754-50612	BOLT, FLANGE	VIS DE BUTEE	FLANSCHEN-BOLZEN	2	2	2	2		
030	03014-50635	SCREW, PAN-HEAD	VIS	SCHRAUBE	1	1	1	1		
040	02014-50060	NUT	ECROU	MUTTER	2	2	2	2		

↔ Interchangeable ≠ not interchangeable ← new for old →old for new


MidWestTech | Kubota F1900E, F1900 Front Mower Parts Manual | Publication F1900 Order the manual at mid-west-tech.com >

H10101 STEERING WHEEL / VOLANT DE DIRECTION / LENKRAD


NOTE:ORDER BY REF.No.050(K3311-4132-5) AND 100(K3311-4135-3),SET

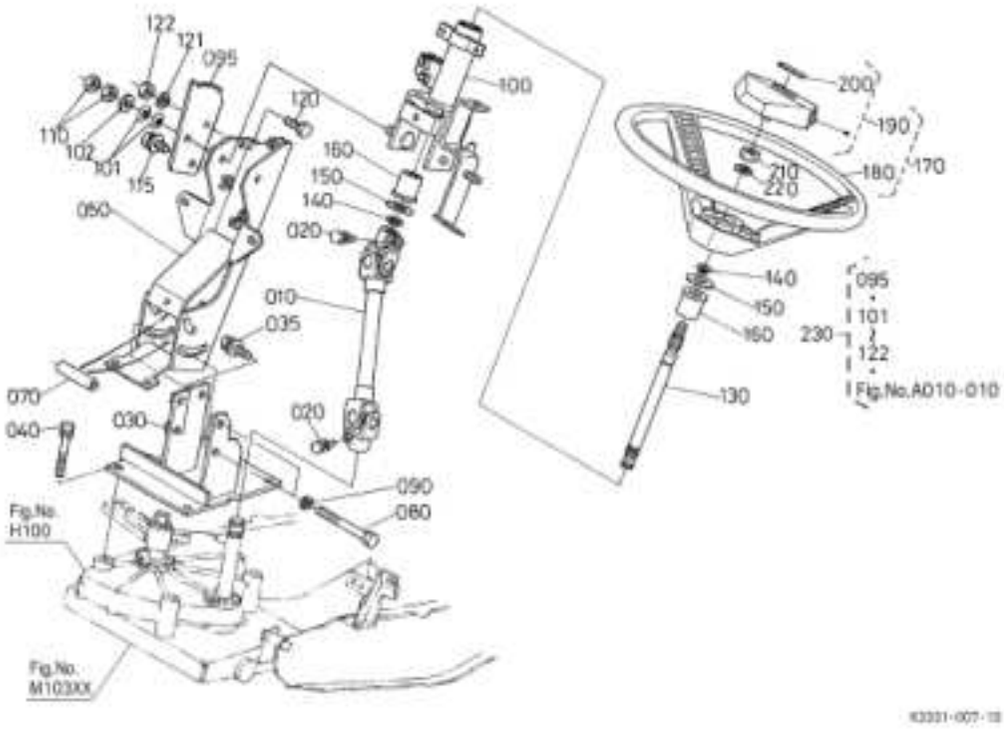

OLD PART
050 K3311-4132-0
110 02118-50100
120 01754-50818

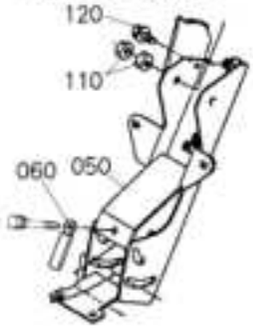

030 K3311-4131-0

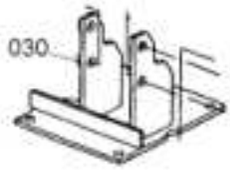


A:F1900E(FR) B:F1900E(UK) C:F1900(FR) D:F1900(UK)

REF.No. / PIC.No. / SCH.No.	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S.No. Q'TE/No.S. STUEK/S.Nr. A	B	C	D	I.C.	REMARKS REMARQUES BEMERKUNGEN
010	66101-4131-2	ASSY SHAFT,JOINT	ARBRE CARDAN COMP.	GRP KUPPLUNGSWELLE	1	1	-	-		
020	01123-50825	BOLT	VIS	BOLZEN	2	2	-	-		
030	K3311-4131-0	BRACKET	PALIER	HALTER	1 <=10214	1 <=10144	-	-		
030	K3311-4131-2	BRACKET	PALIER	HALTER	1 >=10215	1 >=10145	-	-	←	
030	K3311-4131-3	BRACKET	PALIER	HALTER	1 >=10317	1 >=10223	-	-	←	
035	01135-61020	BOLT	VIS	BOLZEN	1 >=10317	1 >=10223	-	-		
040	01133-51070	BOLT	VIS	BOLZEN	4	4	-	-		
050	K3311-4132-0	SUPPORT,STRG. POST	SUPPORT	TRAEGER	1 <=10241	1 <=10196	-	-		SEE NOTE
050	K3311-4132-3	SUPPORT,STRG. POST	SUPPORT	TRAEGER	1 >=10242	1 >=10197	-	-	≠	
050	K3311-4132-4	SUPPORT,STRG. POST	SUPPORT	TRAEGER	1 >=10317	1 >=10223	-	-	←	
050	K3311-4132-5	SUPPORT,STRG. POST	SUPPORT	TRAEGER	1 >=10431	1 >=10254	-	-	←	
050	K3311-4132-6	SUPPORT,STRG. POST	SUPPORT	TRAEGER	1 >=11214	1 >=10899	-	-	←	
060	13824-6759-0	CLAMP,CORD	ATTACHE-FILS	KABELKLEMME	2 <=11188	2 <=10890	-	-		
070	K3311-4133-0	COLLAR	COLLIER	HUELSE	2	2	-	-		
080	01173-51090	BOLT	VIS	BOLZEN	2	2	-	-		
090	04512-60100	WASHER,SPRING	RONDELLE GROWER	FEDERRING	2	2	-	-		
095	K3311-4134-0	PLATE	PLAQUE	PLATTE	1 >=10242	1 >=10197	-	-		
100	K3311-4135-0	POST,STEERING	COLONNE DE DIRECTION	LENKSAEULE	1 <=10241	1 <=10196	-	-		
100	K3311-4135-2	POST,STEERING	COLONNE DE DIRECTION	LENKSAEULE	1 >=10242	1 >=10197	-	-	≠	
100	K3311-4135-3	POST,STEERING	COLONNE DE DIRECTION	LENKSAEULE	1 >=10486	1 >=10261	-	-	←	
101	33251-8395-0	WASHER,SPRING	RONDELLE GROWER	FEDERRING	2	2	-	-		
102	04013-60100	WASHER,PLAIN	RONDELLE FREIN	SCHEIBE	1	1	-	-		
110	02118-50100	NUT	ECROU	MUTTER	2 <=10241	2 <=10196	-	-		
110	02112-50100	NUT	ECROU	MUTTER	2 >=10242	2 >=10197	-	-	≠	
115	01133-51020	BOLT	VIS	BOLZEN	1 >=10242	1 >=10197	-	-		
120	01754-50818	BOLT,FLANGE	VIS DE BUTEE	FLANSCHEN-BOLZEN	1 <=10241	1 <=10196	-	-		
120	01153-50820	BOLT	VIS	BOLZEN	1 >=10242	1 >=10197	-	-	≠	
121	04512-60080	WASHER,SPRING	RONDELLE GROWER	FEDERRING	1 >=10242	1 >=10197	-	-		
122	02114-50080	NUT	ECROU	MUTTER	1 >=10242	1 >=10197	-	-		

↔ Interchangeable ≠ not interchangeable ← new for old →old for new

MidWestTech | Kubota F1900E, F1900 Front Mower Parts Manual | Publication F1900 Order the manual at mid-west-tech.com >

L10401 MOWER LINK
CHAINON DE FAUCHEUR
RASENMAEHERSCHUBSTANGE

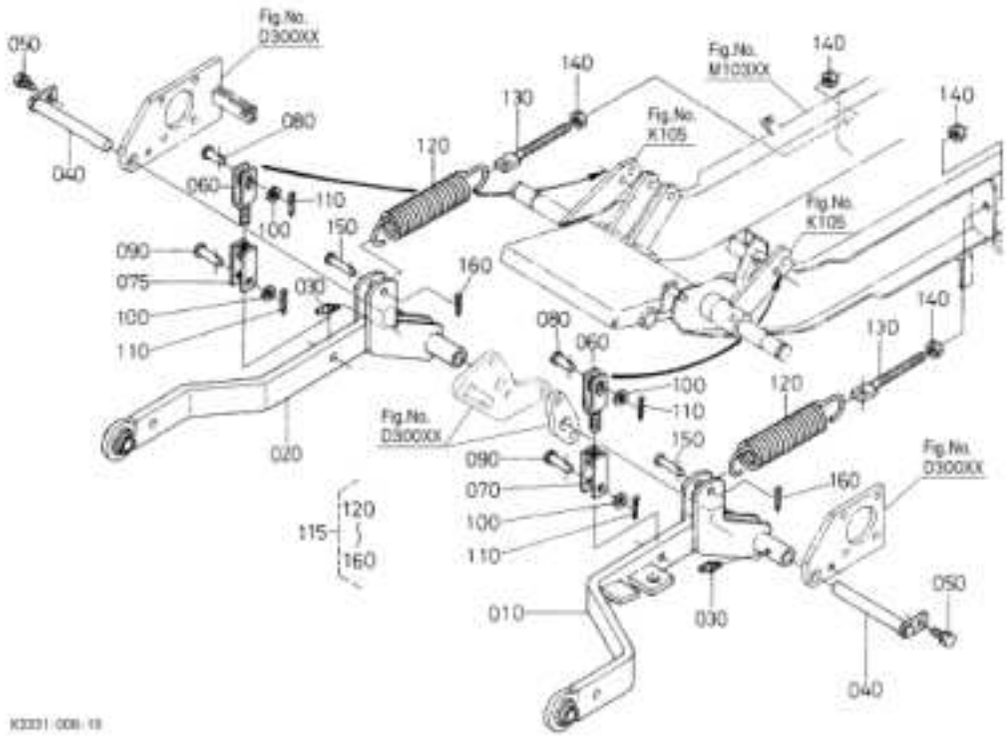

A:F1900E(FR) B:F1900E(UK) C:F1900(FR) D:F1900(UK)

REF.No. POS.No. 引当番	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S.No. Q'TE/No.S. STUECK/S.Nr. A	B	C	D	I.C.	REMARKS REMARQUES BEMERKUNGEN
010	K3311-7711-2	LINK LH	BIELLETTE G.	STANGE LS	1	1	–	–		
020	K3311-7712-2	LINK RH	BIELLETTE D.	STANGE RS	1	1	–	–		
030	06613-10675	NIPPLE, GREASE	GRAISSEUR	SCHMIERNIPPEL	2	2	–	–		
040	K3311-7713-0	SHAFT, FULCRUM	ARBRE D'APPUI	WELLE	2	2	–	–		
050	01133-51220	BOLT	VIS	BOLZEN	2	2	–	–		
060	K3311-7714-0	LINK, LIFT	CHAINON DE LEVAGE	AUFTRIEBLENK	2	2	–	–		
070	K3311-7715-0	LINK, LIFT	CHAINON DE LEVAGE	AUFTRIEBLENK	2 <=11175	2 <=10886	–	–		ORDER BY REF. No. 070 NEW PART & 075 (SET)
070	K3311-7715-2	LINK, LIFT LH	CHAINON DE LEVAGE G.	STANGE LS	1 >=11176	1 >=10887	–	–	←	
075	K3311-7716-0	LINK, LIFT RH	CHAINON DE LEVAGE D.	STANGE RS	1 >=11176	1 >=10887	–	–		
080	05122-51230	PIN, JOINT	GOUPILLE	STIFT	2	2	–	–		
090	05122-51240	PIN, JOINT	GOUPILLE	STIFT	2	2	–	–		
100	04013-60120	WASHER, PLAIN	RONDELLE FREIN	SCHEIBE	4	4	–	–		
110	05511-50425	PIN, SPLIT	GOUPILLE FENDUE	SPLINTSTIFT	4	4	–	–		
115	K3351-8170-0	KIT, SPRING, LIFT	JEU DE RESSORT	AUS. HEBEFEDER	2	2	–	–		
120	76544-6117-0	SPRING, LIFT	RESSORT	HEBEFEDER	2 <=10340	2 <=10225	–	–		
120	K3311-6119-0	SPRING	RESSORT	FRUEHLING	2 >=10341	2 >=10226	–	–	↔	
130	76544-6119-0	HOOK, SPRING	CROCHET	HAKEN	2 <=10340	2 <=10225	–	–		
130	K3311-6117-0	ROD	BIELLETTE	STANGEN	2 >=10341	2 >=10226	–	–	↔	
140	02174-50140	NUT	ECROU	MUTTER	4 <=10340	4 <=10225	–	–		
140	02154-50140	NUT	ECROU	MUTTER	4 >=10341	4 >=10226	–	–	↔	
150	05122-51040	PIN, JOINT	GOUPILLE	STIFT	2	2	–	–		
160	05511-50318	PIN, SPLIT	GOUPILLE FENDUE	SPLINTSTIFT	2	2	–	–		

↔ Interchangeable ≠ not interchangeable ← new for old →old for new

MidWestTech | Kubota F1900E, F1900 Front Mower Parts Manual | Publication F1900 Order the manual at mid-west-tech.com >