D-155, D-179, D-206, D-239, D-268, D-310 & D-358

Engine & Fuel System

Service Manual

GSS-1377-1

CASE IH AGRICULTURE

MidWestTech | Case D-155, D-179, D-206, D-239, D-268, D-310, D-358 Fuel System & Engine Service Manual | Publication GSS-13771

Order the manual at mid-west-tech.com >

Section 1

ENGINE

Contents

	Page
GENERAL SHOP PRACTICES FOR ENGINE OVERHAUL	XV
SPECIFICATIONS	1-4
Engine Application, RPM, Pump Timing, and Advance Data	1-10
Special Nut and Bolt Torque Data	1-18
MOUNTING THE ENGINE IN THE STAND	1-22
CYLINDER HEAD	
General	1-23
Removal	1-23
Reconditioning Valve and Valve Seats	1-23
Valve Seat Inserts	1-24
Nozzle Sleeves	1-25
Valve Guides	1-26
Valve Assembly	1-26
Valve Lever Assembly	1-26
Cylinder Head Installation	1-27
Sequence for Torquing Cylinder Head	1-27
Retightening Cylinder Head by Row-Torque Procedure	1-28
Valve Lash Adjustment	1-29
Valve Timing (All Engines)	1-31
Checking Compression	1-31
CRANKCASE	
Water Pump Removal	1-32
Tachometer Drive	1-32
Removal of Crankshaft Front Pulley	1-32
Installation Procedure for Crankshaft Front Oil Seal	1-35
Removing Camshaft	1-37
Camshaft	1-38
Procedure for Line Boring Camshaft Bushings	1-40
Replacing Camshaft Drive Gear	1-41
Crankshaft Gear	1-42
Idler Gear	1-42
Injection Pump Drive Gear	1-42
Rear Oil Seal	1-43
Sealing Bar	1-43

MidWestTech | Case D-155, D-179, D-206, D-239, D-268, D-310, D-358 Fuel System & Engi... Order the manual at mid-west-tech.com >

Crankshaft 1-44
Fitting Crankshaft Bearing Caps 1-45
Crankshaft Straightening 1-48
Crankshaft Regrinding 1-48
Cylinder Sleeves 1-50
Sleeve Height 1-51
Pistons 1-52
Piston Identification 1-53
Ribbon Fitting Pistons 1-54
Piston Rings 1-54
Connecting Rods 1-55
Reassembly of Connecting Rod, Piston and Piston Pin 1-57

ENGINE BALANCER (D-206, D-239, D-246 and D-268 ONLY)

Description 1-58
Balancer Operation as Compared with Engines without the Balancer 1-59
Removal 1-60
Specifications 1-61
Disassembly 1-61
Inspection and Repair 1-62
Reassembly of the Balancer 1-63
Crankshaft Balancer Drive Gear Replacement
Welded on Type 1-65
Shrink Fit Type 1-67
Installation of Balancer 1-68

LUBRICATION SYSTEM

Oil Filter 1-69
External Pump
General 1-69
Removal and Disassembly 1-69
Inspection 1-71
Reassembly and Installation 1-71
Relief Valve Assembly 1-71
Instructions for Updating External Type Engine Oil Pump 1-72
Internal Pump
General 1-75
Removal 1-75
Disassembly of the Relief Valve 1-76
Disassembly of Oil Pump 1-76
Inspection 1-77
Reassembly and Installation 1-78


MidWestTech | Case D-155, D-179, D-206, D-239, D-268, D-310, D-358 Fuel System & Engi... Order the manual at mid-west-tech.com >

ENGINE COOLING SYSTEM

Water Pump 1-80
Disassembly 1-80
Reassembly 1-81
Thermostat 1-83
Oil Cooler (Cotton Picker) 1-83
Ethylene Glycol (Antifreeze) Contamination
General Information 1-84
Guidelines for Obtaining Engine Oil Sample 1-84
Leakage Test Procedure 1-85
Possible Location of Leakage 1-85
Cleaning Procedure 1-86
Cylinder Head and Crankcase Coolant Leak Repair 1-87
Sealing by Plugging 1-87

FLYWHEEL RESURFACING 1-88

MidWestTech | Case D-155, D-179, D-206, D-239, D-268, D-310, D-358 Fuel System & Engi... Order the manual at mid-west-tech.com >

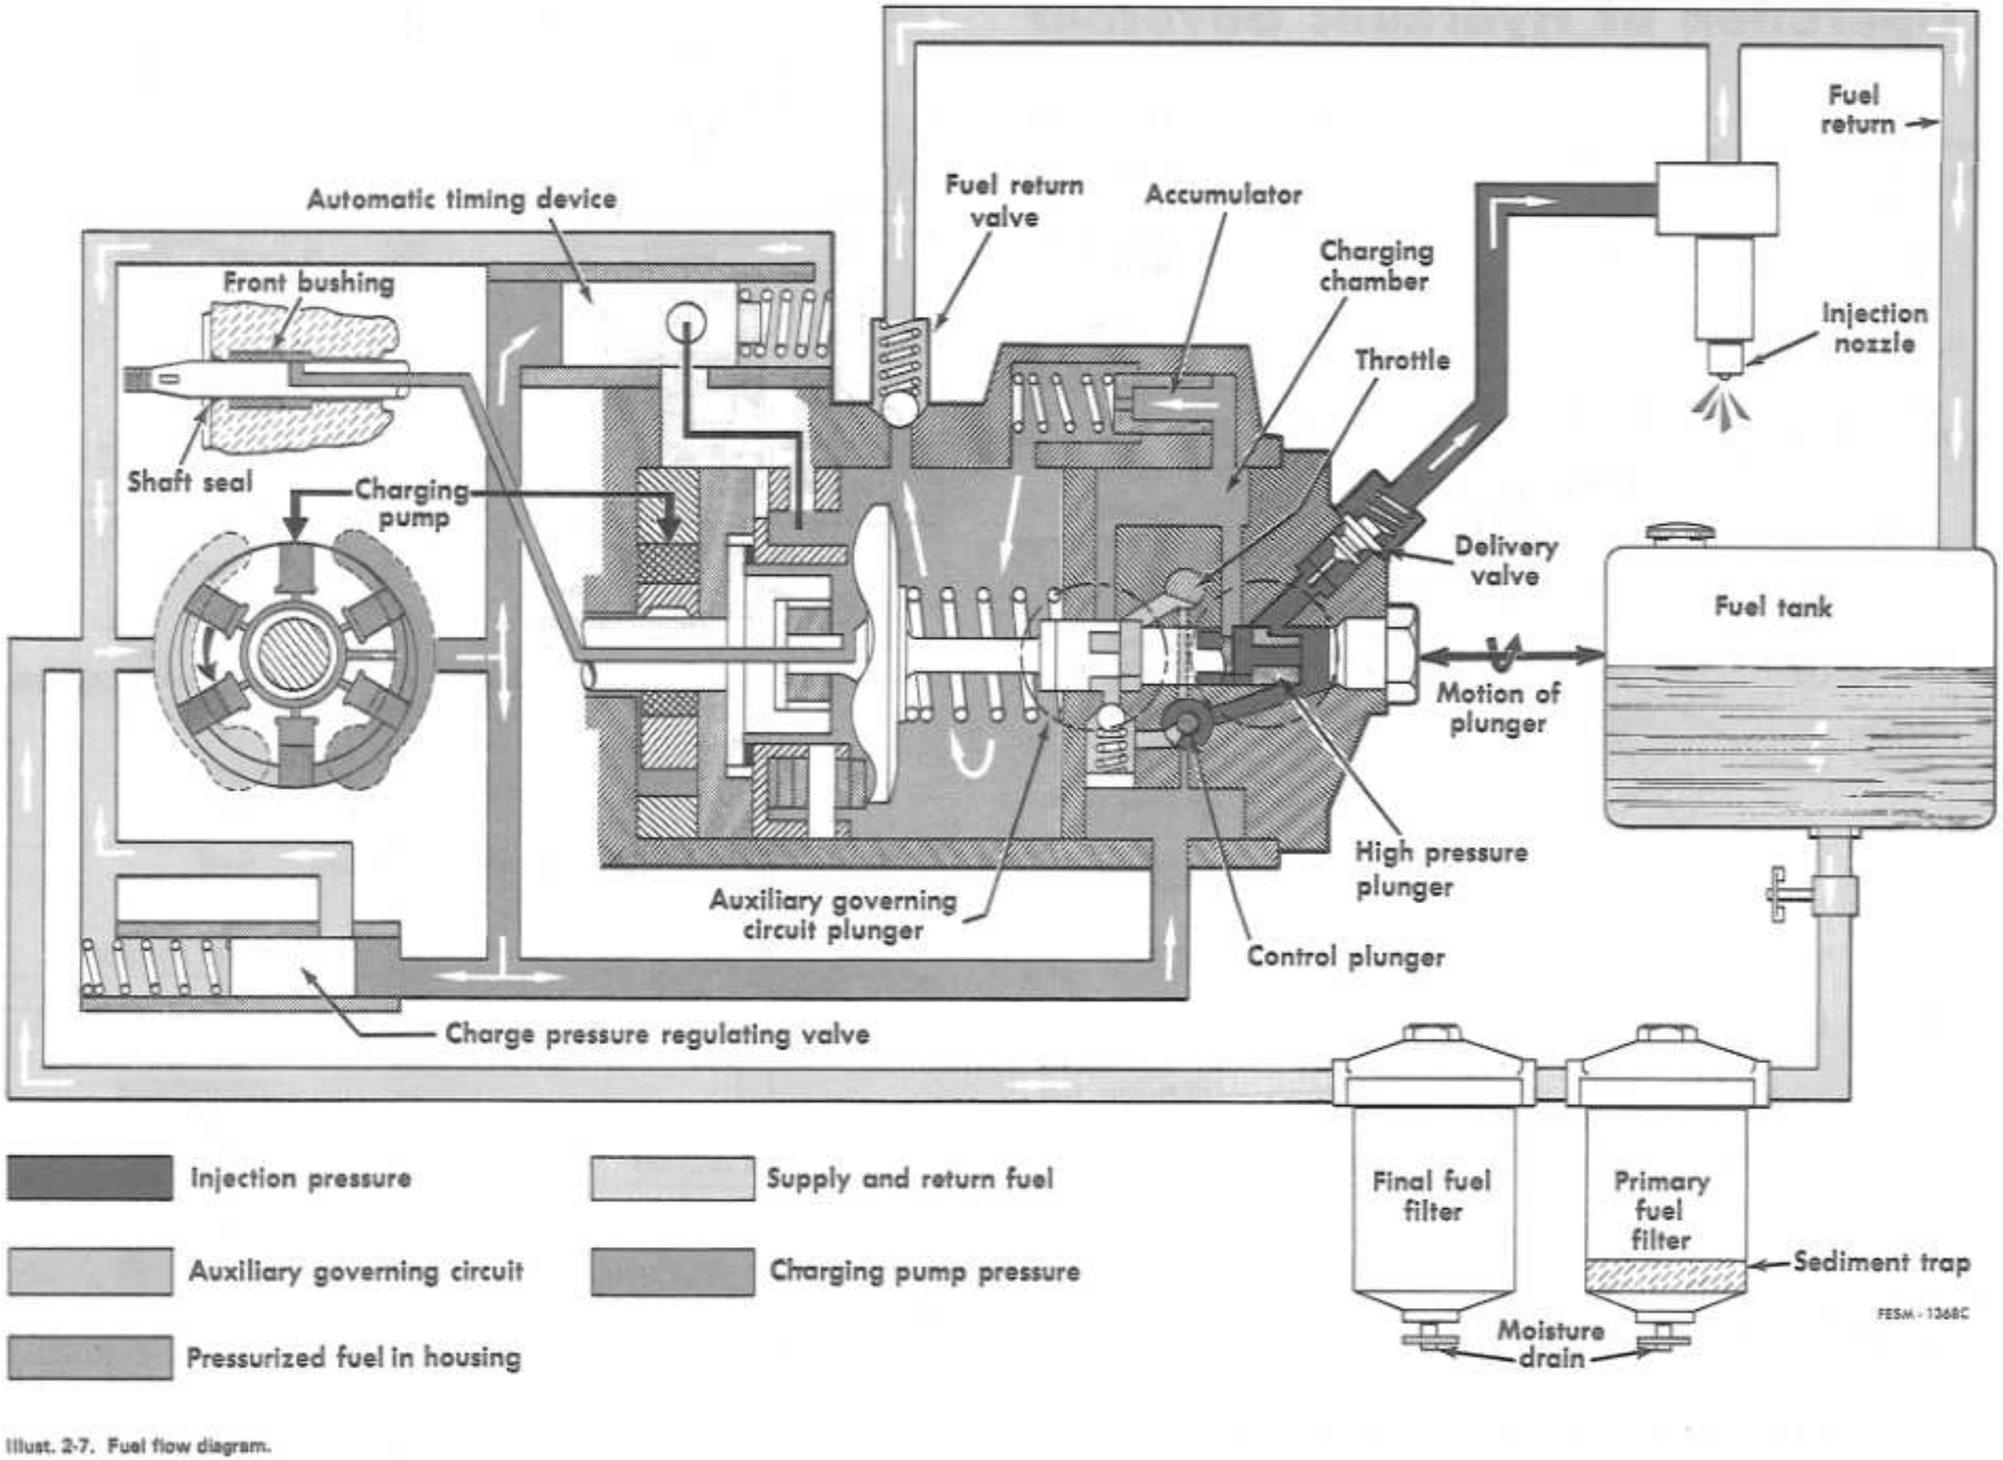

Illust. 2-7. Fuel flow diagram.

Order the manual at mid-west-tech.com >