544 & 656 Series Hydrostatic Drive Tractors H70 & H80

Service Manual

GSS–1397

CASE IH AGRICULTURE

MidWestTech | Case 544, 656, Hydro H70, H80 Tractor Service Manual | Publication GSS-1397

Order the manual at mid-west-tech.com >

CONTENTS

Page

Special Service Tools Required 5

Standard Torque Data for Nuts and Bolts 6

Specifications 7
Speed Ratio Charts 9

Principles of Hydrostatics
General 10
How It Works 12
Variable Displacement Pump and Variable Displacement Motor 12
Servo Cylinders 14
Center Section 15

Operating Principles
Hand Controlled Models 16
Neutral 16
Forward (Tractor Moving Forward) 16
Reverse (Tractor Moving Rearward) 17
Forward (Tractor Decelerating) 17
Foot Controlled Models 18
Neutral 18
Forward 18
Reverse 19
Forward (Tractor Decelerating) 19

Familiarization and Component Identification 20

Controlling the Tractor (Hand Controlled Models)
High-Low Range Selector 24
Speed-Ratio Control 24
Foot-N-Inch Valve and Drive Control Valve 25
Foot-N-Inch Valve 26
Drive Control Valve 26

Controlling the Tractor (Foot Controlled Models)
General 27
Dump Valve 27
Two Position Deceleration Valve 27
Controls 28

Unit Service
Hydrostatic Transmission 30
Removal 30
Disassembly 32
Cleaning Inspection and Repair 42
Reassembly 46
Flex Plate Installation 60
Clean Up of Entire Hydraulic System and Power Train 61

Servicing Components
Servo Cylinders 63
Removal 63
Disassembly 63
Inspection 64
Reassembly 64

MidWestTech | Case 544, 656, Hydro H70, H80 Tractor Service Manual | Publication GSS-... Order the manual at mid-west-tech.com >

Page

Charge and Servo Pump 64
Servo Relief Valve Improvements 64
Removal 65
Disassembly 66
Inspection 66
Reassembly 66
Center Section Components 68
Check Valves, High Pressure Relief Valves and Shuttle Valve 68
Importance of Proper Torque on High Pressure Relief Valves 68
Replacing Relief Valves 68
Replacing Check Valves 69
Replacing Shuttle Valve 70
Multiple Valve Body 70
Drive Control Valve 72
Removal (F-Models) 72
Removal (I-Models) 72
Service 72
Foot-N-Inch Valve 73

Range Transmission and MPH Drive 74

Hydraulic and Differential Lubrication Circuits 75

Adjustments

Hand Controlled Models 76
Neutral Adjustment for Servo Control and Linkage 76
Foot-N-Inch Valve 77
Drive Control Valve 77
Safety Start Switch (F-Models) 79
Safety Start Switch (I-Models) 79
Foot Controlled Models 79
Adjusting for Neutral 79
Pedal Adjustments 80
Dump Valve and Safety Starting Switch 81
Two Position Deceleration Valve 82

Testing and Trouble Shooting


General Information 83
Importance of Excluding Air 83
Symptoms of an Aerated System 83
Step by Step Check for Causes of Air Leaks 84
Checking Pressures and Charge Pump Flow 86
General 86
Method of Checking Drive Pressure 86
Charge Pump Pressure and Flow 87
Charge Pump Flow Used in Trouble Shooting 89
Servo Pump Pressure 93
Deceleration Pressure (Hand Control) 93
Testing Other Components 94
Checking Time Delay of Anti-Coast Valve 94
Drive Control Valve 95
Drive Control and Foot-N-Inch Valve Checking by Elimination 96
Trouble Shooting 97
General Information 100

Safety Starting Procedure 101

MidWestTech | Case 544, 656, Hydro H70, H80 Tractor Service Manual | Publication GSS-... Order the manual at mid-west-tech.com >

FOLDOUT NO. 2

656 HYDROSTATIC TRANSMISSION AND IPTO DRIVE

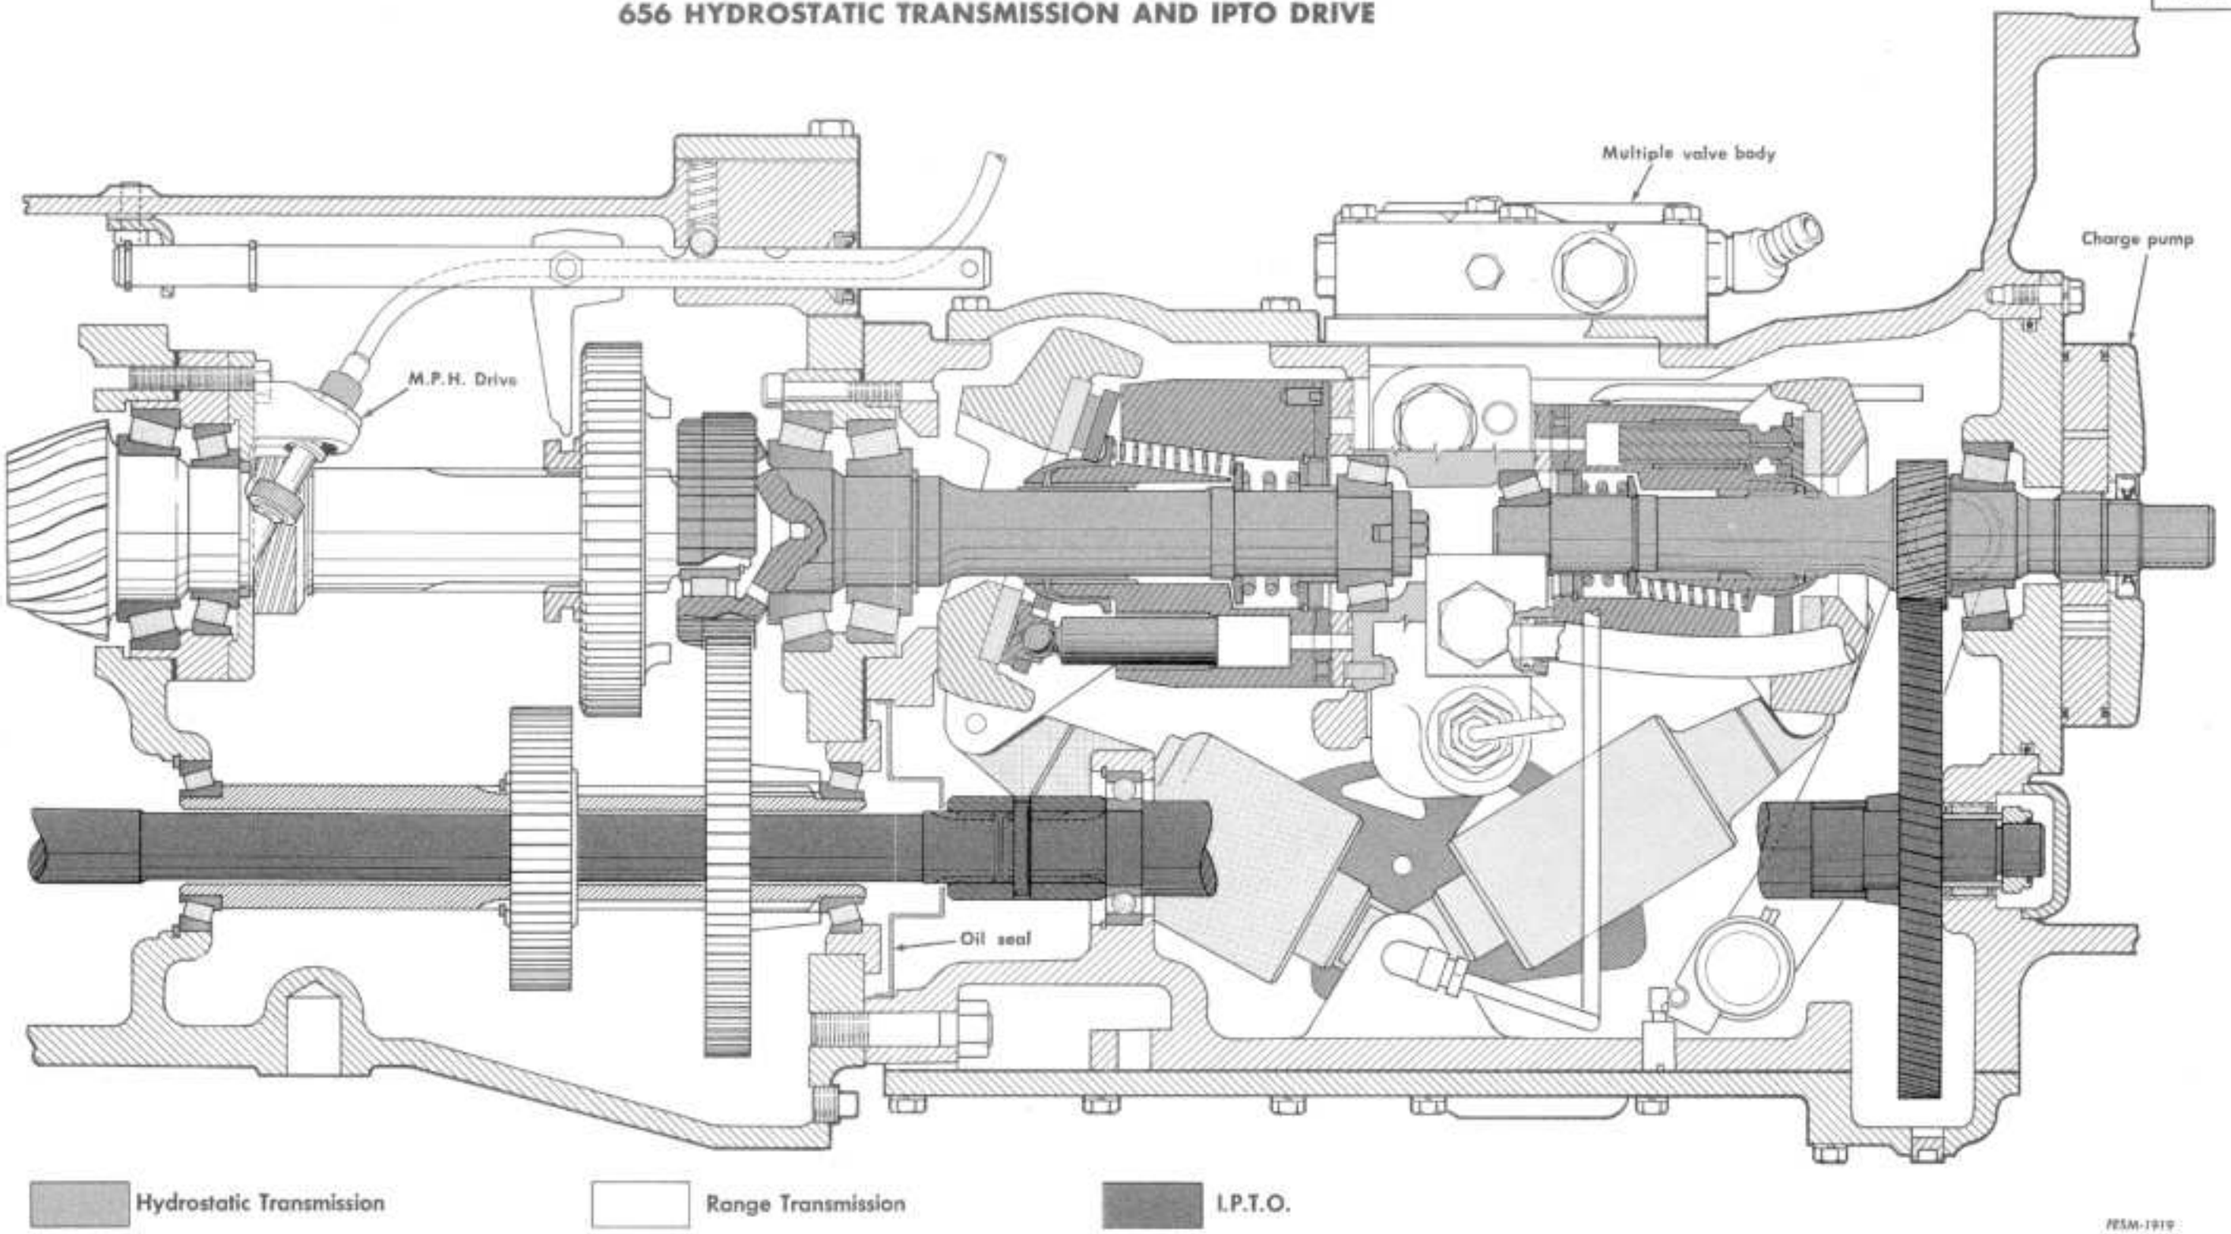

Order the manual at mid-west-tech.com >