Chassis
454, 464, 484, 574, 584, 674, 684, 784, 884, 84 Hydro & 385 Tractor

Service Manual

GSS-1416B

CASE IH AGRICULTURE

Order the manual at mid-west-tech.com >


Section 2

FRONT END, AXLES, AND WHEELS


CONTENTS


	Page
STRAIGHT AND SWEPT BACK FRONT AXLES	2-3
Steering Knuckle	2-8
Wheel Hub	2-10
Steering Cylinder	2-12
CAST I-BEAM AXLE	2-16
Wheel Hub	2-20
Steering Cylinder	2-22
KIMCO FRONT DRIVE AXLE	2-24
Swivel Housing	2-27
Axle Housing	2-32
Differential Assembly	2-37
Steering Components	2-43
Multi-friction clutch	2-45
Control Lever and Linkage	2-54
Propeller Shafts and Pillow Block	2-55
ZF ALL WHEEL DRIVE AXLE	2-58
Axle Pivot bushing	2-58
Differential Assembly	2-61
Pinion Shaft Oil Seal	2-72
Axle Knuckle Assembly	2-73
Axle Shaft Bushing	2-74
Wheel Hub Assembly	2-78
Gear Box Assembly	2-88
Gear Box Control Lever Adjustment	2-101
All Wheel Drive Shaft	2-102
Steering Cylinder Adjustment	2-106
Steering Stop Adjustment	2-107
FRONT WHEEL ALIGNMENT	SEE SECTION 3 – STEERING


MidWestTech | Case Chassis 454, 464, 484, 574, 584, 674, 684, 784, 884, 84 Hydro, 385 Tr... Order the manual at mid-west-tech.com >

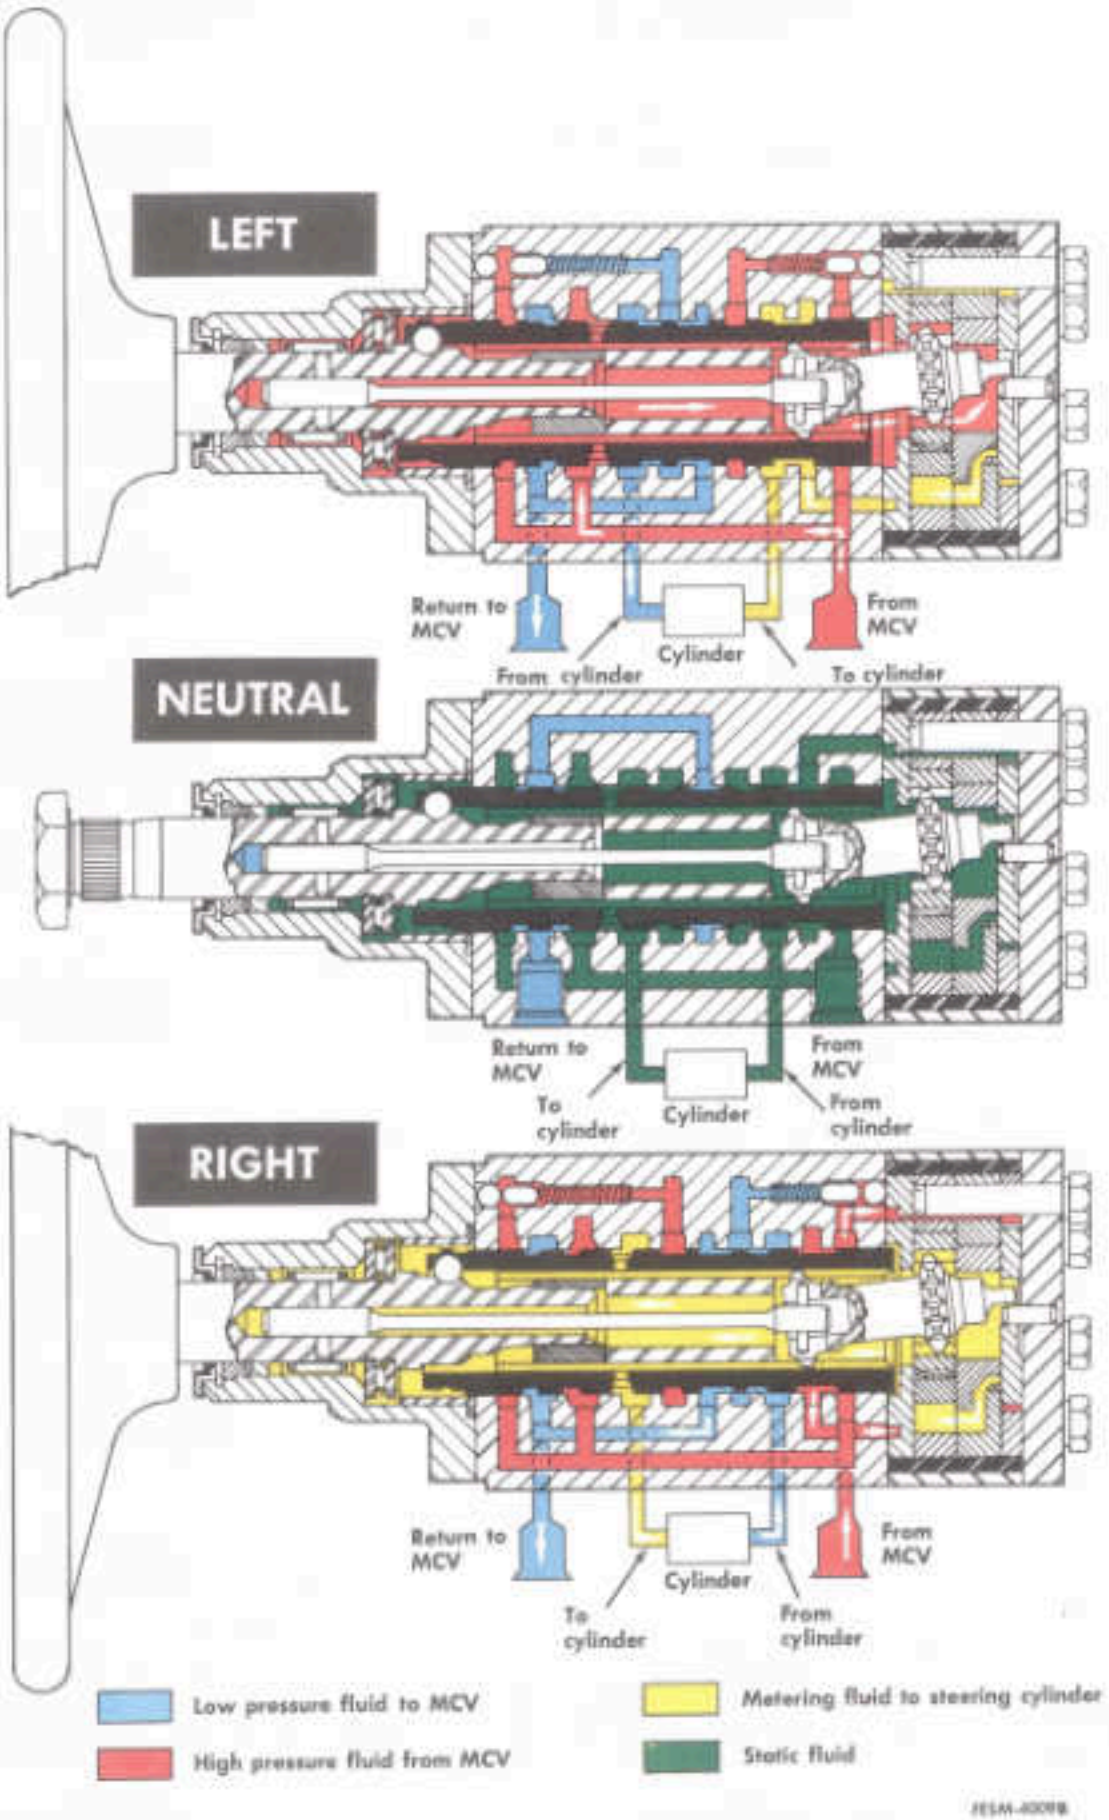

MidWestTech | Case Chassis 454, 464, 484, 574, 584, 674, 684, 784, 884, 84 Hydro, 385 Tr... Order the manual at mid-west-tech.com >

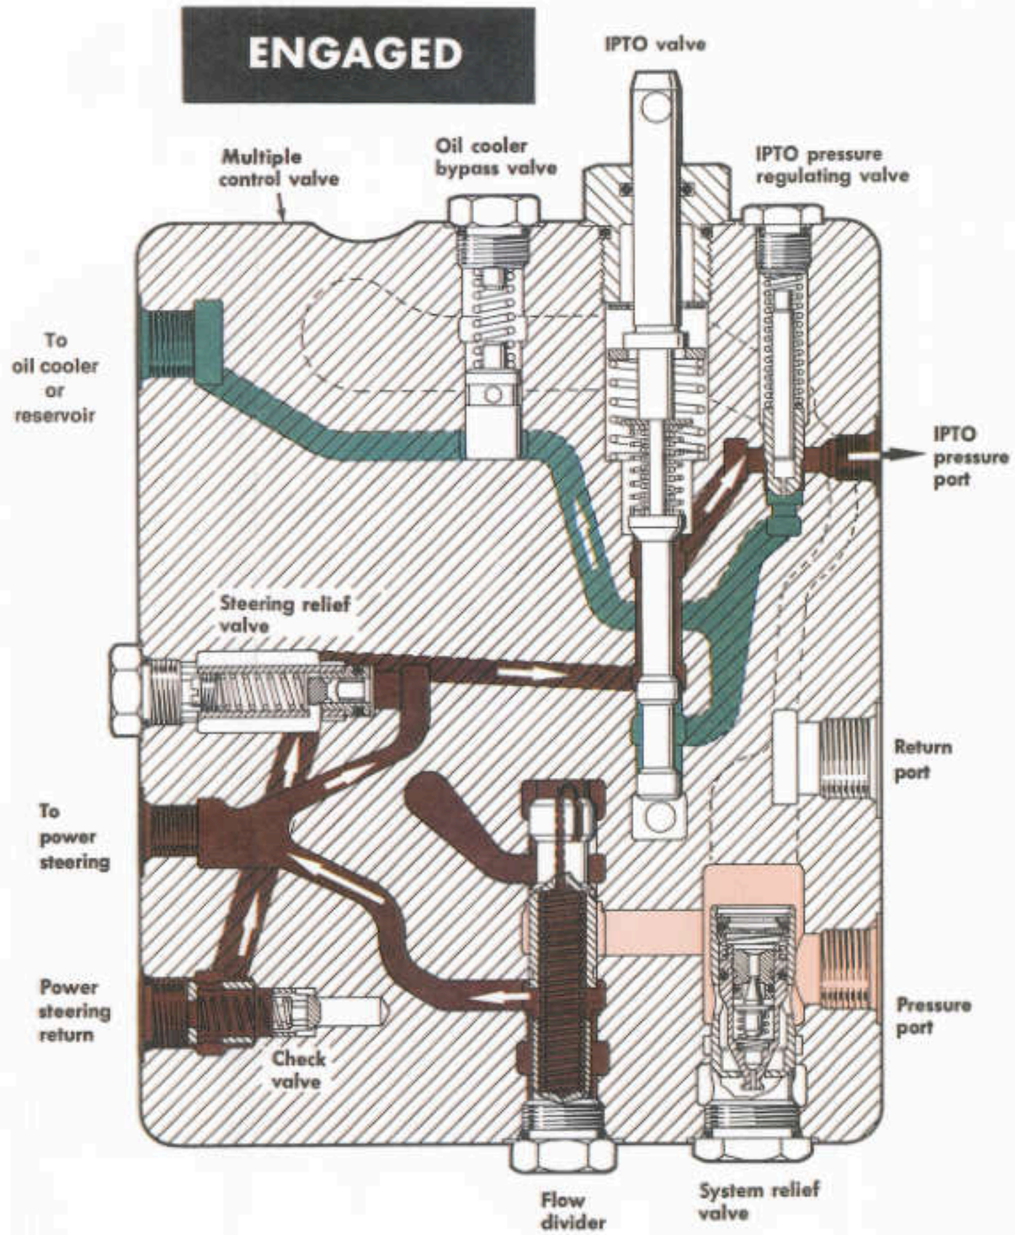

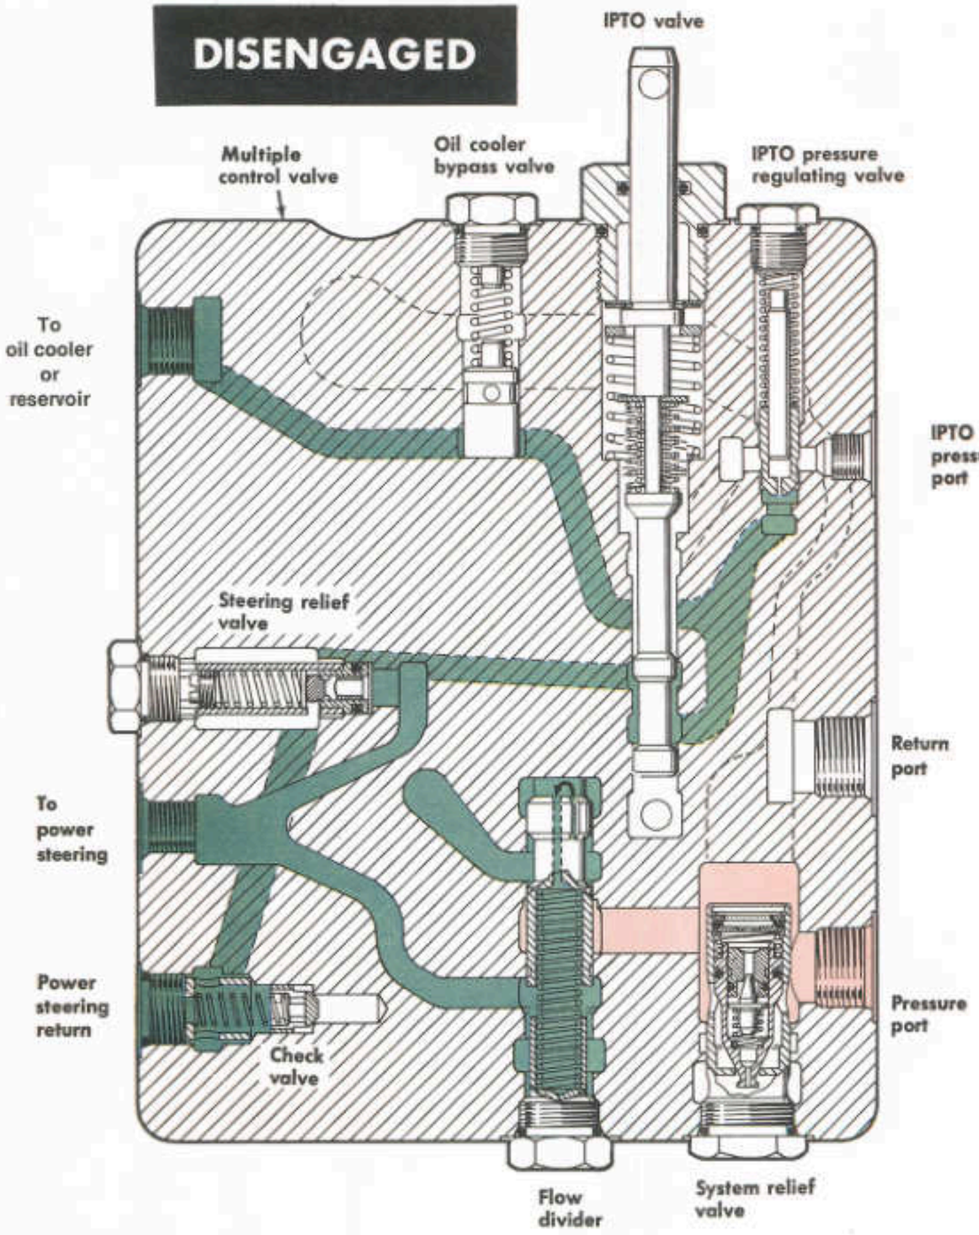

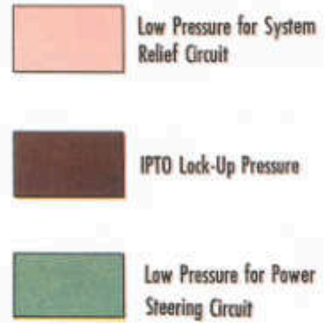

FESM-4062A

POWER TAKE-OFF OPERATION

FOLDOUT NO. 3

Order the manual at mid-west-tech.com >