Chassis
4366, 4386, 4568, 4586
and 4786 Tractors

Service Manual

GSS-1445-1

CASE IH AGRICULTURE

MidWestTech | Case Chassis 4366, 4386, 4568, 4586, 4786 Tractor Service Manual | Publication GSS-14451

Order the manual at mid-west-tech.com >

Section 1

CAB, AIR CONDITIONING AND SPLITTING THE TRACTOR

Contents


	Page
CAB	
4366 and 4568	1-2
4386, 4586 and 4786	1-4
AIR CONDITIONING	
Specifications	1-6
Special Torques	1-7
Components	1-8
SPLITTING THE TRACTOR	1-10
ADJUSTMENTS	
Throttle Lever	1-14
Solenoid Decelerator	1-15
Decelerator Pedal	1-15

MidWestTech | Case Chassis 4366, 4386, 4568, 4586, 4786 Tractor Service Manual | Publi... Order the manual at mid-west-tech.com >

4366 & 4386
CUTAWAY VIEW OF TRANSMISSION

FOLDOUT NO. 2

1. Input Shaft
2. Seal
3. Drive Gear 40-T
4. PTO Gear 45-T
5. 4th Gear 37-T
6. 3rd Gear 33-T
7. 2nd Gear 29-T
8. 1st Gear 25-T
9. Reverse Gear 22-T
10. Hi-Lo Shift Fork
11. Hi-Lo Shift Rail
12. Hi-Lo Shift Collar
13. Output Shaft
14. Low Speed Gear 42-T
15. Hi-Speed Gear 28-T
16. Reverse Gear 42-T
17. Shift Collar
18. First Gear 44-T
19. Second Gear 40-T
20. Shift Collar
21. Third Gear 36-T
22. 4th Gear 32-T
23. Shift Collar
24. PTO Gear 47-T
25. Drive Gear 40-T
26. Bell Housing
27. Idler Gear Shaft
28. Reverse Gear 42-T
29. Reverse Idler Gear 27-T
30. High Speed Gear 28-T
31. Auxiliary Countershaft Gear 32-T
32. Low Speed Gear 42-T
33. Auxiliary Countershaft Gear 15-T
34. Gear Washer
35. Idler Gear Bearing
36. Plug

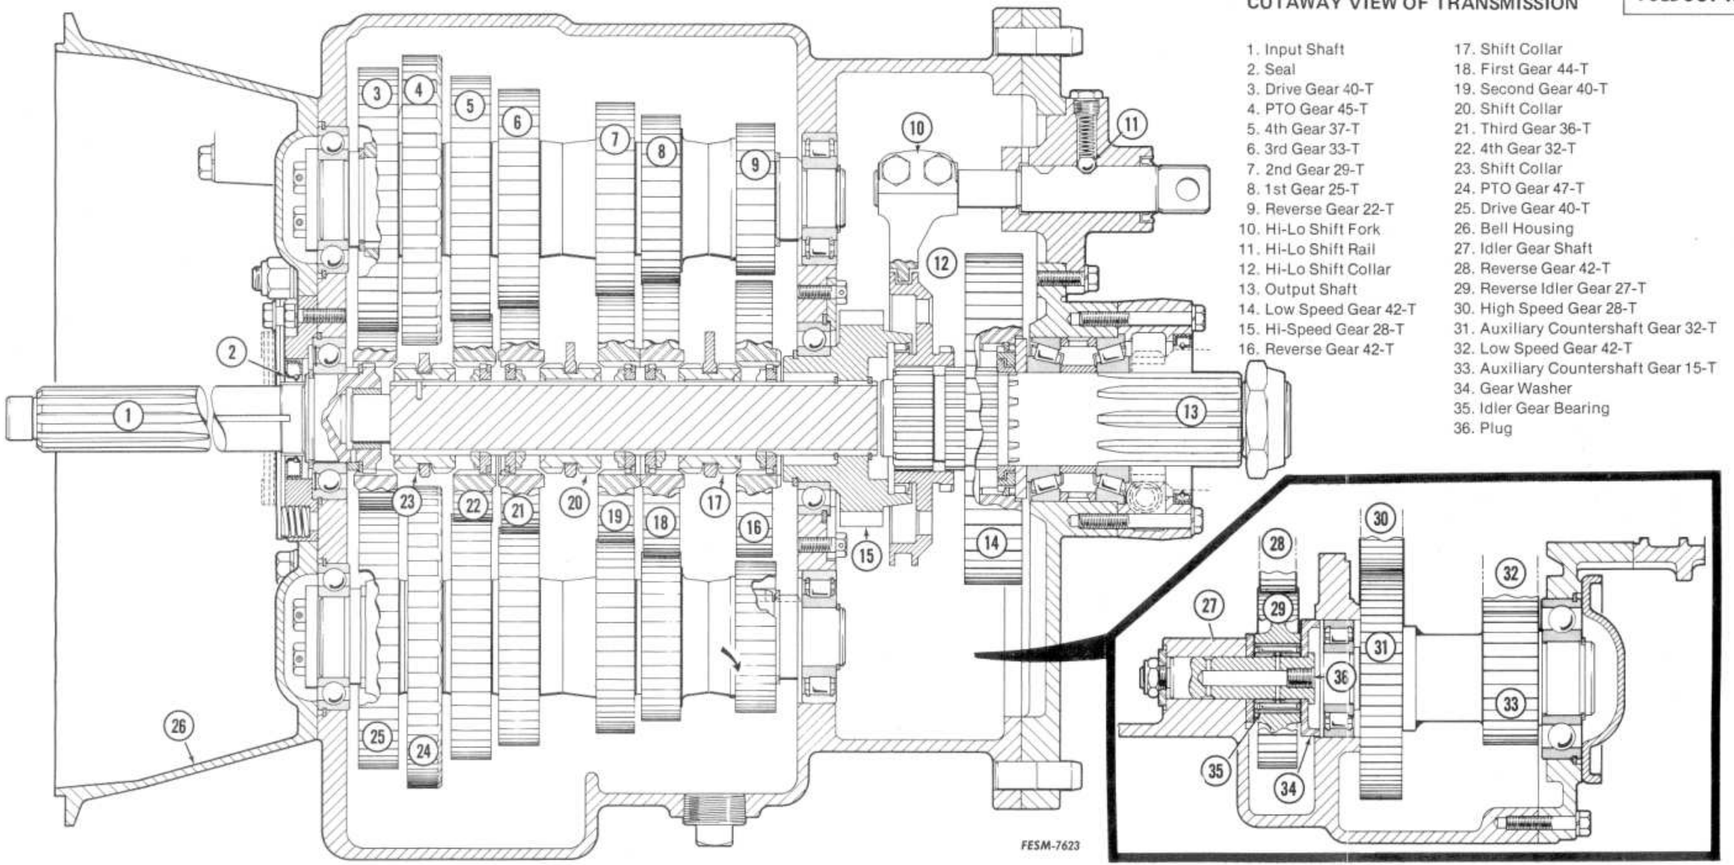

GSS14451

GSS-1445-1 (Rev. No. 4)

Printed in United States of America

MidWestTech | Case Chassis 4366, 4386, 4568, 4586, 4786 Tractor Service Manual | Publication GSS-14451

Order the manual at mid-west-tech.com >