Chassis 3200 and 3300
Series B Loader Tractors

Service Manual

GSS-1456-1

CASE IH AGRICULTURE

MidWestTech | Case Chassis 3200, 3300 Series B Loader Tractor Service Manual | Publication GSS-14561

Order the manual at mid-west-tech.com >

Contents

STANDARD TORQUE DATA FOR NUTS AND BOLTS . . . . . V & VI

STANDARD TORQUE DATA FOR HYDRAULIC TUBES AND FITTINGS VII

METRIC CONVERSION CHARTS . . . . . VIII & IX

SPECIFICATIONS X

GENERAL INFORMATION 1

ENGINE

Specifications 2

Removal 3

Fuel Tank 3

ELECTRICAL SYSTEM

Specifications 4

Wiring Diagram 5

HYDRAULICS

Specifications 8

Loader 9

Control Valve Assembly 15

Reservoir Tank 20

Cylinder Rebuilding 21

Boom Assembly 22

Oil Cooler 22

System Test Procedure 23

Trouble Shooting 24

MidWestTech | Case Chassis 3200, 3300 Series B Loader Tractor Service Manual | Public... Order the manual at mid-west-tech.com >

HYDROSTATIC DRIVE

Specifications 27

How It Works 28

Transmission Neutral Adjustment Without Quadrastat 35

Transmission Neutral Adjustment With Quadrastat 37

System Test Procedures 37

Drive Pressure Relief Valve 40

Charge Pressure Relief Valve 40

Trouble Shooting 41

Pump and Motor Service 42

Auxiliary Pump Overhaul 43

HYDRAULIC AND HYDROSTATIC PUMP GEAR CASE

Specifications 50

Removal and Service 51

CHAIN CASE (Final Drive)

Specifications 52

Removal and Service 53


MISCELLANEOUS


Hand Parking Brake 59


MidWestTech | Case Chassis 3200, 3300 Series B Loader Tractor Service Manual | Public... Order the manual at mid-west-tech.com >

FOLDOUT NO. 2

CHAIN CASE (Final Drive)

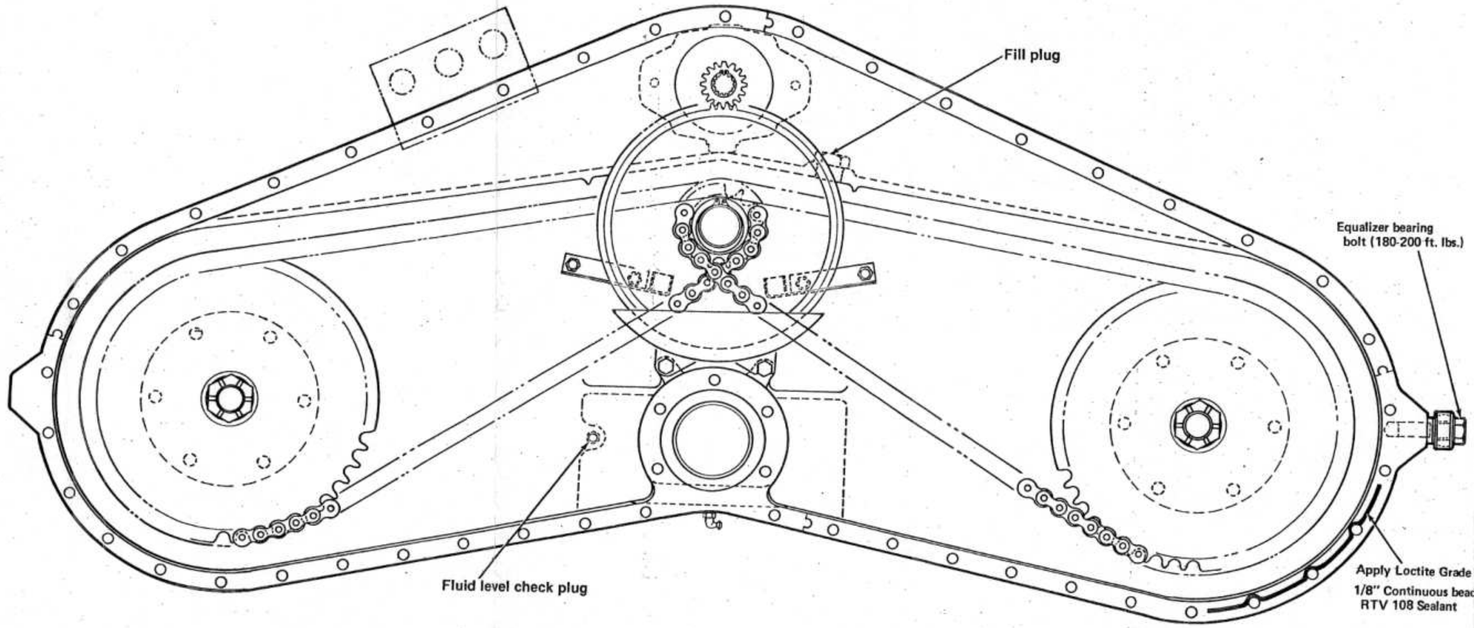

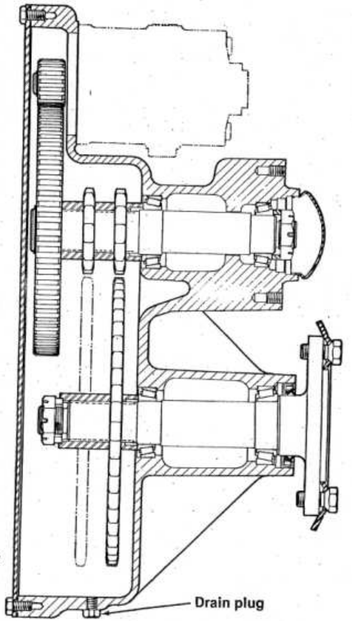

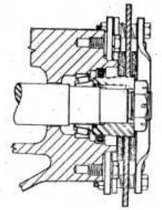

FESM-8264A

MidWestTech | Case Chassis 3200, 3300 Series B Loader Tractor Service Manual | Publication GSS-14561
Order the manual at mid-west-tech.com >