Chassis
3388, 3588, 3788, 6388, 6588 & 6788 Tractors

Service Manual

GSS-1490-2

CASE IH AGRICULTURE

MidWestTech | Case Chassis 3388, 3588, 3788, 6388, 6588, 6788 Tractor Service Manual | Publication GSS-14902

Order the manual at mid-west-tech.com >

Section 1

A/C AND TRACTOR SPLITS

Contents


	Page
Air Conditioning Specifications	1-2
Efficiency Test Procedure	1-4
Special Torques	1-6
Air Conditioning Components	1-7
Windshield Wiper Motor	1-10
Door Striker Adjustment	1-11
Recirculation Rod and Door (3388, 3588 and 3788)	1-12
Recirculation Rod and Door (6388, 6588 and 6788)	1-16
Split Between Transfer Case and Transmission	1-18
Rear Split – Control Center on the Speed Transmission (Includes Splitting the Axle Housings)	1-30
Rear Split – Control Center on the Speed Transmission (Without Splitting the Axle Housings)	1-47
Rear Split – Control Center on the Rear Frame Housing (Speed Transmission Overhaul)	1-63
Isomounts	1-85
Tractor Ballast	1-86

NOTE: Refer to Service Manuals GSS-1455-1 Basic Air Conditioning and Heating and GSS-1281-K Clutches.

MidWestTech | Case Chassis 3388, 3588, 3788, 6388, 6588, 6788 Tractor Service Manual |... Order the manual at mid-west-tech.com >

FOLDOUT NO. 1

3388 AND 3588 SERIES POWER TRAIN
(4 SPEED WITH T.A.)

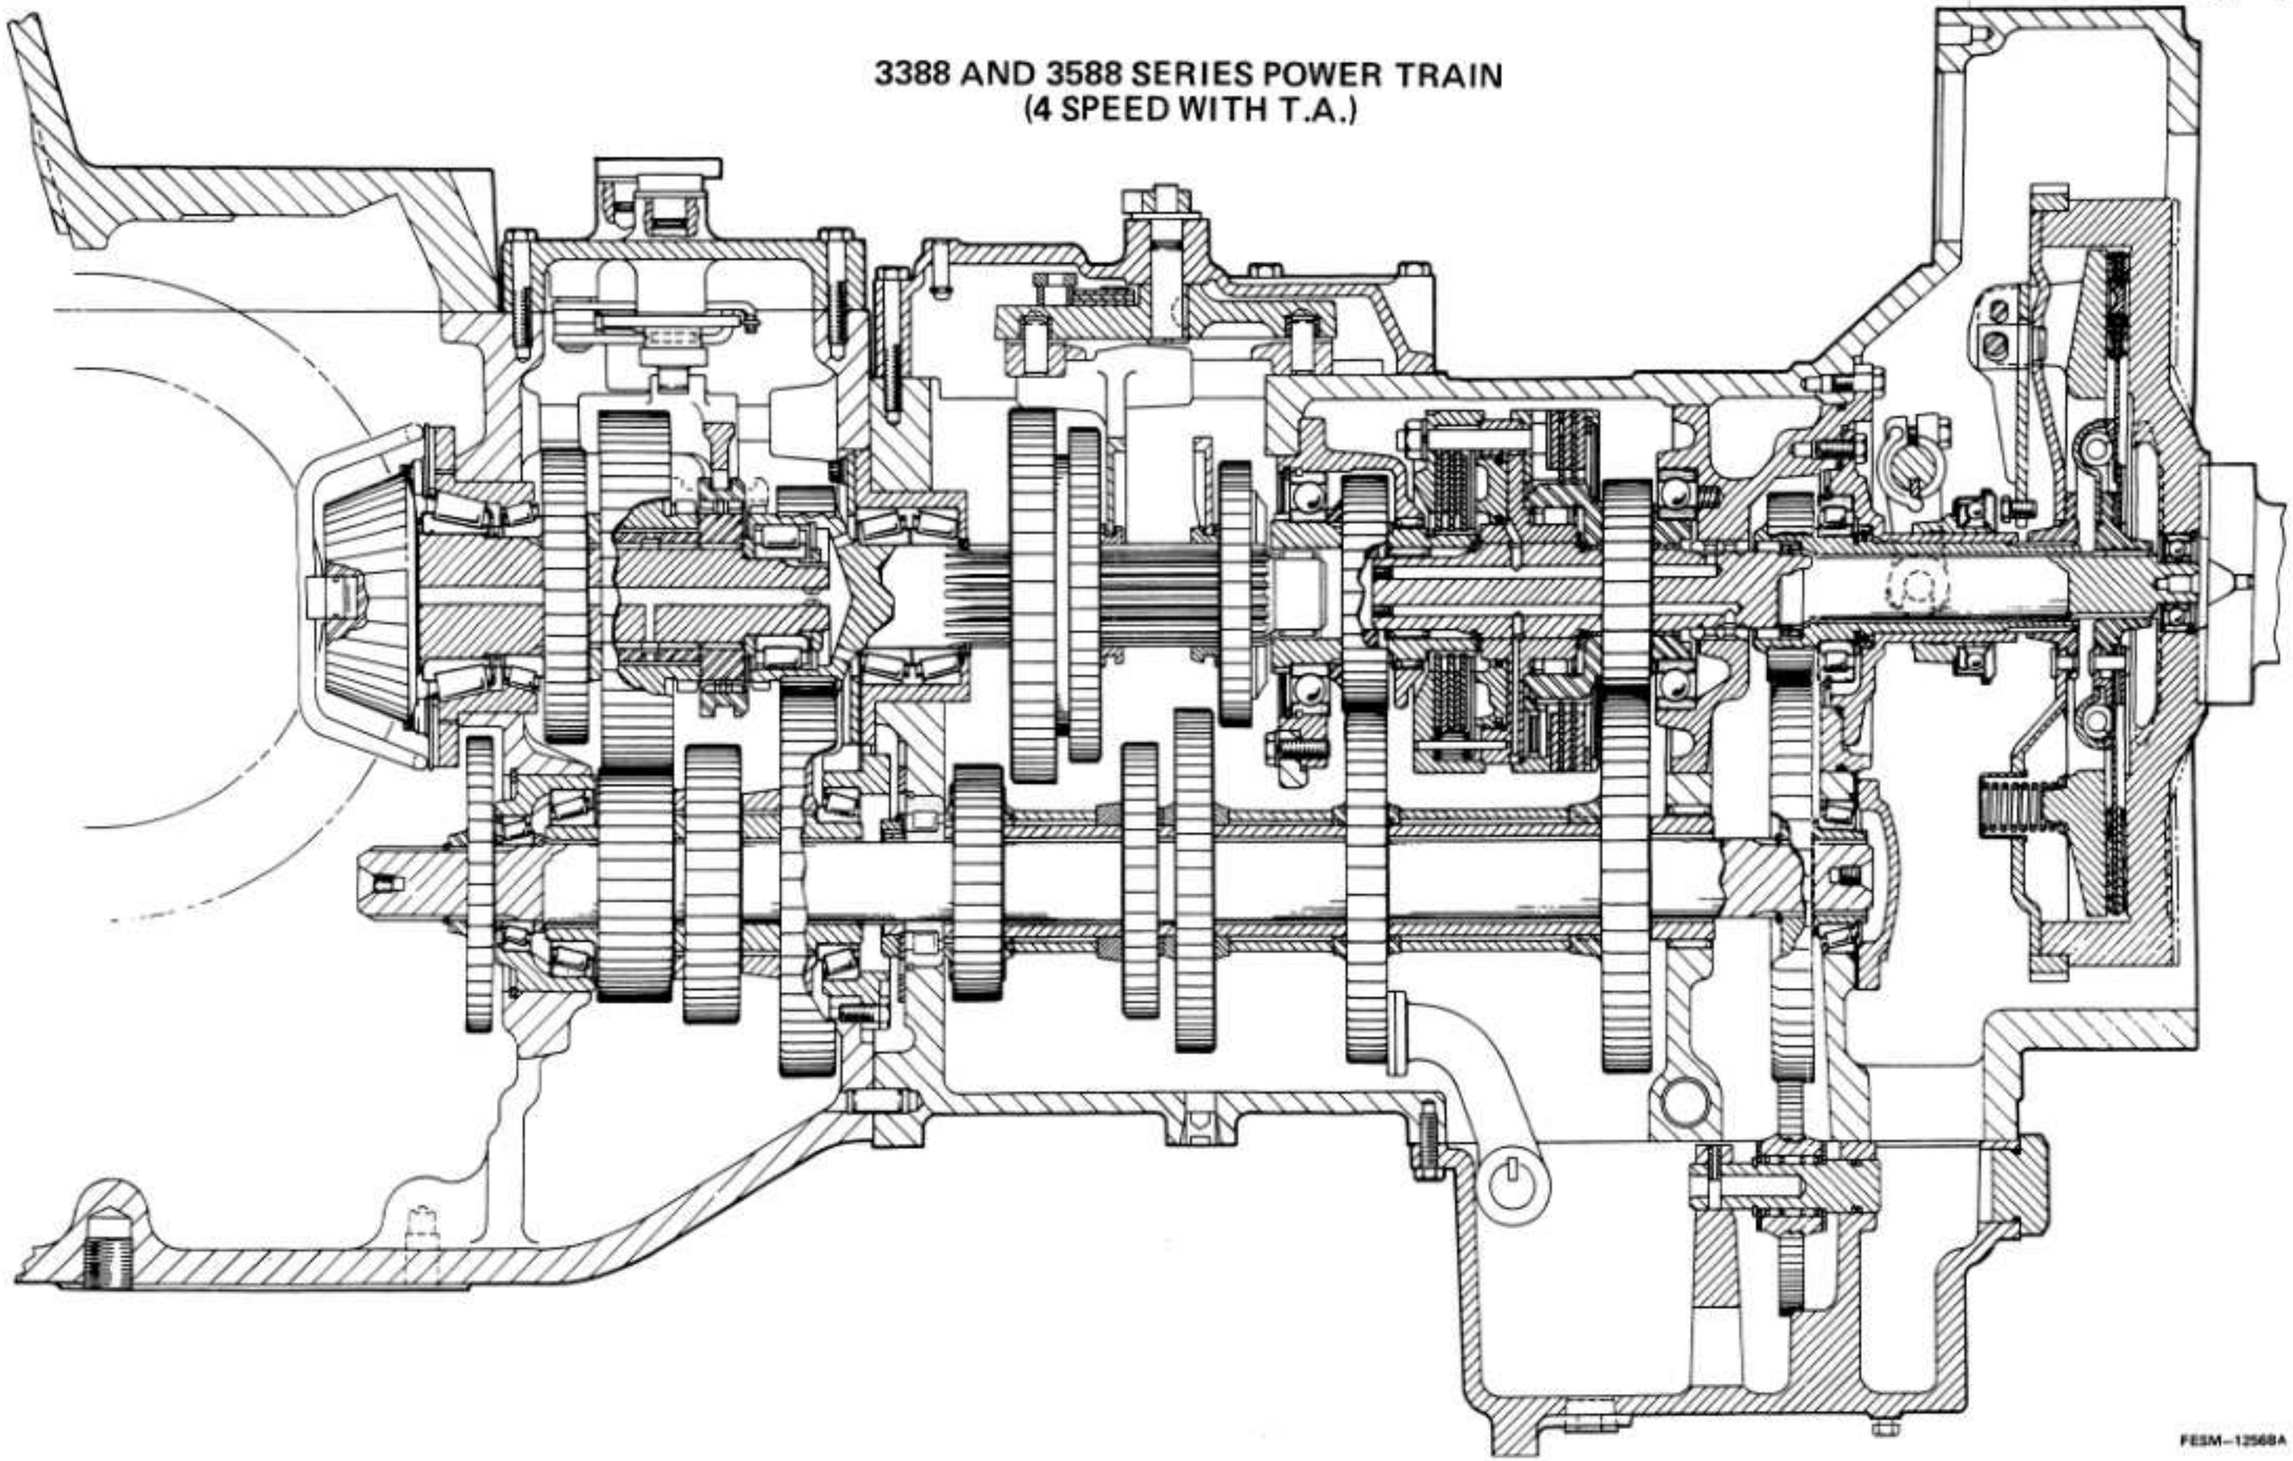

FESM–12568A

Order the manual at mid-west-tech.com >