WHEEL LOADER

SERVICE MANUAL

HL630VL

HYUNDAI

MidWestTech | Hyundai HL630VL Wheel Loader Service Manual | Publication HL630VL

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Safety

Wheel Loader Safety S0103010K

Specifications

Specifications SP002380

General Maintenance

General Maintenance Procedures S0302000
Standard Torques S0309000

Upper Structure

Counterweight SP002360
Hydraulic Oil Tank SP002361

Lower Structure and Chassis

Center Joint (Articulation Joint) SP002362

Engine and Drive Train

Engine SP002530
Front Axle SP002363
Rear Axle SP002364
Air Conditioner SP002345
Transmission and Torque Converte SP002365

Hydraulics

Cylinders SP002366
Main Pump SP002367
Main Control Valve SP002368
Pilot Control Valve SP002369
Priority Valve SP002370
Steering Unit SP002371
Hydraulic Schematic SP002372

MidWestTech | Hyundai HL630VL Wheel Loader Service Manual | Publication HL630VL Order the manual at mid-west-tech.com >

Brake


Brake System..... SP002359
Parking System..... SP002373

Electrical System

Electrical System..... SP002374
Electrical Schematic SP002375

Attachments

MidWestTech | Hyundai HL630VL Wheel Loader Service Manual | Publication HL630VL Order the manual at mid-west-tech.com >

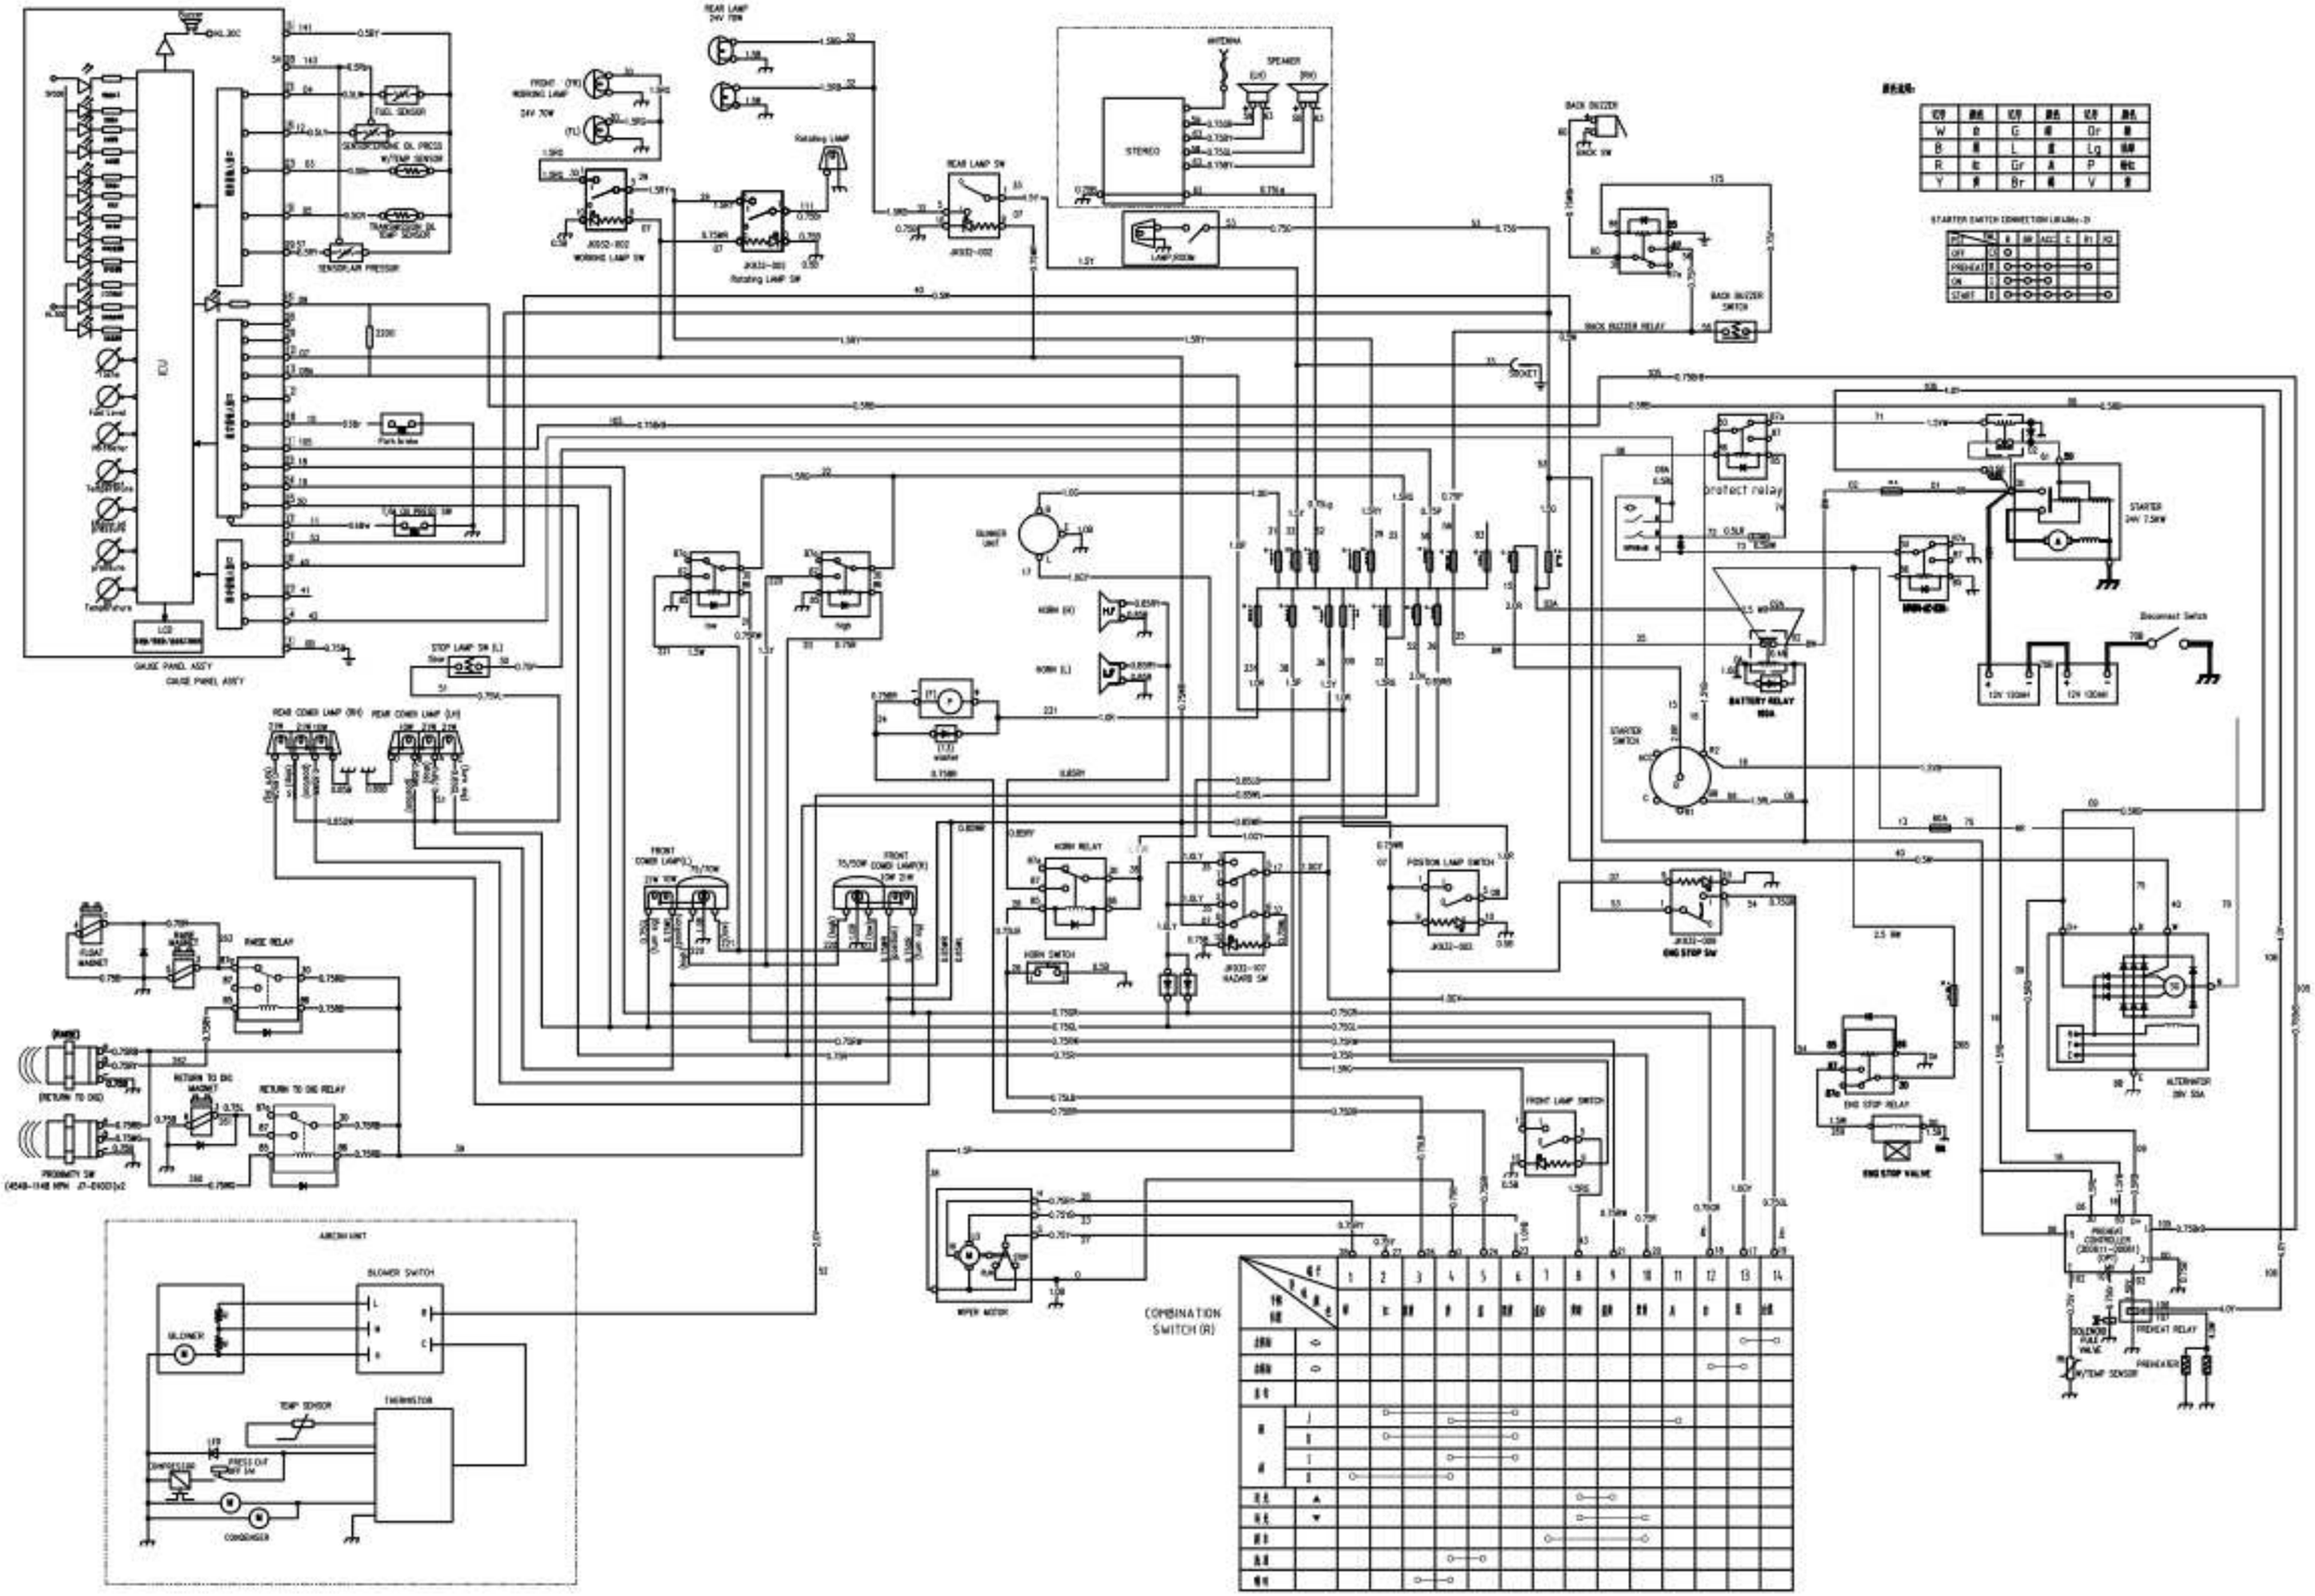

Order the manual at mid-west-tech.com >