WHEEL LOADER

SERVICE MANUAL

HL960HD

HYUNDAI

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960HD

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10
Group 3 Operational Checkout Record Sheet 1-23

SECTION 2 ENGINE

Group 1 Structure and Function (fault code) 2-1
Group 2 Engine speed and Stall rpm 2-12
Group 3 Fuel Warmer System 2-13

SECTION 3 POWER TRAIN SYSTEM

Group 1 Structure and Function 3-1
Group 2 Operational Checks and Troubleshooting 3-78
Group 3 Test and Adjustments 3-90
Group 4 Disassembly and Assembly 3-92

SECTION 4 BRAKE SYSTEM

Group 1 Structure and Function 4-1
Group 2 Operational Checks and Troubleshooting 4-32
Group 3 Tests and Adjustments 4-39
Group 4 Disassembly and assembly 4-41

SECTION 5 STEERING SYSTEM

Group 1 Structure and Function 5-1
Group 2 Operational Checks and Troubleshooting 5-13
Group 3 Tests and Adjustments 5-21
Group 4 Disassembly and Assembly 5-28

SECTION 6 WORK EQUIPMENT

Group 1 Structure and Function 6-1
Group 2 Operational Checks and Troubleshooting 6-40
Group 3 Tests and Adjustments 6-51
Group 4 Disassembly and Assembly 6-64

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component Location 7-1
Group 2 Electrical Circuit 7-3
Group 3 Monitoring System 7-22
Group 4 Electrical Component Specification 7-69
Group 5 Connectors 7-76
Group 6 Troubleshooting 7-97

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >

4. SPECIFICATION FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Model	Cummins QSB6.7
Type	4-cycle turbocharged, charge air cooled diesel engine
Control type	Electronic control
Cooling method	Water cooling
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore × stroke	107 × 124 mm (4.2" × 4.9")
Piston displacement	6700 cc (408 cu in)
Compression ratio	17.3 : 1
Rated horse power (Gross)	225 hp at 2200 rpm
Maximum torque (1500 rpm)	106 kgf · m (770 lbf · ft)
Engine oil quantity	18 ℓ (4.8 U.S. gal)
Wet weight	520 kg (1146 lb)
High idling speed	2230 ± 50 rpm
Low idling speed	800± 25 rpm
Rated fuel consumption (at rated)	213 g/kW · hr
Starting motor	Denso PA90L (24V-7.8kW)
Alternator	Denso, 24V-95Amp
Battery	2 × 12V × 160Ah

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >

2) ENGINE FAULT CODE

Fault code J1939 SPN J1939 FMI	Reason	Effect (only when fault code is active)
111 629 12	Engine control module critical internal failure - Bad intelligent device or component. Error internal to the ECM related to memory hardware failures or internal ECM voltage supply circuits.	Possible no noticeable performance effects, engine dying, or hard starting.
115 612 2	Engine magnetic crankshaft speed/position lost both of two signals - Data erratic, intermittent, or incorrect. The ECM has detected the primary and backup speed sensor signals are connected backwards.	The engine will shut down or will not start.
122 102 3	Intake manifold 1 pressure sensor circuit - Voltage above normal, or shorted to high source. High signal voltage detected at the intake manifold pressure circuit.	Engine power derate.
123 102 4	Intake manifold 1 pressure sensor circuit - Voltage below normal, or shorted to low Source. Low signal voltage or open circuit detected at the intake manifold pressure circuit.	Engine power derate.
124 102 16	Intake manifold 1 pressure - Data valid but above normal operational range - Moderately severe level. Intake manifold pressure is above the maximum operating limit.	Engine power derate.
125 102 18	Intake Manifold 1 Pressure - Data valid but below normal operating range - Moderately severe level. Intake manifold pressure is below the minimum operating limit.	Engine power derate.
131 91 3	Accelerator pedal or lever position sensor 1 circuit - Voltage above normal, or shorted to high source. High voltage detected at accelerator pedal position number 1 circuit.	The engine will operate in limp home mode.
132 91 4	Accelerator pedal or lever position sensor 1 circuit - Voltage below normal, or shorted to low source. Low voltage detected at accelerator pedal position number 1 signal circuit.	The engine will operate in limp home mode.
133 974 3	Remote accelerator pedal or lever position sensor 1 circuit - Voltage above normal, or shorted to high source. High voltage detected at remote accelerator pedal position signal circuit.	Remote accelerator will not operate.
134 974 4	Remote accelerator pedal or lever position sensor 1 circuit - Voltage below normal, or shorted to low source. Low voltage detected at remote accelerator pedal position signal circuit.	Remote accelerator will not operate.
143 100 18	Engine oil rifle pressure - Data valid but below normal operational range - Moderately severe level. Engine oil pressure signal indicates engine oil pressure is below the engine protection warning limit.	Engine power derate.

※ Some fault codes are not applied to this machine.

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >

GROUP 5 CONNECTORS

1. CONNECTOR DESTINATION

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	DEUTSCH	48	I/conn (Frame harness-Main harness)	DRB16-48SAE-L018	DRB12-48PAE-L018
CN-2	DEUTSCH	60	I/conn (Front harness-Main harness)	DRB12-60SBE-L018	DRB12-60PBE-L018
CN-4	DEUTSCH	60	I/conn (Engine harness-Main harness)	DRB16-60SAE-L018	DRB12-60PAE-L018
CN-5	DEUTSCH	60	I/conn (Front harness-Main harness)	DRB12-60SBE-L018	DRB12-60PAE-L018
CN-7	AMP	15	I/conn (Main harness-Cab harness)	2-85262-1	368301-1
CN-9	DEUTSCH	4	Cab camera	DT06-4S	DT04-4P
CN-11	AMP	15	I/conn (Main harness-Aircon harness)	2-85262-1	368301-1
CN-12	AMP	15	I/conn (Front harness-Bottom harness)	2-85262-1	368301-1
CN-14	DEUTSCH	12	I/conn (Frame harness-Grill harness)	DT06-12S	DT04-12P
CN-15	KET	11	I/conn (RH console harness-Main harness)	MG651350	MG641353
CN-16	KET	14	I/conn (RH console harness-Main harness)	MG651110	MG641113
CN-18	DEUTSCH	12	LH seat console	DT06-12S	DT04-12P
CN-19	AMP	6	I/conn (Emer steer harness-Front harness)	174262-2	174264-2
CN-21	AMP	6	Front wiper motor	936257-1	-
CN-24	DEUTSCH	12	Grill harness	DT06-12S	-
CN-26	250	2	Warning buzzer	S810-002202	-
CN-26A	AMP	10	Joystick steering	174655-2	174657-2
CN-27	MK II	16	Radio and USB player	PK145-16017	-
CN-27A	MK II	8	USB connector	174984-2	-
CN-31	DEUTSCH	3	Brake priority	DT06-3S	-
CN-36~39	-	-	Fuse box	21WD-12051	-
CN-43	AMP	2	Lock-up	282028	-
CN-45	Ring term	-	Starter	R14-12	ST 710246-2
CN-48	AMP	1	Hour meter	2-520193-2	-
CN-56	KUM	16	Cluster	KPK145-16017	-
CN-57	AMP	20	Monitor	174047-2	-
CN-58A	DEUTSCH	40	MCU	DRC26-40-SA	-
CN-58B	DEUTSCH	40	MCU	DRC26-40-SB	-
CN-64	MOLEX	4	Smart key	39012040	-
CN-65	DEUTSCH	2	Back up buzzer	DT06-2S	-
CN-68	DEUTSCH	2	Pilot cut off	DT06-2S	-
CN-71	DEUTSCH	2	Parking solenoid	DT06-2S	-
CN-72	DEUTSCH	2	Cowl open activator	DT06-2S	-
CN-74	PACKARD	4	Alternator	1218-6568	-

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >

5) DISASSEMBLY AND ASSEMBLY

(1) Spool

① Loosen the bolt (2EA).

- Tool : Wrench 5 mm
- Tightening torque : 0.85 kgf · m (6.1 lbf · ft)




T6096WE40

② Remove the cover, spring retainer, spring and spool.



T6096WE41


1 Spring
2 Spring ratainer
3 Spool
4 Cover
5 Bolt

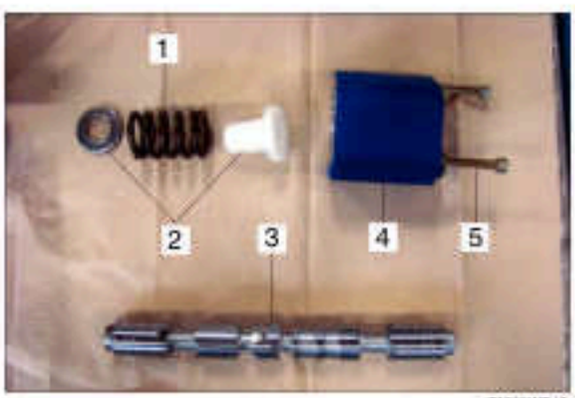

T6096WE42

(2) Compensator valve


- Tool : Spanner 42 mm

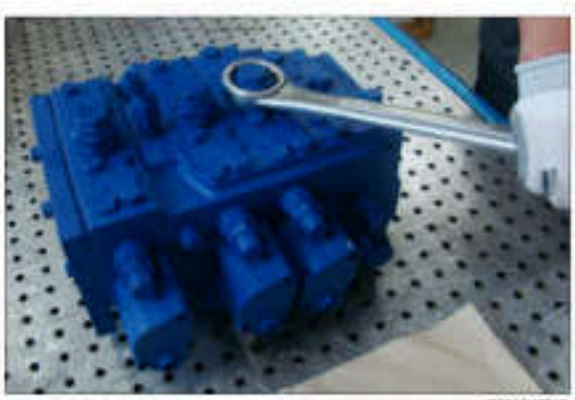

T6096WE43

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >

③ Service menu

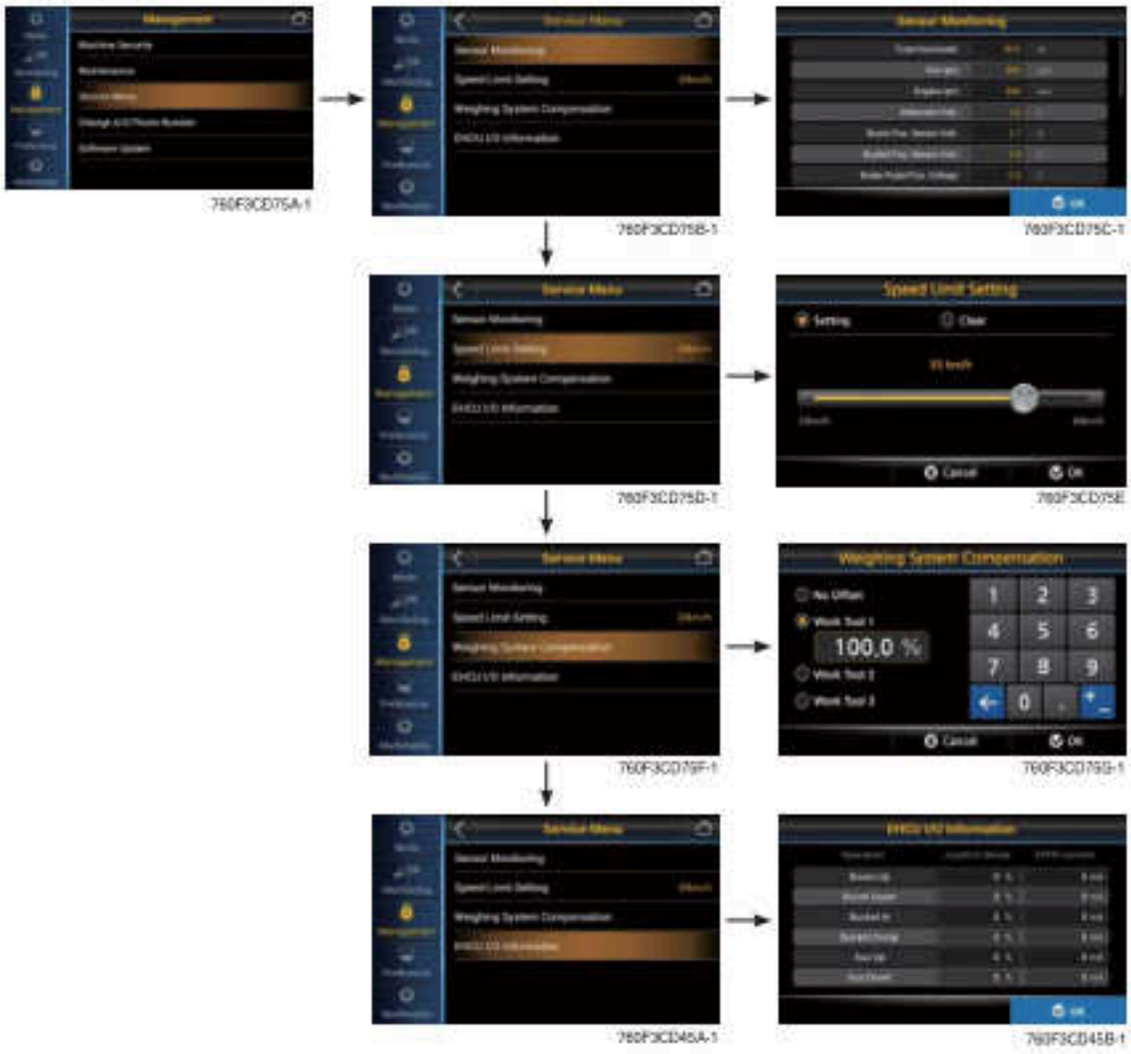

- Sensor monitoring : Display information of each sensors.
- Speed limit setting : 20~40 km/h (5 km/h intervals)
- Weighing system compensation
  - Calibration workload depending on work tool.
  - ※ Only for the service person. Do not adjust arbitrary.
- EHCU I/O information
  - Real time monitoring (joystick stroke, EPPR current).

④ Change A/S phone number and software update



- Change A/S phone number : Check and change of contact information for customer service.
- Software update : Update file in USB memory.

MidWestTech | Hyundai HL960HD Wheel Loader Service Manual | Publication HL960... Order the manual at mid-west-tech.com >