SKID STEER LOADER

SERVICE MANUAL

HSL850-7


HYUNDAI

MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HSL850-7

Order the manual at mid-west-tech.com >

2. SPECIFICATIONS

· WITH STANDARD BUCKET AND CANOPY

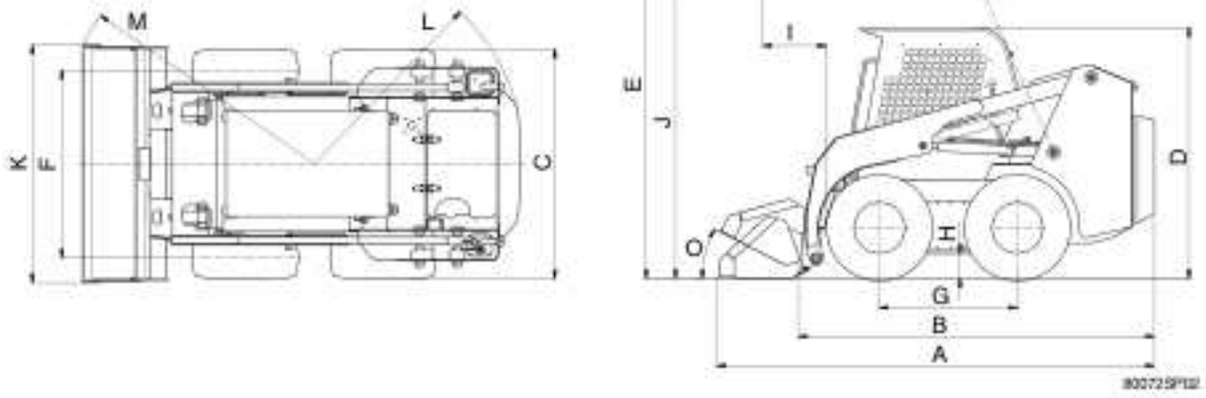

Description			Unit	Specification
Operating weight			kg(lb)	3290(7250)
Bucket capacity		Struck	m^3(yd^3)	0.29(0.38)
		Heaped		0.37(0.48)
Overall length		A	mm(ft-in)	3470(11' 5")
Overall length(Less bucket)		B		2840(9' 4")
Overall width(Except bucket)		C		1830(6' 0")
Overall height		D		2000(6' 7")
Overall height(To hinge pin)		E		3080(10' 1")
Tread		F		1500(4' 11")
Wheelbase		G		1100(3' 7")
Ground clearance		H		205(8.1")
Dump reach		I		510(1' 10")
Dump height		J		2410(7' 11")
Width bucket		K		1894(6' 3")
Clearance circle(Rear)		L		1660(5' 5")
Clearance circle(Front / bucket)		M		2055(6' 9")
Dump angle		N	Degree(°)	45
Roll back angle(Carry position)		O		27
Cycle time	Boom	Up	sec	4.1
		Down		2.5
	Tilt	Dump		2.8
		Roll back		2.0
Maximum travel speed			km/hr(mph)	11.6(7.2)
Minimum turning radius(Without bucket)			mm(ft-in)	1350(4' 5")
Gradeability			Degree(°)	20

MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HS... Order the manual at mid-west-tech.com >

3. WEIGHT

Item	HSL850-7	
	kg	lb
Frame assembly	1050	2310
Canopy	128	282
Engine assembly	246	542
Main pump assembly	65	143
Main control valve	29	64
Travel motor	48	106
Boom	380	838
Bucket	190	419
Tire(12 × 16.5-12PR) with rim	59	130
Boom cylinder	24	53
Bucket cylinder	18	40
Seat	10	22
Battery	20	44

MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HS... Order the manual at mid-west-tech.com >

4. SPECIFICATION FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Model	Kubota V3300DI
Type	4-cycle diesel engine
Cooling method	Water cooling
Number of cylinders and arrangement	4 cylinders, in-line
Combustion chamber type	Direct injection type
Cylinder bore × stroke	98 × 110mm
Piston displacement	3318cc
Compression ratio	20 : 1
Rated gross horse power	68ps at 2400rpm
Maximum gross torque	24kgf · m at 1400rpm
Engine oil quantity	13.2 ℓ
Dry weight	246kg
High idling speed	2600 ± 50rpm
Low idling speed	1050 ± 25rpm
Rated fuel consumption	178g/Ps · hr
Starting motor	12-2.5kW
Alternator	12V-60AMP
Battery	1 × 12V × 90Ah


2) MAIN PUMP ASSY

Item	Specification	
	Main pump	Auxiliary pump
Type	Axial tandem piston pump	Fixed gear pump
Capacity	2 × 46cc/rev	28cc/rev
Maximum operation pressure	250kgf/cm²(3560psi)	220kgf/cm²(3130psi)
Rated speed	2400rpm	2400rpm

MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HS... Order the manual at mid-west-tech.com >

3. DISASSEMBLY AND ASSEMBLY

1) BOOM SPOOL

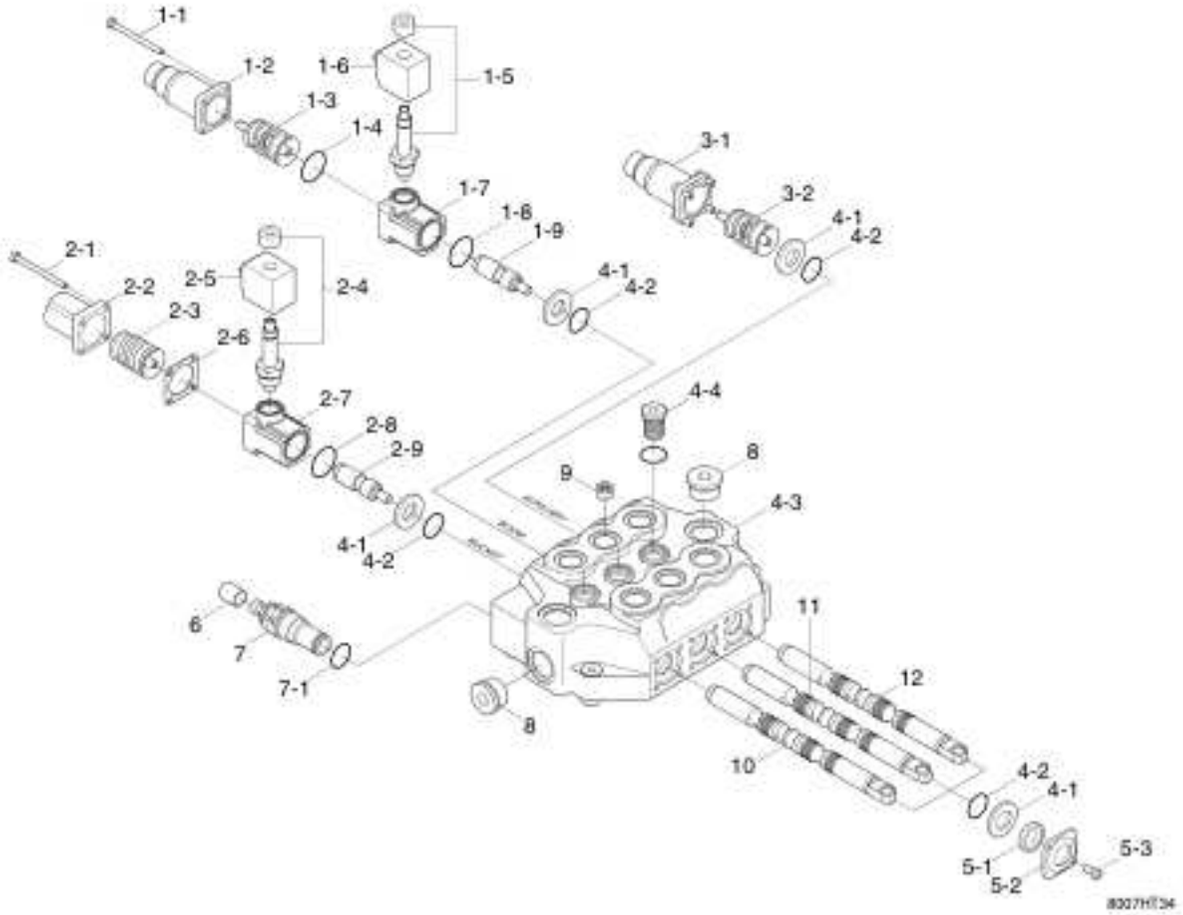

(1) Disassembly

① Remove the end cap(1-2)) by removing the four mounting screws(1-1).

② Remove the detent kit(1-3), spacer(1-7), O-ring seal(1-8), joint(1-9), ring(4-1) and O-ring(4-2).

③ Carefully remove the boom spool(11) from the valve body(4-3) and inspect. If spool shows any signs of wear or scoring the entire valve must be replaced.

④ Remove the ring(4-2) and the O-ring(4-1) from the valve body(4-3) using care not to scratch the bore and not to contaminate the bore with foreign.

⑤ Clean and dry all parts with a suitable solvent. Use petroleum based fuel or mineral spirits.

(2) Assembly

① Lubricate the new O-ring(4-2) and ring(4-1) with clean oil. Pinch the lubrificate O-ring and insert the O-ring and the ring into the groove in the front and in the back of the valve. Use care not to cut or nick the O-ring during assembly.

② Insert the boom spool(11) to the body(4-3).

③ Insert the detent kit(1-3) to end cap(1-2). Assemble the joint, O-ring seal, spacer.
Assemble the detent kit(1-3) and tighten torque to 2.5kgf · m(7.38lbf · ft).

④ After assembly check for operation of the spring by pushing down on the detent. This should compress the spring and should return when released. Apply grease(Castro spheerol TN) to the spring and bushs.

⑤ Place the end cap(1-2) over the assembly and install the mounting screws(1-1) and tighten torque to 0.7kgf · m(53.5lbf · ft).


MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HS... Order the manual at mid-west-tech.com >

GROUP 4 CONNECTOR DESTINATION

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	AMP	15	I/conn(Frame harness-Main harness)	2-85262-1	368301-1
CN-2	SWP	12	I/conn(Frame harness-Main harness)	S816-012002	S816-112002
CN-4	FASTEN	15	I/conn(Rops harness-Dash harness)	2-85262-1	368301-1
CN-7	KET	2	I/conn(Main harness-Aircon harness)	MG652934-5	MG642928-5
CN-20	-	2	Horn	35825-0211	-
CN-21	FASTEN	4	Wiper motor	S810-004202	-
CN-26	58-X	2	Warning buzzer	S814-002001	-
CN-36	FASTEN	2	Fuse box	S810-002202	S810-102202
CN-37	SWP	6	Fuse box	S814-006100	S814-106001
CN-45	RING TERM	1	Start motor	S820-308000	-
	-	1	Start motor	171809-2	-
CN-48	-	1	Hour meter	171809-2	-
CN-56	SWP	12	Indicator panel	S816-012002	S816-112002
CN-58	ECONO SEAL III	36	Control unit	344111-1	-
CN-65	SHUR	1	Travel buzzer	S822-014000	-
CN-68	RING TERM	1	Safety solenoid	-	S820-105000
CN-71	SWP	2	Parking solenoid	S814-002001	-
CN-74	RING TERM	1	Alternator	-	S820-306000
	FASTEM	2	Alternator	S810-002202	-
CN-79	SUMITOMO	2	Fuel stop solenoid	6195-0003	-
CN-106	FASTEN	3	Fuel gauge	S810-003202	-
	SHUR	1	Fuel gauge	S822-014000	-
	SHUR	1	Fuel gauge	-	S822-114000
· Switch					
CS-2	AMP	6	Statrt switch	S814-006001	-
CS-3	SWF	10	Wiper switch	SWF593757	-
CS-4	SWP	3	Safety switch	S816-003002	-
CS-5	SHUR	1	Horn switch	S822-014000	S822-114000
CS-21	SWF	10	Light switch	SWF593757	-
CS-34	SWF	10	Buzzer stop switch	SWF593757	-
CS-52	SWF	10	Safety reset switch	SWF593757	-

MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HS... Order the manual at mid-west-tech.com >

GROUP 2 WIRING DIAGRAM

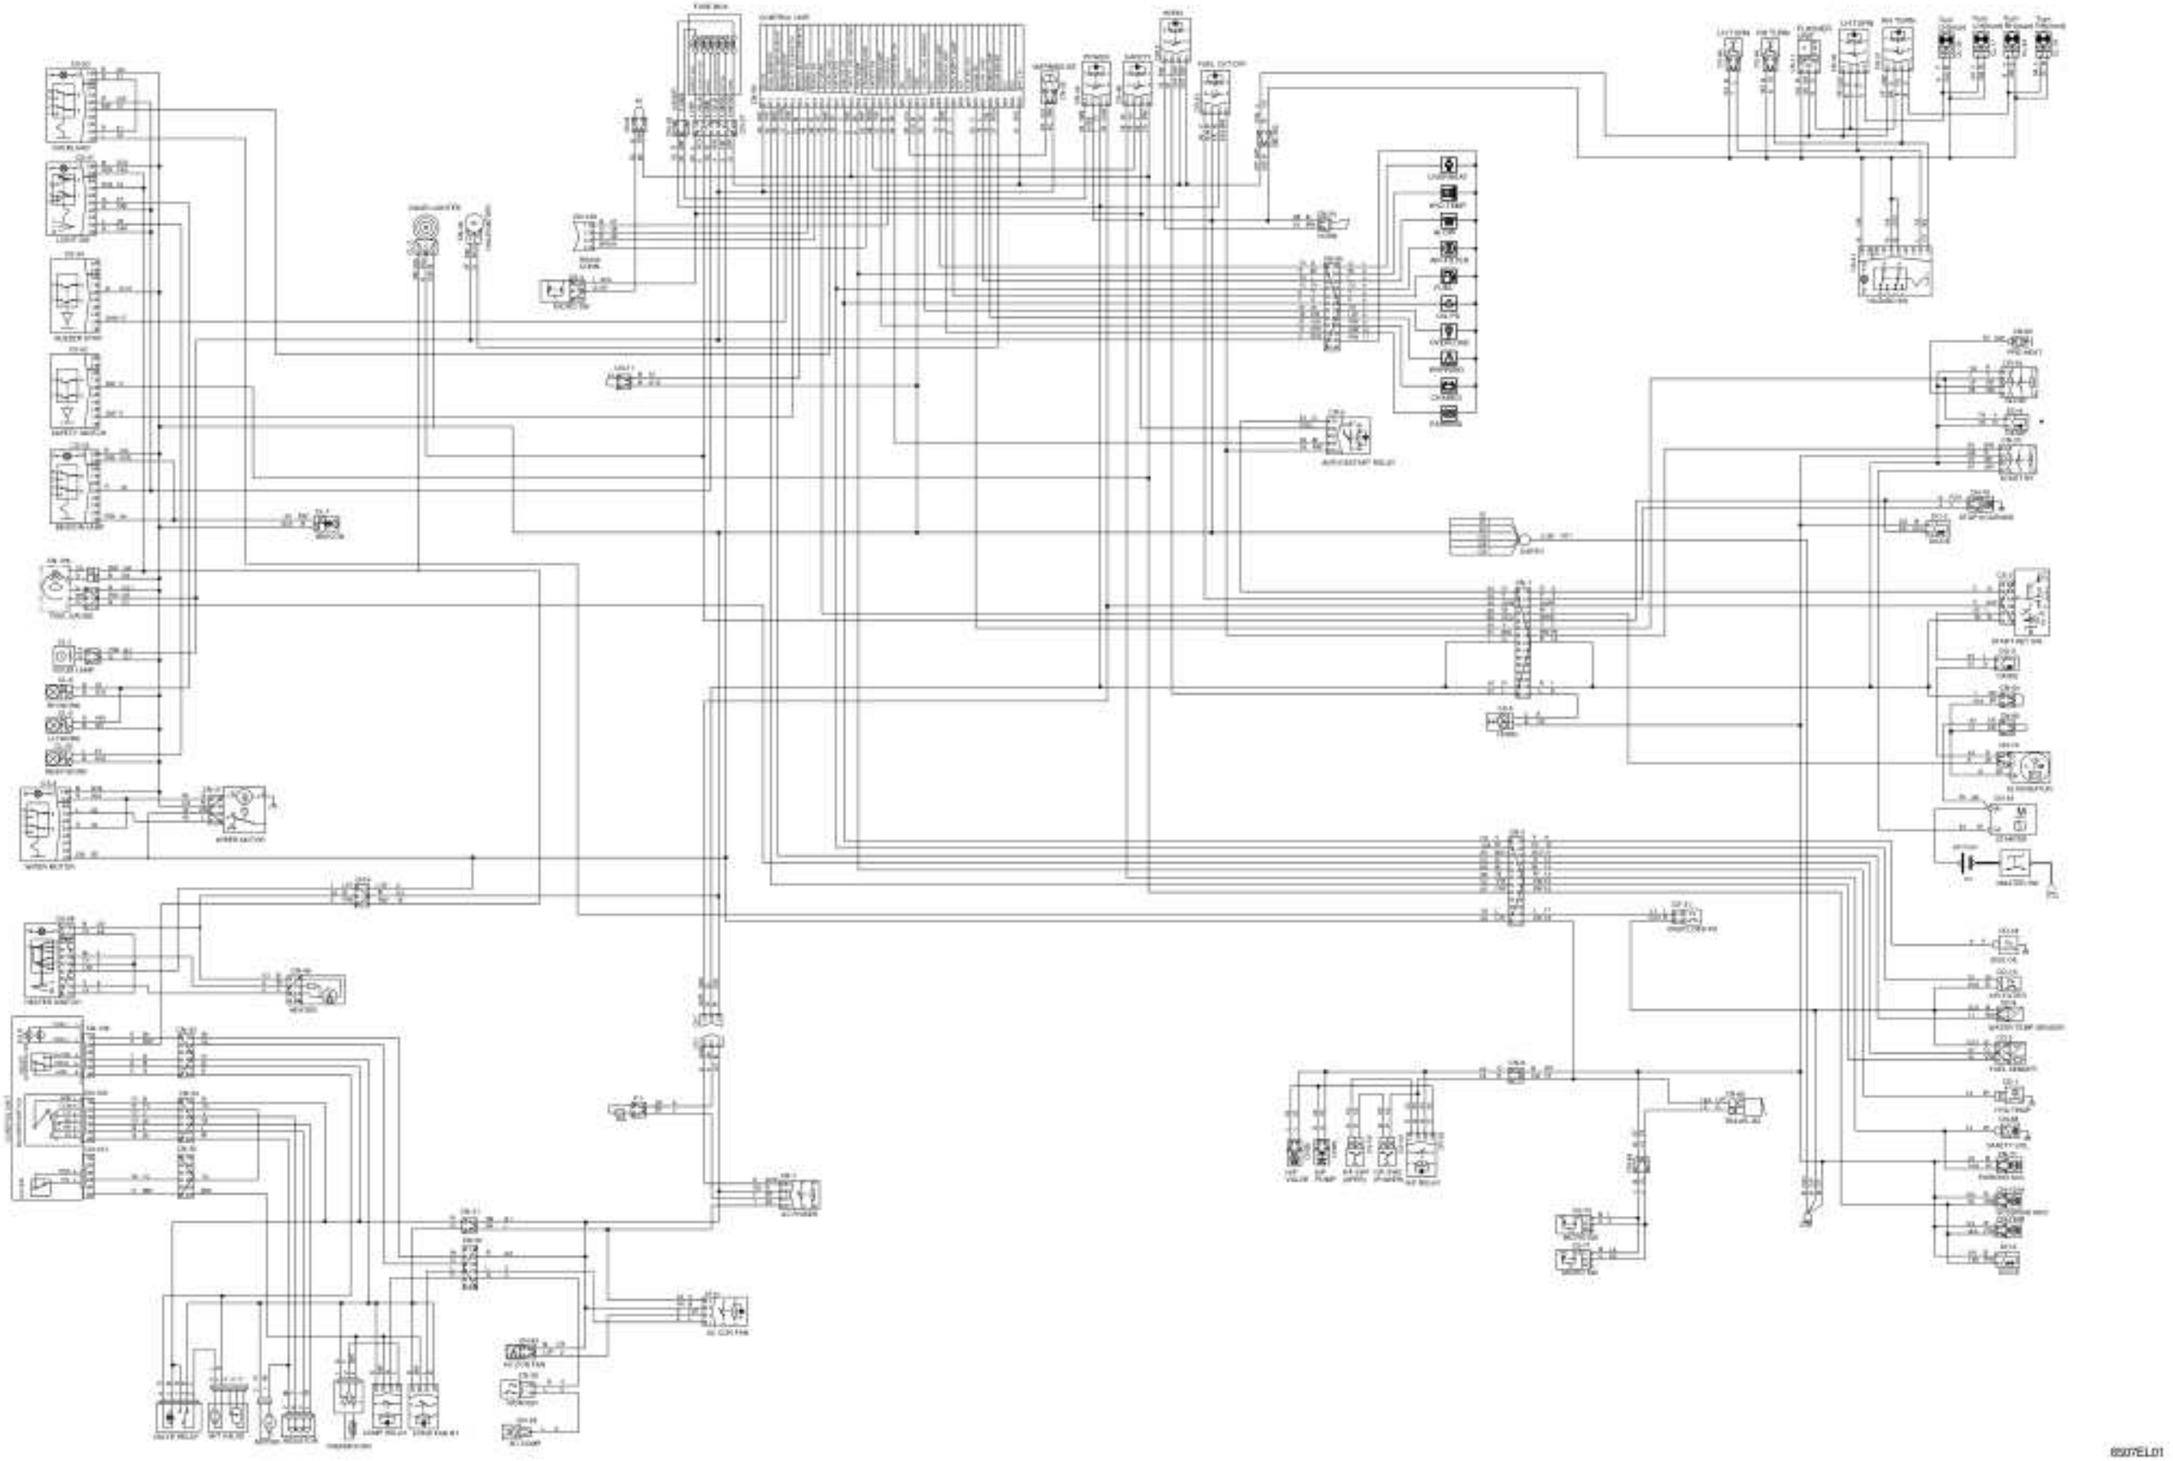

MidWestTech | Hyundai HSL850-7 Skid Steer Loader Service Manual | Publication HSL850-7

Order the manual at mid-west-tech.com >