CRAWLER EXCAVATOR

SERVICE MANUAL

HX360L (India)

HYUNDAI

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publication H...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-22
Group 3 Swing Device 2-58
Group 4 Travel Device 2-69
Group 5 RCV Lever 2-83
Group 6 RCV Pedal 2-90

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-3
Group 3 Pilot Circuit 3-6
Group 4 Single Operation 3-14
Group 5 Combined Operation 3-24

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electric Circuit 4-3
Group 3 Electrical Component Specification 4-22
Group 4 Connectors 4-31

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6
Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up Function 5-9
Group 7 Engine Overheat Prevention Function 5-10
Group 8 Variable Power Control System 5-11

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Group 9 Attachment Flow Control System 5-12
Group 10 Intelligent Power Control System 5-13
Group 11 Anti-Restart System 5-15
Group 12 Self-Diagnostic System 5-16
Group 13 Engine Control System 5-40
Group 14 EPPR (Electro Proportional Pressure Reducing) Valve 5-41
Group 15 Monitoring System 5-46
Group 16 Fuel Warmer System 5-80

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-24
Group 4 Mechatronics System 6-40

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-21
Group 3 Track and Work Equipment 7-30

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-30
Group 5 Swing Device 8-45
Group 6 Travel Device 8-69
Group 7 RCV Lever 8-102
Group 8 Turning Joint 8-116
Group 9 Boom, Arm and Bucket Cylinder 8-121
Group 10 Undercarriage 8-138
Group 11 Work Equipment 8-150

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15cc/rev
Maximum pressure	40 kgf/cm² (570 psi)
Rated oil flow	26.3 ℓ /min (6.9 U.S. gpm/5.8 U.K. gpm)

4) MAIN CONTROL VALVE

Item	Specification
Type	10 spools
Operating method	Hydraulic pilot system
Main relief valve pressure	350 kgf/cm² (4980 psi) [380 kgf/cm² (5400 psi)]
Overload relief valve pressure	400 kgf/cm² (5690 psi)

[ ]: Power boost

5) SWING MOTOR

Item	Specification
Type	Axial piston motor
Capacity	156.9 cc/rev
Relief pressure	300 kgf/cm² (4270 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	84.4 kgf · m (610 lbf · ft)
Brake release pressure	36.5 kgf/cm² (519 psi)
Reduction gear type	2 - stage planetary

6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement axial piston motor
Relief pressure	350 kgf/cm² (4980 psi)
Capacity (max / min)	282.6/156.9 cc/rev
Reduction gear type	2-stage planetary
Braking system	Automatic, spring applied hydraulic released
Brake release pressure	17 kgf/cm² (242 psi)
Braking torque	134 kgf · m (969 lbf · ft)

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

4. HEAD AND WORK LIGHT CIRCUIT

1) OPERATING FLOW

Fuse box (No.21) → Head light relay [CR-13 (30, 86)]
Fuse box (No.18) → Work light relay [CR-4 (30, 86)]
Fuse box (No.14) → Membrane controller [CN-376 (1)]

(1) Head light switch ON

Head light switch ON [CN-376 (13)] → Head light relay [CR-13 (85) → (87)]
→ Head light ON [CL-3 (2), CL-4 (1), CL-24 (2)]
→ I/conn [CN-5 (41)] → I/conn [CN-432 (1)] → Cigar lighter [CL-2]
→ I/conn [CN-5 (60)] → Radio & USB player illumination ON [CN-27A (9)]
→ I/conn [CN-7 (1)] → Accel dial LED [CN-279 (2)]

(2) Work light switch ON

Work light switch ON [CN-376 (4)] → Work light relay [CR-4 (85) → (87)]
→ I/conn [CN-12 (1)] → Work light ON [CL-5 (2), CL-6 (2)]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box) ② - GND (switch power input) ③ - GND (head light relay) ④ - GND (head light) ⑤ - GND (fuse box) ⑥ - GND (switch power output) ⑦ - GND (work light relay) ⑧ - GND (work light)	20~25V

※ GND : Ground

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

DTC		Diagnostic Criteria	Application		
HCESPN	FMI		G	C	W
189	5	(Detection) (When Attachment Flow EPPR 2 current is equal or more than 300 mA) 10 seconds continuous, Attachment Flow EPPR drive current < 100 mA (Cancellation) (When Attachment Flow EPPR 2 current is equal or more than 300 mA) 3 seconds continuous, Attachment Flow EPPR drive current ≥ 100 mA	●		
	6	(Detection) 10 seconds continuous, Attachment Flow EPPR 2 drive current > 1.0 A (Cancellation) 3 seconds continuous, Attachment Flow EPPR 2 drive current ≤ 1.0 A	●		
		(Results / Symptoms) 1. Control Function – Option attachment flow control operation failure (Checking list) 1. CN-242A (#2) – CN-52 (#40) Checking Open/Short 2. CN-242A (#1) – CN-52 (#16) Checking Open/Short			
196 (NA)	0	HW145 10 seconds continuous, Attachment flow control EPPR 1 press. Sensor Measurement Voltage > 5.2V			
	1	HW145 10 seconds continuous, 0.3V≤ Attachment flow control EPPR 1 press. Sensor Measurement Voltage < 0.8V			
	4	HW145 10 seconds continuous, Attachment flow control EPPR 1 press. Sensor Measurement Voltage < 0.3V			
		(Results / Symptoms) 1. Control Function – Driving second pump joining function operation failure (Checking list) 1. CD-93 (#B) – CN-52 (#34) Checking Open/Short 2. CD-93 (#A) – CN-51 (#32) Checking Open/Short 3. CD-93 (#C) – CN-51 (#31) Checking Open/Short			
200	0	10 seconds continuous, Pump EPPR Press. Sensor Measurement Voltage > 5.2V	●		
	1	10 seconds continuous, 0.3V≤ Pump EPPR Press. Sensor Measurement Voltage < 0.8V	●		
	4	10 seconds continuous, Pump EPPR Press. Sensor Measurement Voltage < 0.3V	●		
		(Results / Symptoms) 1. Monitor – Pump EPPR Press. display failure 2. Control Function – Pump input horse power control failure, Overload at compensation control operation failure (Fuel efficiency/speed performance failure) (Checking list) 1. CD-44 (#B) – CN-52 (#32) Checking Open/Short 2. CD-44 (#A) – CN-51 (#3) Checking Open/Short 3. CD-44 (#C) – CN-51 (#13) Checking Open/Short			

※ Some error codes are not applied to this machine.

G : General C : Crawler Type W : Wheel Type


MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

4. REASSEMBLING


1) ASSEMBLING MOTOR

- REAR COVER ASSY

(1) Assemble check valve (55), spring (56) into rear cover (34) and then assemble plug (57) using L-wrench.

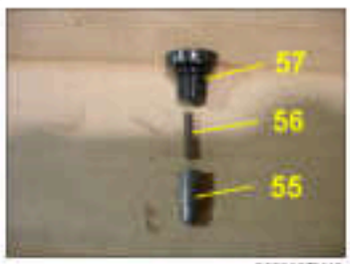


2609A8TM40

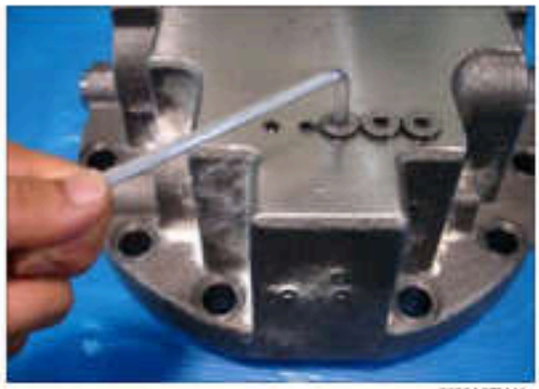
2609A8TM41

(2) Apply loctite #242 on the NPTF 1/16 plug (2) and then assemble 12-NPTF 1/16 Plug (2) into rear cover(34).



2609A8TM42

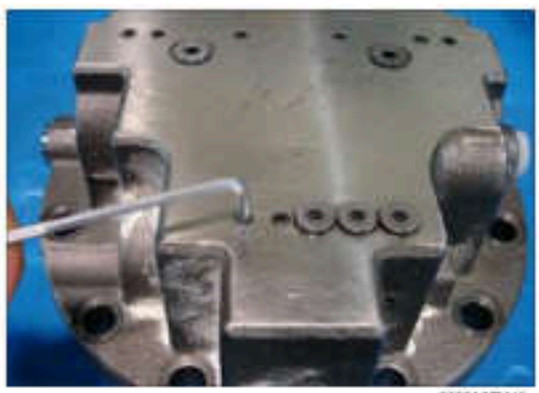
2609A8TM43

(3) Assemble spool (47), parallel pin (50), spring seat (49) and spring (51) into rear cover (34) in regular sequence and then assemble plug (48) and connector (52).



2609A8TM44


2609A8TM45


2609A8TM46

(4) Assemble relief valve (42, 2EA) into rear cover (34).



2609A8TM47


2609A8TM48


2609A8TM49

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

③ Assemble 9 piston assy (12) into retainer plate (11).

- Piston assy × 9EA
- Retainer plate × 1EA



④ Assemble parts of procedure ② and ③.



(3) Assemble valve casing sub

① Assemble make up check valve sub

Assemble check valve (24), O-ring (27), plug (26) in that order and then screw it torque wrench.

- Make up check valve × 2EA
- Spring × 2EA
- Plug × 2EA
- O-ring × 2EA
- Tightening torque : 38 ± 3.8 kgf · m (275 ± 27.5 lbf · ft)



② Assemble reactionless valve assy


Assemble reactionless valve assy (31), plug (32), O-ring (33, 34) in that order and then screw it a torque wrench.

- Reactionless valve assy (31) × 2EA
- Plug (32) × 2EA
- O-ring (33, 34) × 2EA
- Tightening torque : 22 ± 1.5 kgf · m (159 ± 11 lbf · ft)



MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

ELECTRICAL CIRCUIT (1/2)

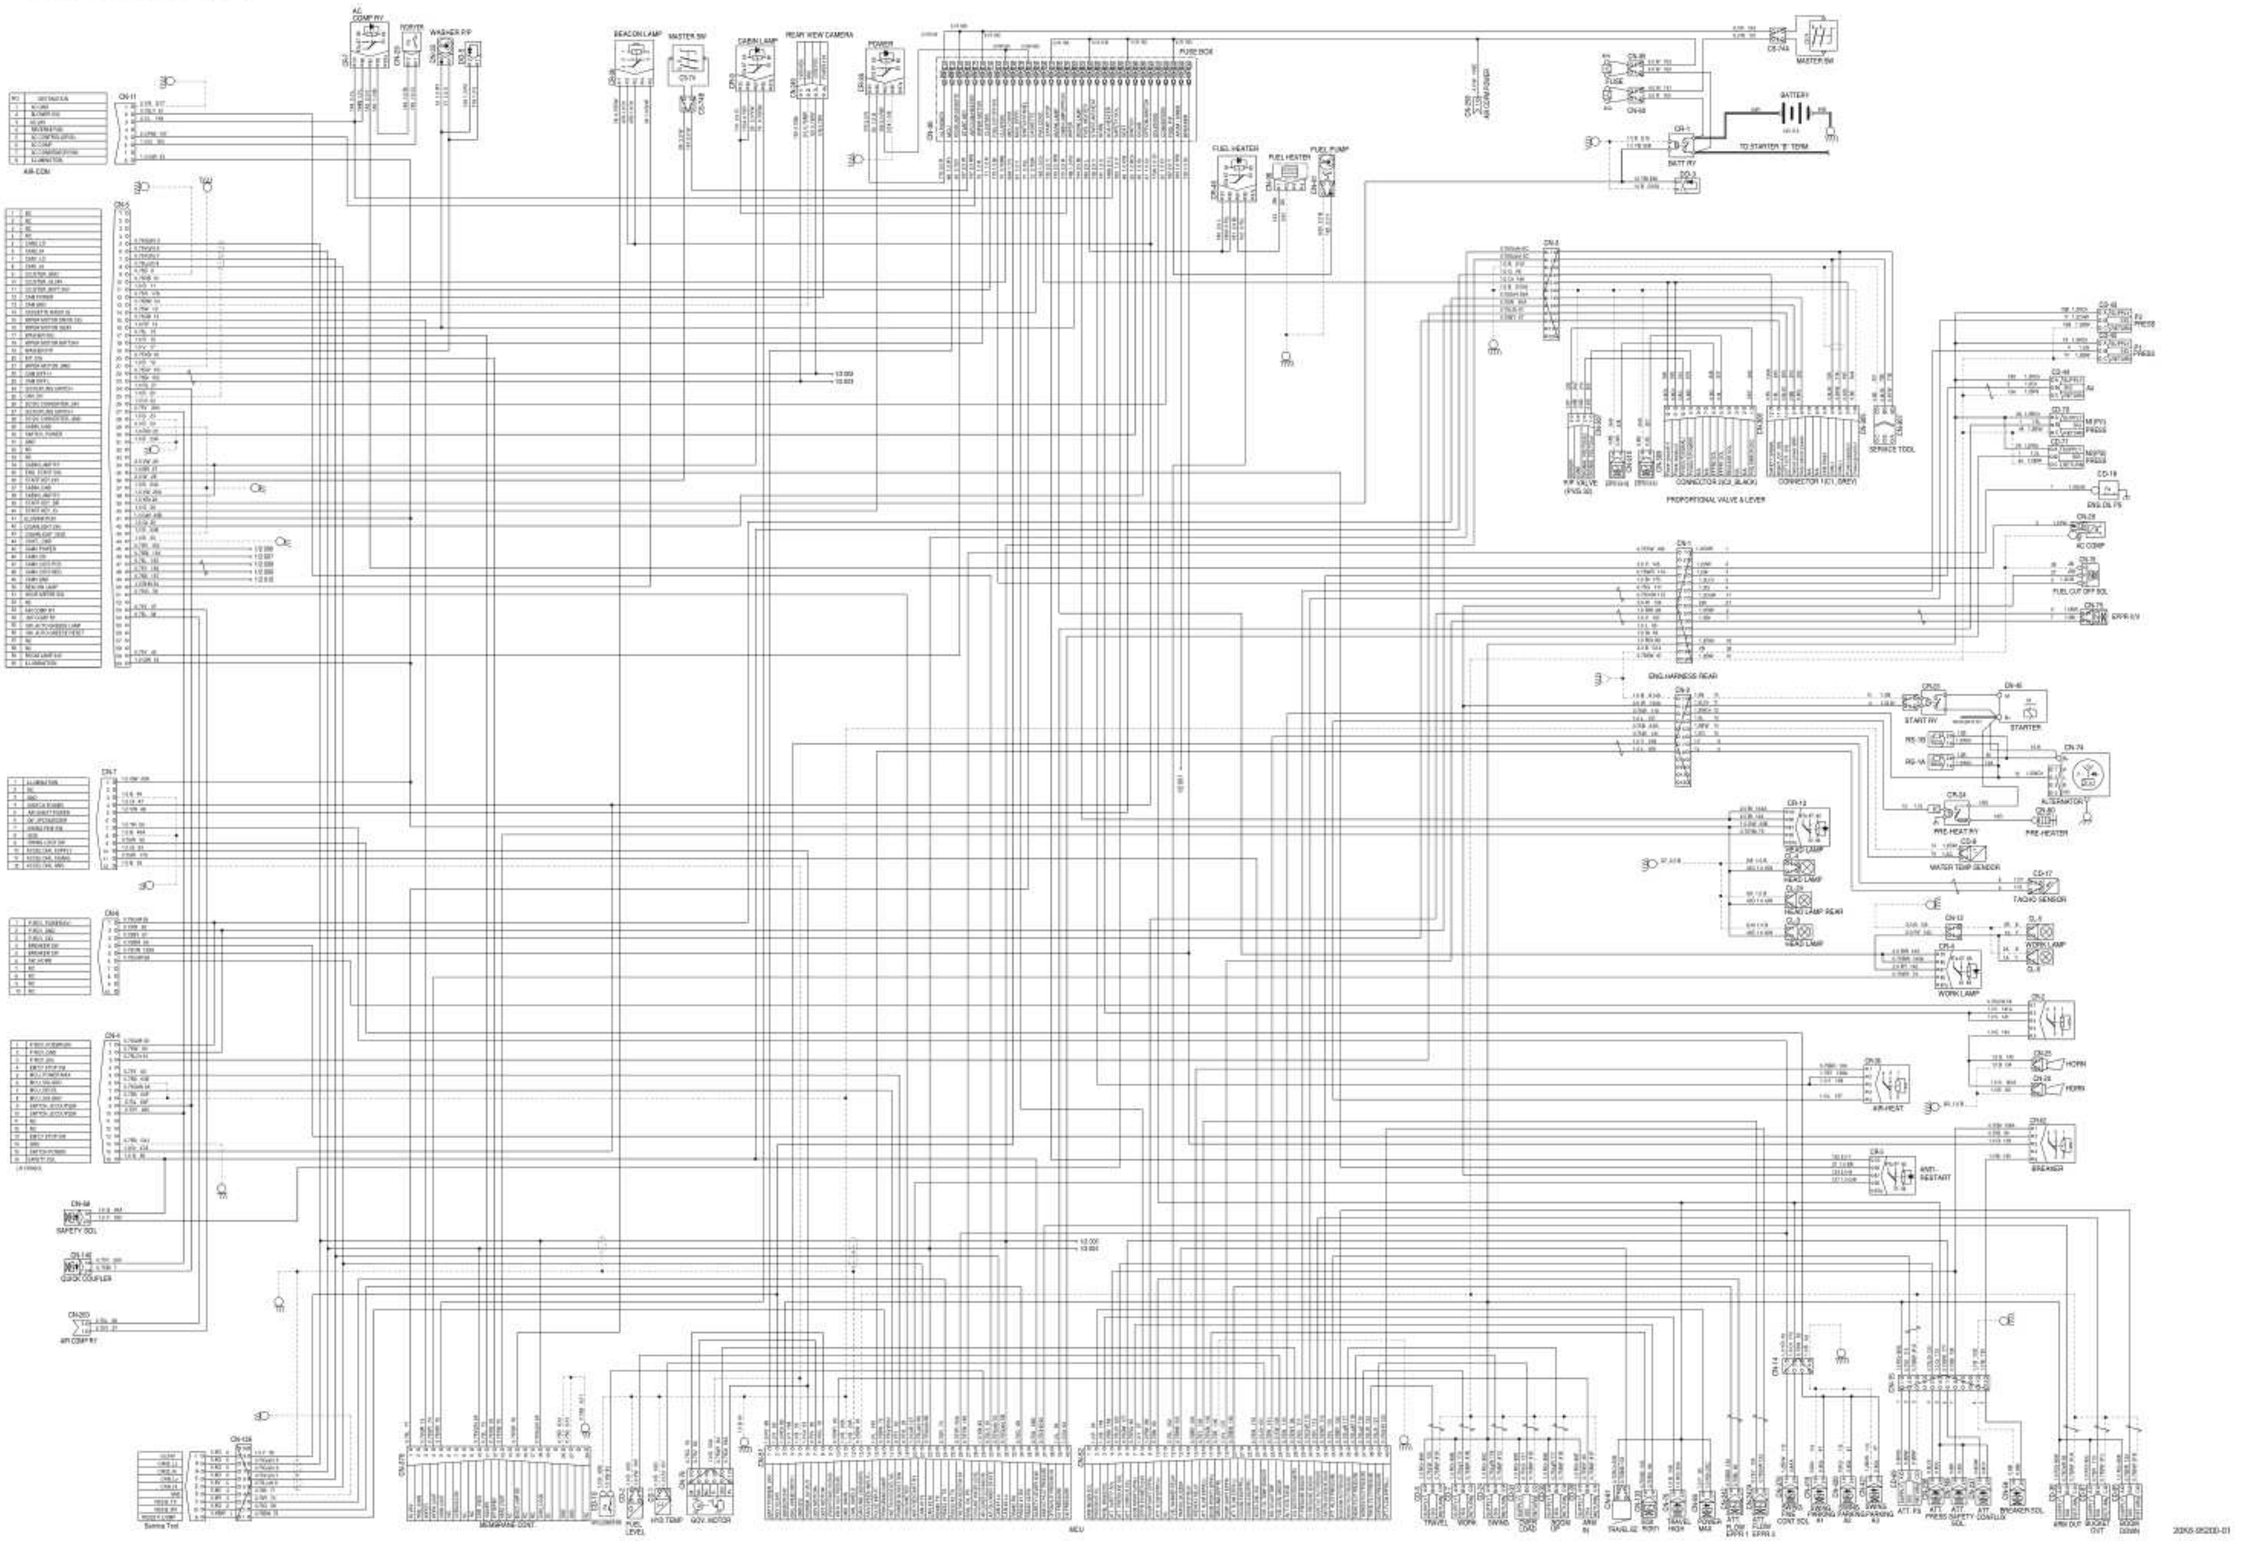

MidWestTech | Hyundai HX360L (India) Crawler Excavator Service Manual | Publication HX360L (India)

Order the manual at mid-west-tech.com >