Manual No. KM-TM1725B

Service Manual

AH170
AH200
AH250

Articulated Dump Truck

HITACHI

MidWestTech | Hitachi AH170, AH200, AH25 Articulated Dump Truck Service Manual | Publication KM-TM1725B

Order the manual at mid-west-tech.com >

INDEX

SECTION 1	PAGE
ELECTRICAL	
Specifications	1
Operator controls and instruments	2-8
Master Display unit (MFA 10)	9
Default displays	10-15
Thresholds and warnings	16-17
Switches	18-20
Range hold switch	21
Battery disconnect switch	22
Ignition switch	23
Start button	24
Battery circuit breaker	25
Gear shift control	26
Air conditioner switch	27-28
General	
Electrical earthing connections	29-30
Fault finding	31
Circuit breakers	32
Relays	33
Trouble shooting	34-35
Schematics	36
Earth points	36
Starting and charging	37
Warning lights	38
MFA 10 & Over rev	39
Lighting	40
Turn and hazards	41
Brake lights and exhaust brake	42
Aircon	43
Wipers / washer	44
Cold Start	45
Battery Balancer	46
Range Hold	47

MidWestTech | Hitachi AH170, AH200, AH25 Articulated Dump Truck Service Manual... Order the manual at mid-west-tech.com >

Allison / VEHICLE	48
Electric mirrors	49
Transmission cooler	50
Connector 1	51
Connectors 2 & 3	52
Connectors 4,5,6 & 7	53
Connectors 8,9,10 & 11	54
Connectors 12 , 13 & 14	55
Connectors 15,16,17 & 18	56
Connectors 19,20,21 & 22	57
Connectors 23,24,25 & 26	58
Connectors 27,28,29,30 & 31	59
Connectors 32 – 37	60

MidWestTech | Hitachi AH170, AH200, AH25 Articulated Dump Truck Service Manual... Order the manual at mid-west-tech.com >

SECTION 2

TRANSMISSION

General Description 1

Identification 2
Torque Convertor 2-7
Stall Testing 8-11

Planetary gears and power flows

Planetary gear sets 12
Neutral 17
First 18
Second 19
Third 20
Fourth 21
Fifth 22
Sixth 23
Reverse 24

Hydraulic system Overview

System function 25
Main pressure 26
Solenoid and Regulator valves 26
Clutch application 27
Latching valves 28
Control main circuit 29
Torque convertor circuit 29-31
Exhaust backfill 31
Main pressure regulator 32
Control main regulator 33

Solenoids


Normally open 34
Normally closed 35-36

Hydraulic Schematics (Transmission) Overview 37

Component location *(fold out)* 37

Neutral *(fold out)* 38
First *(fold out)* 39

MidWestTech | Hitachi AH170, AH200, AH25 Articulated Dump Truck Service Manual... Order the manual at mid-west-tech.com >

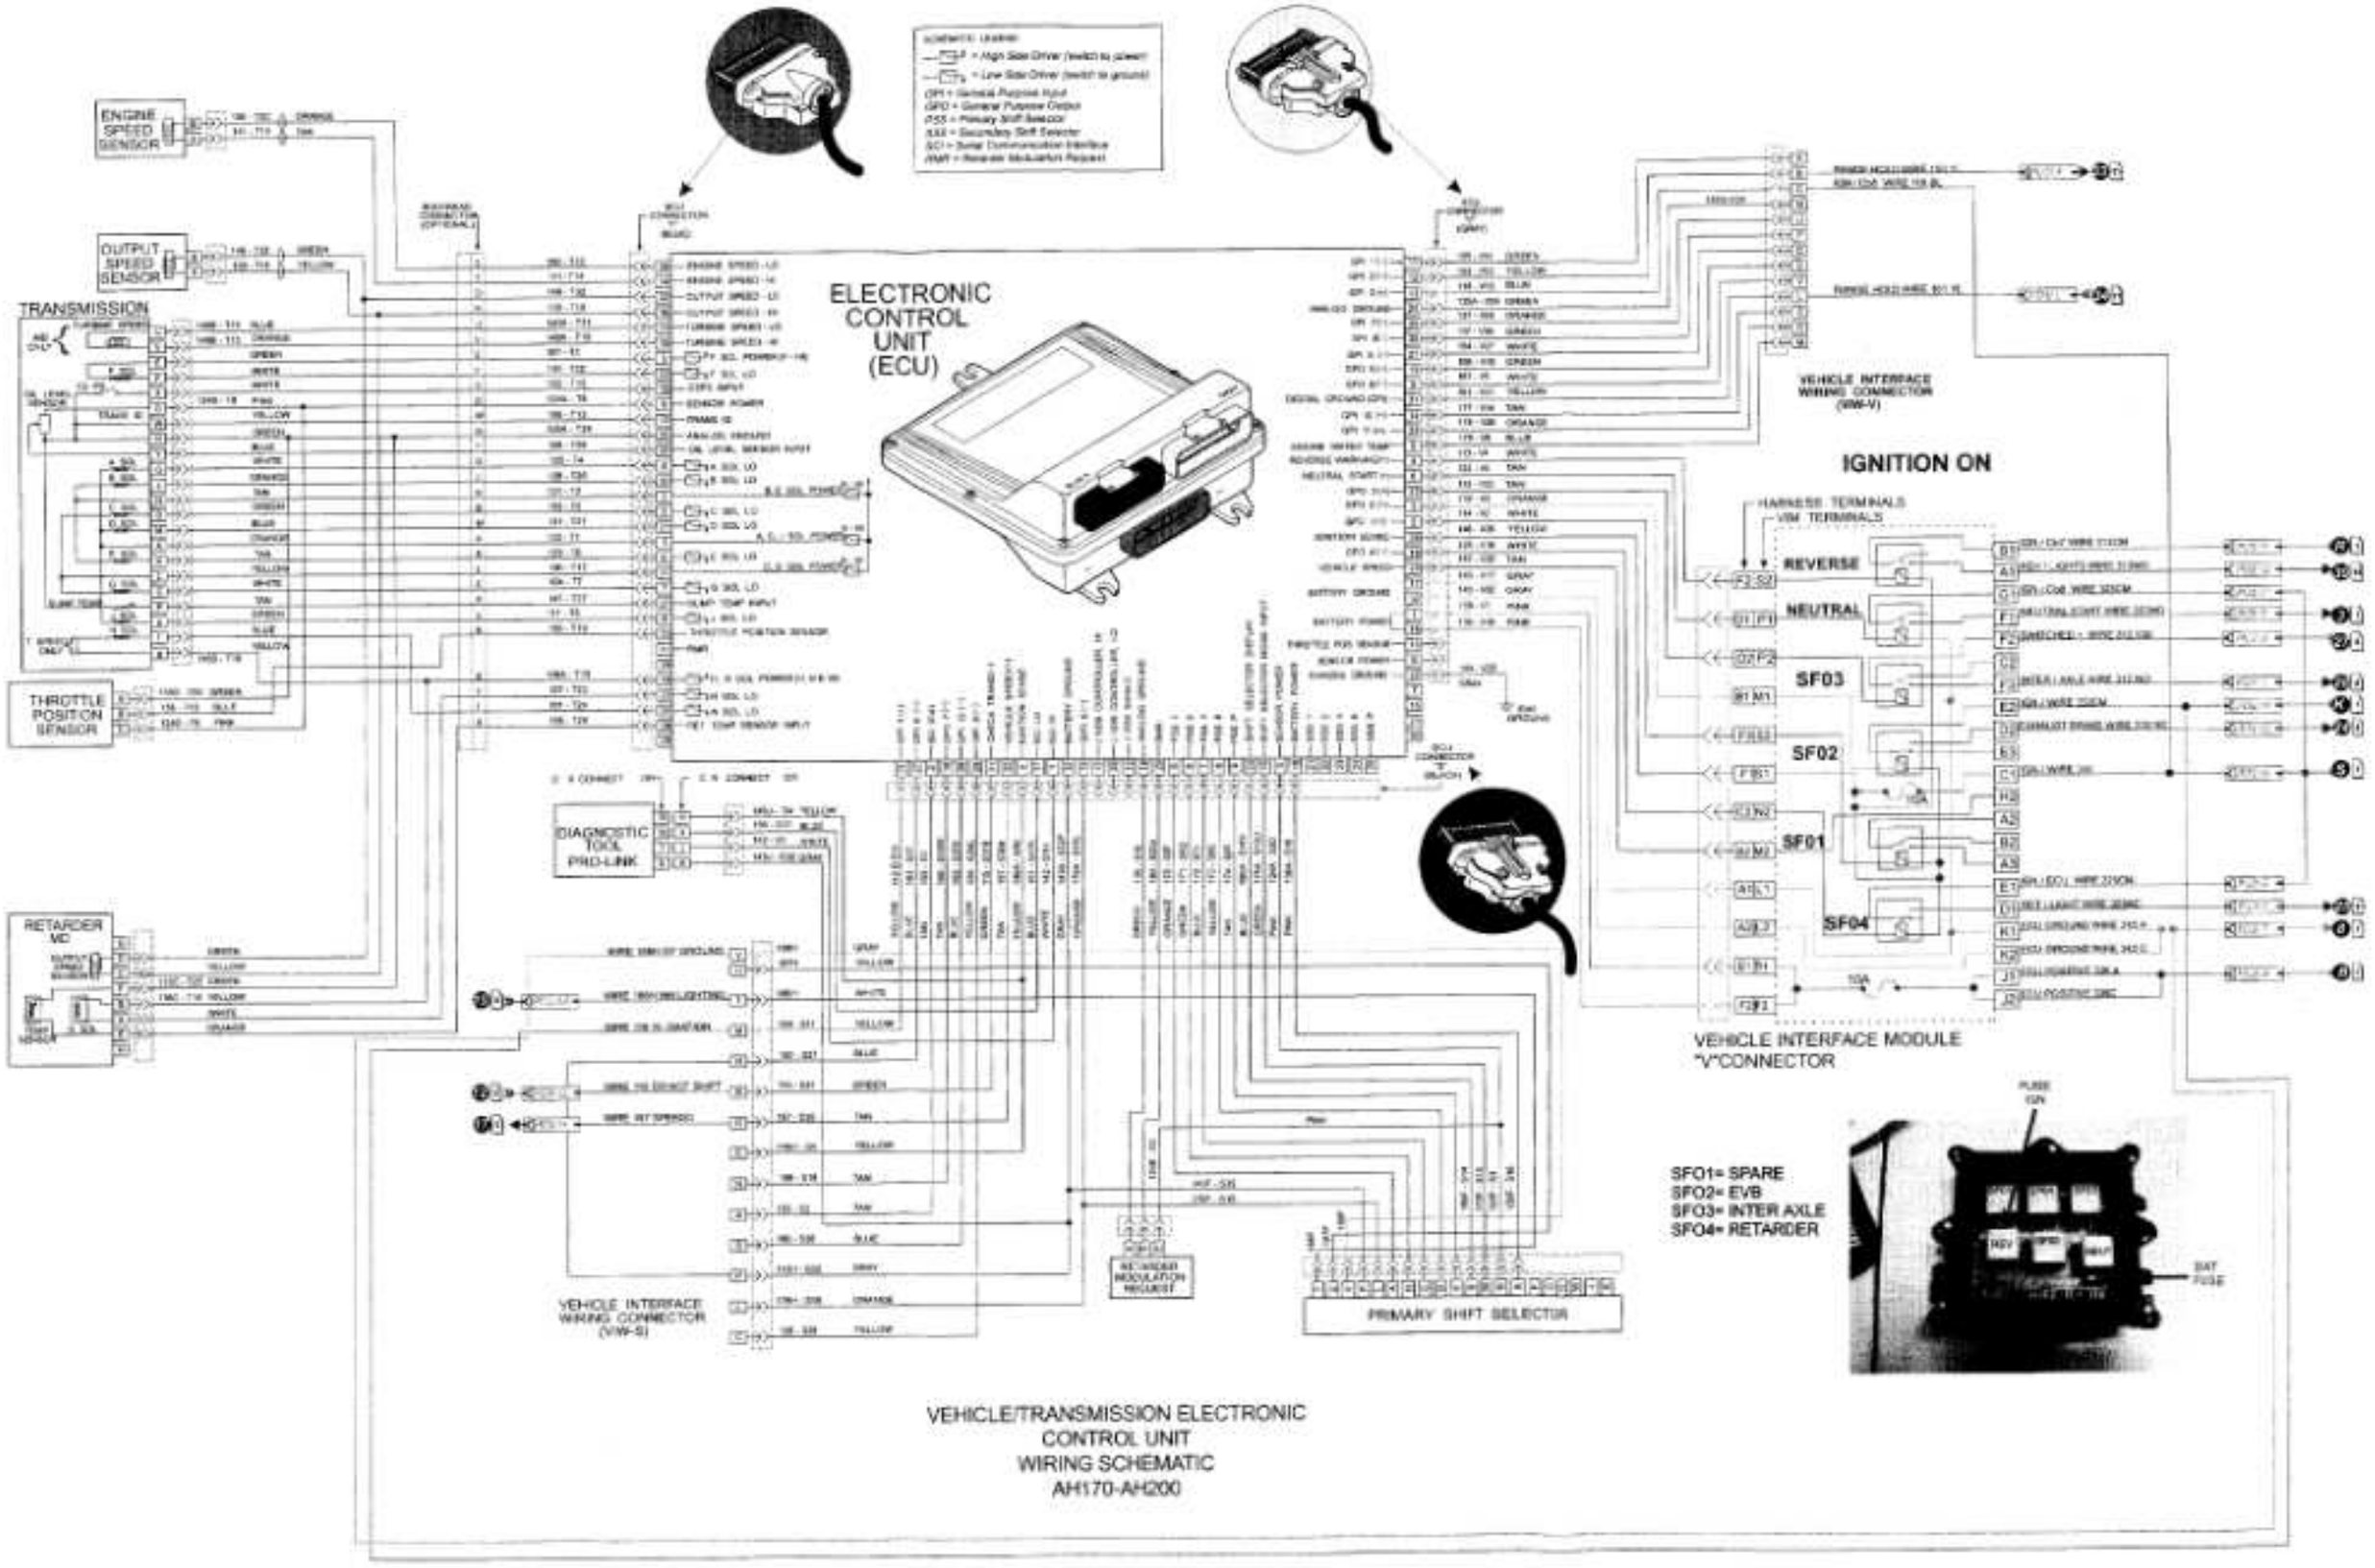

VEHICLE/TRANSMISSION ELECTRONIC CONTROL UNIT WIRING SCHEMATIC AH170-AH200

MidWestTech | Hitachi AH170, AH200, AH25 Articulated Dump Truck Service Manual | Publication KM-TM1725B

Order the manual at mid-west-tech.com >