
ILLUSTRATED PARTS LIST

KUBOTA

L260P

TRACTOR

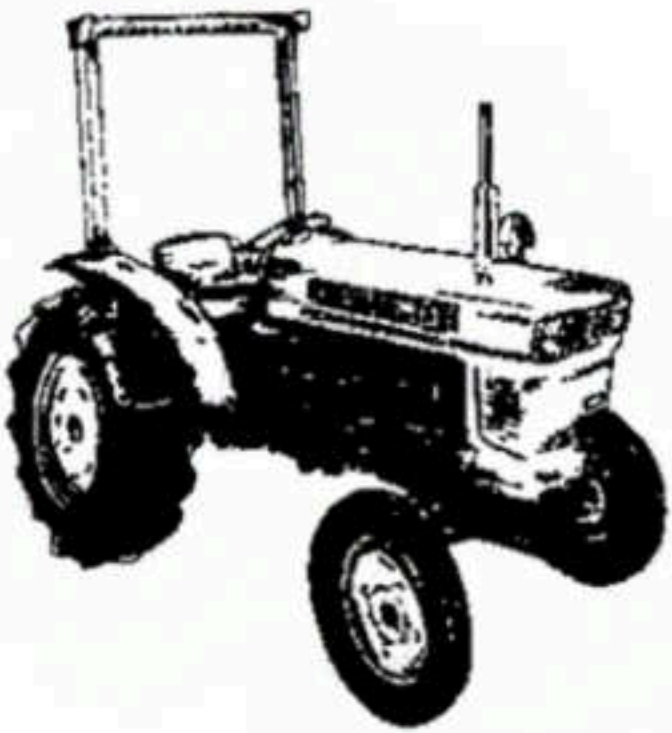

Kubota

Order the manual at mid-west-tech.com >

CYLINDER HEAD

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15151-03114	CYLINDER HEAD	1			ORDER BY REF.No.073	0	0
002	15151-03140	COMBUSTION CHAMBER	2			ORDER BY REF.No.073	0.09	0.198
003	15103-01280	CAP SEALING	1			ORDER BY REF.No.073	0	0
004	15109-13543	GUIDE INTAKE VALVE	2			ORDER BY REF.No.073	0	0
005	15109-13563	GUIDE EXHAUST VALVE	2			ORDER BY REF.No.073	0	0
006	15109-13600	CIR-CLIP	4			ORDER BY REF.No.073	0.001	0.0022
007	14301-33630	PLUG	2			ORDER BY REF.No.073	0.001	0.0022
008	06311-70015	PLUG EXPANSION	2			ORDER BY REF.No.073	0	0
009	15109-13112	VALVE INTAKE	2				0	0
010	15109-13122	VALVE EXHAUST	2				0	0
011	15108-13310	CIR-CLIP	4				0.001	0.0022
012	15131-13240	SPRING VALVE	4				0.057	0.1254
013	15109-13412	SEAT VALVE SPRING	4				0	0
014	15109-13330	RETAINER VALVE SP.	4				0.033	0.0726
015	15108-13360	COLLET VALVE SPRING	4				0.004	0.0088
016	15109-13320	O RING	4				0.001	0.0022
017	15109-13150	SEAL VALVE STEM	4				0.001	0.0022
018	15151-14010	ASS'Y COVER CYL.HEAD	1				0.9	1.98
019	15151-14512	VALVE COVER HEAD	1			ORDER BY REF.No.018	0	0
020	15109-14522	GASKET VALVE COVER	1			ORDER BY REF.No.018	0	0
021	15109-05410	COVER BREATHER	1			ORDER BY REF.No.018	0.03	0.066
022	05614-20214	RIVET	4			ORDER BY REF.No.018	0.001	0.0022
023	01114-01028	BOLT	2				0	0
024	15109-14630	GASKET	2				0.001	0.0022
025	15124-66060	ASS'Y LEVER DECOMP.	1			INCLUDES REF.No.026 TO 028	1.34	2.948
026	15124-66252	LEVER DECOMPRESS 2	1			ORDER BY REF.No.025	0	0
027	15109-66303	SHAFT DECOMPRESS 2	1			ORDER BY REF.No.025	0	0
028	05412-00425	PIN SPRING	1			ORDER BY REF.No.025	0.001	0.0022
029	04811-00110	O RING	2				0.001	0.0022
030	15151-66040	ASS'Y SHAFT DECOMP.	1				0.274	0.6028
031	15109-66263	LEVER DECOMPRESS 1	1			ORDER BY REF.No.030	0	0
032	15124-66953	SHAFT DECOMPRESS 1	1			ORDER BY REF.No.030	0	0
033	05412-00425	PIN SPRING	1			ORDER BY REF.No.030	0.001	0.0022
034	15124-66953	CAM	1			ORDER BY REF.No.030	0	0
035	15109-66960	CAM DECOMPRESS	2				0.034	0.0748
036	01010-00625	BOLT	2				0	0
037	04512-00060	WASHER LOCK	2				0	0
038	15124-66983	SPRING PLATE	1				0	0
039	15124-66990	BOLT	2				0.005	0.011
040	15124-66542	HOLDER DECOMP.WIRE	1				0.402	0.8844
041	01010-00822	BOLT	2				0	0
042	01010-00822	WASHER LOCK	2				0	0
043	15124-66280	SPRING	1				0.01	0.022
044	15109-14050	ASS'Y SHAFT ROCK-ARM	1				0.39	0.858
045	15109-14260	SHAFT FOCKER ARM	1			ORDER BY REF.No.044	0	0
046	03410-01010	SCREW SET	2			ORDER BY REF.No.044	0	0
047	15124-14354	BRACKET ROCKER ARM	2				0	0
048	15121-14410	STUD	2				0.039	0.0858
049	15109-14380	NUT	2				0.033	0.0726
050	04512-00100	WASHER LOCK	2				0	0
051	15109-14420	SCREW SET	1				0.005	0.011

MidWestTech | Kubota L260P Tractor Parts Manual | Publication L260P Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
052	15109-14030	ASS'Y ROCKER ARM	4			INCLUDES REF.No.053 TO 056	0.14	0.308
053	15109-14112	ROCKER ARM	4			ORDER BY REF.No.052	0	0
054	15109-14180	BUSHING	4			ORDER BY REF.No.052	0.017	0.0374
055	15108-14232	SCREW ADJUSTING	4			ORDER BY REF.No.052	0	0
056	15021-14240	NUT	4			ORDER BY REF.No.052	0.003	0.0066
057	15109-14310	SPRING	1				0.01	0.022
058	15151-14430	WASHER	4				0.006	0.0132
059	04612-00200	CIR-CLIP EXTERNAL	2				0.001	0.0022
060	15151-05080	ASS'Y COVER BREATHER	1				0.55	1.21
061	15151-05413	COVER BREATHER VALVE	1			ORDER BY REF.No.060	0	0
062	15111-05552	PIPE JOINT	1			ORDER BY REF.No.060	0	0
063	15111-05430	GASKET	1			ORDER BY REF.No.060	0.001	0.0022
064	15111-05210	VALVE BREATHER	1				0.005	0.011
065	15111-05640	RETAINER BREATHER V.	1				0.016	0.0352
066	15151-04430	NUT	1				0.006	0.0132
067	15111-05250	STUD	1				0.014	0.0308
068	15021-05280	NUT	1				0	0
069	15021-33660	GASKET	1				0.001	0.0022
070	15151-05510	PIPE BREATHER	1				0.08	0.176
071	15151-05592	CLAMP PIPE	2				0	0
072	01010-00812	BOLT	2				0	0
073	15151-03020	ASS'Y CYLINDER HEAD	1				20.5	45.1

MidWestTech | Kubota L260P Tractor Parts Manual | Publication L260P Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15151-01010	ASS'Y CRANKCASE	1			INCLUDES REF.No.002 TO 014	60	132
002	15151-01123	CRANKCASE	1			ORDER BY REF.No.001	0	0
003	15103-01280	CAP SEALING	4			ORDER BY REF.No.001	0	0
004	15109-01712	CAP SEALING	1			ORDER BY REF.No.001	0	0
005	15151-33610	SCREW SET	3			ORDER BY REF.No.001	0.006	0.0132
006	15109-33620	PIN	1			ORDER BY REF.No.001	0.002	0.0044
007	06311-70015	PLUG EXPANSION	4			ORDER BY REF.No.001	0	0
008	15109-33650	PIN PIPE	1			ORDER BY REF.No.001	0.005	0.011
009	05011-00818	PIN STRAIGHT	1			ORDER BY REF.No.001	0	0
010	05011-00408	PIN STRAIGHT	1			ORDER BY REF.No.001	0	0
011	05011-00612	PIN STRAIGHT	2			ORDER BY REF.No.001	0	0
012	05011-01025	PIN STRAIGHT	2			ORDER BY REF.No.001	0	0
013	15109-16420	METAL CAMSHAFT 2	1			ORDER BY REF.No.001	0.06	0.132
014	15109-23472	METAL CAMSHAFT 1	1			ORDER BY REF.No.001	0	0
015	06312-10100	PLUG	4				0.147	0.3234
016	15101-33662	PACKING	4				0	0
017	15151-33630	PLUG	2				0.025	0.055
018	15109-33660	PACKING	2				0.001	0.0022
019	15109-33700	O RING	1				0.001	0.0022
020	14412-73110	COCK DRAIN	1				0.09	0.198
021	15103-94590	LABEL DRAIN	1				0.001	0.0022
022	15121-02315	LINER CYLINDER	2				0	0
023	15121-02350	GASKET CYL.LINER	4				0.003	0.0066
024	15151-03412	STUD CYLINDER HEAD 1	8				0	0
025	15151-03420	STUD CYLINDER HEAD 2	1				0.174	0.3828
026	15021-03514	NUT CYLINDER HEAD	9				0	0
027	15151-03115	CYLINDER HEAD	1				0	0
028	15151-03310	GASKET CYLINDER HEAD	1				0	0
029	15151-03322	SHIM CYL.HEAD GASKET	2				0	0
030	15109-01030	ASS'Y COVER SIDE	1				1.24	2.728
031	15109-01312	COVER SIDE	1			ORDER BY REF.No.030	0	0
032	15109-36422	GUIDE OIL GAUGE	1			ORDER BY REF.No.030	0	0
033	15109-36442	O RING	1			ORDER BY REF.No.030	0	0
034	15109-01340	PACKING SIDE COVER	1				0.002	0.0044
035	01010-00818	BOLT	8				0	0
036	04512-00080	WASHER SPRING	8				0	0
037	15109-36164	ASS'Y GAUGE OIL	1				0	0
038	15311-32110	FILTER OIL 1	1				0.3	0.66
039	10225-32172	GASKET	1				0	0
040	15021-39010	SWITCH OIL	1				0.05	0.11
041	15213-32020	FILTER OIL 2	1			THROW AWAY TYPE	0.89	1.958
042	15213-32320	GASKET	1				0	0
043	01010-50838	BOLT	4				0	0
044	04512-00080	WASHER LOCK	4				0	0
045	04012-00080	WASHER FLAT	4				0	0
046	15109-52030	ASS'Y PUMP FEED	1				1.25	2.75
047	15109-52140	GASKET	1				0.001	0.0022
048	01010-00618	BOLT	3				0	0
049	04512-00060	WASHER LOCK	3				0	0
050	15109-42010	COMP.PIPE FUEL 1	1			INCLUDES REF.No.051 TO 053	0.042	0.0924

MidWestTech | Kubota L260P Tractor Parts Manual | Publication L260P Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15109-04025	ASS'Y CASE GEAR	1			INCLUDES REF.No.002 003	0	0
002	15109-04117	CASE GEAR	1			ORDER BY REF.No.001	0	0
003	15109-33640	PIN	2			ORDER BY REF.No.001	0.001	0.0022
004	15109-04136	PACKING GEAR CASE	1				0	0
005	01513-00832	STUD	1				0	0
006	01513-00820	STUD	1				0	0
007	15151-04430	NUT	2				0.006	0.0132
008	04512-00080	WASHER LOCK	7				0	0
009	05011-00818	PIN STRAIGHT	1				0	0
010	15109-04145	COVER GEAR CASE	1				0	0
011	15109-04172	GASKET G/C COVER	1				0	0
012	01010-00865	BOLT	5				0	0
013	01010-00830	BOLT	8				0	0
014	15109-04160	BOLT REAMER	2				0.028	0.0616
015	15151-04430	NUT	2				0.006	0.0132
016	04512-00080	WASHER LOCK	15				0	0
017	15121-24112	GEAR CRANKSHAFT	1				0	0
018	15109-23310	RING OIL DEFLECTING	1				0.035	0.077
019	15109-23250	COLLAR	1				0.106	0.2332
020	04811-00350	O RING	1				0.002	0.0044
021	09550-00003	SEAL OIL	1				0.025	0.055
022	15109-24010	ASS'Y GEAR IDLE	1				1.1	2.42
023	15109-24212	GEAR IDLE	1			ORDER BY REF.No.022	0	0
024	15109-24280	BUSHING	2				0.046	0.1012
025	15109-24020	ASS'Y SHAFT IDLE GEA	1				0.29	0.638
026	15109-24254	SHAFT IDLE GEAR	1			ORDER BY REF.No.025	0	0
027	05011-00408	PIN STRAIGHT	2			ORDER BY REF.No.025	0	0
028	15109-24290	BOLT	1				0	0
029	15109-24270	STOPPER	1				0.054	0.1188
030	15109-24310	WASHER CLAW	1				0.005	0.011
031	15109-16512	GEAR CAMSHAFT	1				0	0
032	04612-00300	CIR-CLIP EXTERNAL	1				0.003	0.0066
033	15121-35010	ASS'Y PUMP OIL	1				1.2	2.64
034	15109-35152	GASKET OIL PUMP	1				0	0
035	01010-00640	BOLT	6				0	0
036	04512-00060	WASHER LOCK	6				0	0
037	15109-35660	GEAR HELICAL	1				0.264	0.5808
038	15021-35682	NUT	1				0	0
039	05011-00612	PIN STRAIGHT	2				0	0
040	15108-35670	WASHER FLAT	1				0.003	0.0066
041	15151-52720	FLANGE FUEL PUMP	1				0.55	1.21
042	15109-51150	GEAR HELICAL	1				1.011	2.2242
043	15109-52450	BOLT	4				0.01	0.022
044	15109-52483	PLATE DRIV H-METER 1	1				0.024	0.0528
045	15109-52493	PLATE DRIV H-METER 2	1				0	0
046	15109-52760	WASHER PLAIN	1				0.014	0.0308
047	04612-00400	CIR-CLIP EXTERNAL	1				0.005	0.011
048	15109-51202	ASS'Y SPT.INJ.PUMP	1				0	0
049	15109-51174	SUPPORT INJ.PUMP	1			ORDER BY REF.No.048	0	0
050	15109-52740	BUSHING	2			ORDER BY REF.No.048	0.071	0.1562
051	15109-51182	O RING	1				0	0
052	01513-00816	STUD	2				0	0
053	02156-00080	NUT	2				0	0
054	15109-52130	GASKET	1				0.002	0.0044
055	15109-87050	ASS'Y GEAR HELICAL	1				0.642	1.4124
056	15109-87310	GEAR HELICAL	1			ORDER BY REF.No.056	0.634	1.3948

MidWestTech | Kubota L260P Tractor Parts Manual | Publication L260P Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	32240-16102	ASS'Y STEERING	1			INCLUDES REF.No.002 TO 033	0	0
002	32240-16112	CASE STEERING GEAR	1				0	0
003	32210-16830	RING SNAP	1				0.001	0.0022
004	32200-16240	RACK	1			ORDER WITH REF.No.006 008 TO 012	0	0
005	32200-16120	SHAFT SECTOR GEAR	1				0.94	2.068
006	32240-16210	SHAFT STEERING	1			ORDER WITH REF.No.004 008 TO 012	0	0
007	32200-16220	BEARING BALL	2				0.068	0.1496
008	32200-16230	TUBE BALL	4			ORDER WITH REF.No.004 006 009 TO 012	0	0
009	32200-16250	CLAMP TUBE	1			ORDER WITH REF.No.004 006 008 010 TO 012	0	0
010	07715-00401	BALL	58			ORDER WITH REF.No.004 006 008 009 011 01	0.001	0.0022
011	03014-50408	SCREW ROUND HEAD	2			ORDER WITH REF.No.004 006 008 TO 010 012	0.002	0.0044
012	32240-16100	WASHER LOCK TOOTHED	2			ORDER WITH REF.No.004 006 008 TO 011	10.5	23.1
013	32200-16340	COVER GEAR CASE	1				0	0
014	32200-16362	COVER SIDE	1				0	0
015	32130-16480	SCREW ADJUSTING	1				0.025	0.055
016	02016-50100	NUT	1				0.009	0.0198
017	32130-16490	SHIM	1				0.012	0.0264
018	32200-16350	SHIM	1				0.007	0.0154
019	32200-16370	GASKET	1				0.001	0.0022
020	01011-10820	BOLT	8				0	0
021	04512-10080	WASHER LOCK	8				0	0
022	09500-28408	SEAL OIL	1				0.008	0.0176
023	09500-19328	SEAL OIL	1				0.015	0.033
024	02017-50220	NUT	1				0	0
025	04512-10220	WASHER LOCK	1				0	0
026	06312-10020	PLUG	1				0.015	0.033
027	32240-16510	COLUM STREERING	1			ORDER WITH REF.No.033	1.54	3.388
028	32200-16520	BUSHING	1				0.045	0.099
029	32210-16813	WHEEL STEERING	1				0	0
030	32210-16820	CAP HANDLE	1				0.023	0.0506
031	02116-50210	NUT	1				0	0
032	04512-10120	WASHER LOCK	1				0	0
033	32150-16850	HOLDER POST	1			ORDER WITH REF.No.027	0.018	0.0396
034	05811-00519	KEY WOODRUFF	1				0.004	0.0088
035	01173-51025	BOLT	4				0.021	0.0462
036	04512-10100	WASHER LOCK	4				0	0
037	05011-01025	PIN STRAIGHT	2				0	0
038	32240-16912	ARM PITMAN	1				0	0
039	32150-29383	CLAMP	1				0	0

MidWestTech | Kubota L260P Tractor Parts Manual | Publication L260P Order the manual at mid-west-tech.com >