KOBELCO

SHOP MANUAL

EXCAVATOR

SK350-8

Acera Mark 8
Tier III

LC91ZU0002P1 NA

Issued 11-2006

APPLICABLE:
SK350-8 . . . . . YC08U1601~

MidWestTech | Kobelco SK350-8 Acera Mark 8 Tier III Excavator Service Manual | Publication LC91ZU0002P1

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SPECIFICATIONS SECTION

0-SAFETY

0.1 GENERAL SAFETY INFORMATION 0-1
0.2 SAFETY PRECAUTIONS 0-3

1-OUTLINE

1.1 GENERAL PRECAUTIONS FOR MAKING REPAIRS 1-3
1.1.1 PREPARATION BEFORE DISASSEMBLING 1-3
1.1.2 SAFETY WHEN DISASSEMBLING AND ASSEMBLING 1-3
1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT 1-3
1.1.4 ELECTRICAL EQUIPMENT 1-4
1.1.5 HYDRAULIC PARTS 1-5
1.1.6 WELD REPAIR 1-5
1.1.7 ENVIRONMENTAL ISSUES 1-5
1.2 INTERNATIONAL UNIT SYSTEM 1-6

2-SPECIFICATIONS

2.1 NAME OF COMPONENTS 2-3
2.2 GENERAL DIMENSIONS 2-4
2.2.1 SK350–8 [6.50m (21ft-4in) Boom+3.30m (10ft-10in) Standard Arm+1.40m^3 (1.83cu•yd) Bucket] 2-4
2.2.2 SK350–8 [6.50m (21ft-4in) Boom+4.51m (13ft-7in) Long Arm+1.20m^3 (1.57cu•yd) Bucket] 2-4
2.3 WEIGHT OF COMPONENTS 2-6
2.4 TRANSPORTATION 2-8
2.4.1 OVERALL DIMENSIONS OF MACHINE ON A TRAILER 2-8
2.4.2 DIMENSIONS OF ATTACHMENT 2-9
2.5 SPECIFICATIONS AND PERFORMANCE 2-11
2.5.1 SPEED AND CLIMBING CAPABILITY 2-11
2.5.2 ENGINE 2-11
2.5.3 HYDRAULIC COMPONENTS 2-11
2.5.4 WEIGHT 2-11
2.6 TYPE OF CRAWLER 2-12
2.6.2 SK350LC-8 2-12
2.7 TYPE OF BUCKET 2-13
2.8 COMBINATIONS OF ATTACHMENT 2-14
2.9 ENGINE SPECIFICATIONS 2-15
2.9.1 SPECIFICATIONS 2-15
2.9.2 ENGINE CHARACTERISTIC CURVE (HINO J08E-TM) 2-16

MidWestTech | Kobelco SK350-8 Acera Mark 8 Tier III Excavator Service Manual | Publicat... Order the manual at mid-west-tech.com >

3-ATTACHMENT DIMENSIONS

3.1 BOOM 3-3
3.1.1 BOOM DIMENSIONAL DRAWING 3-3
3.1.2 BOOM MAINTENANCE STANDARD 3-4
3.2 ARM 3-5
3.2.1 ARM DIMENSIONAL DRAWING 3-5
3.2.2 ARM MAINTENANCE STANDARD 3-8
3.3 BUCKET 3-9
3.3.1 BUCKET DIMENSIONAL DRAWING 3-9
3.3.2 BUCKET DIMENSIONAL TABLE 3-9
3.3.3 LUG SECTION DIMENSIONAL DRAWING 3-10
3.3.4 BOSS SECTION DIMENSIONAL DRAWING 3-11

MAINTENANCE SECTION

11-TOOLS

11.1 STANDARD TORQUE SPECIFACTIONS FOR CAPSCREWS AND NUTS 11-2
11.2 SCREW SIZE 11-4
11.2.1 CAPSCREW (BOLT) 11-4
11.2.2 CAPSCREW (SOCKET BOLT) 11-4
11.2.3 SOCKET SET SCREW 11-4
11.3 TORQUE SPECIFICATIONS FOR HOSE AND FITTINGS 11-5
11.3.1 JOINT (O-RING TYPE) 11-5
11.3.2 HYDRAULIC HOSE (30° FLARE TYPE) 11-5
11.3.3 JOINT (ORS TYPE) 11-5
11.3.4 SPLIT FLANGE 11-5
11.4 TORQUE SPECIFICATIONS FOR NUTS AND SLEEVES 11-6
11.5 PLUG 11-7
11.5.1 PLUG FOR HYDRAULIC PIPE JOINT 11-7
11.5.2 PLUG FOR HYDRAULIC EQUIPMENT 11-8
11.6 SPECIAL SPANNER FOR TUBE 11-10
11.7 SPECIAL TOOLS 11-11
11.8 APPLICATION OF SCREW LOCKING COMPOUND AND SEALING COMPOUND 11-13
11.9 SUCTION STOPPER 11-14
11.9.1 COMPONENTS 11-14
11.9.2 DIMENSION 11-14
11.10 UPPER FRAME LIFTING JIG 11-15
11.11 ENGINE MOUNTING PEDESTAL 11-16

MidWestTech | Kobelco SK350-8 Acera Mark 8 Tier III Excavator Service Manual | Publicat... Order the manual at mid-west-tech.com >

12-STANDARD MAINTENANCE TIMETABLE

12.1 STANDARD WORKING TIME TABLE FOR THE MAINTENANCE OF EXCAVATOR....12-4
12.2 ENGINE MAINTENANCE SERVICE STANDARD TIME LIST (TEMPORARY EDITION)....12-15
12.2.1 MEASURING METHOD....12-15
12.2.2 WORKING CONDITION....12-15
12.2.3 STANDARD TIME CONSTITUENT....12-15
12.2.4 MEANING OF WORDS IN USE....12-17

13-MAINTENANCE STANDARD AND TEST PROCEDURE

13.1 HOW TO USE THE MAINTENANCE STANDARD....13-2
13.2 PERFORMANCE INSPECTION STANDARD TABLE....13-3
13.3 MEASUREMENT OF ENGINE SPEED....13-5
13.3.1 MEASUREMENT OF ENGINE SPEED....13-5
13.4 MEASUREMENT OF HYDRAULIC PRESSURE....13-6
13.4.1 PREPARING TO MEASURE HYDRAULIC PRESSURE....13-6
13.4.2 PLACE TO INSTALL PRESSURE GAUGE....13-6
13.4.3 PRESSURE ADJUSTMENT POSITION....13-7
13.4.4 PROCEDURE FOR ADJUSTING RELIEF VALVE....13-9
13.5 MEASURING TRAVEL PERFORMANCES....13-11
13.5.1 TRAVEL SPEED....13-11
13.5.2 DEVIATION OF TRAVEL....13-11
13.5.3 PERFORMANCES OF PARKING BRAKE....13-12
13.5.4 DRAIN RATE OF TRAVEL MOTOR....13-13
13.6 MEASURING SWING PERFORMANCES....13-14
13.6.1 SWING SPEED....13-14
13.6.2 PERFORMANCE OF SWING BRAKE....13-14
13.6.3 PERFORMANCE OF SWING PARKING BRAKE....13-15
13.6.4 DRAIN RATE OF SWING MOTOR....13-16
13.7 MEASURING ATTACHMENT OPERATING PERFORMANCES....13-17
13.7.1 OPERATING TIME OF CYLINDERS....13-17
13.7.2 CYLINDER LEAK CHECK....13-18
13.8 MEASURING PERFORMANCES OF SWING BEARING....13-19
13.9 MECHATRO CONTROLLER....13-20
13.9.1 ENGINE CONTROL INPUT / OUTPUT....13-20
13.9.2 ADJUSTMENT OF MECHATRO CONTROLLER OUTPUT (A-B-C ADJUSTMENT)....13-20
13.9.3 OPERATIONS IN THE EVENT OF A MECHATRO CONTROLLER FAILURE....13-26

MidWestTech | Kobelco SK350-8 Acera Mark 8 Tier III Excavator Service Manual | Publicat... Order the manual at mid-west-tech.com >

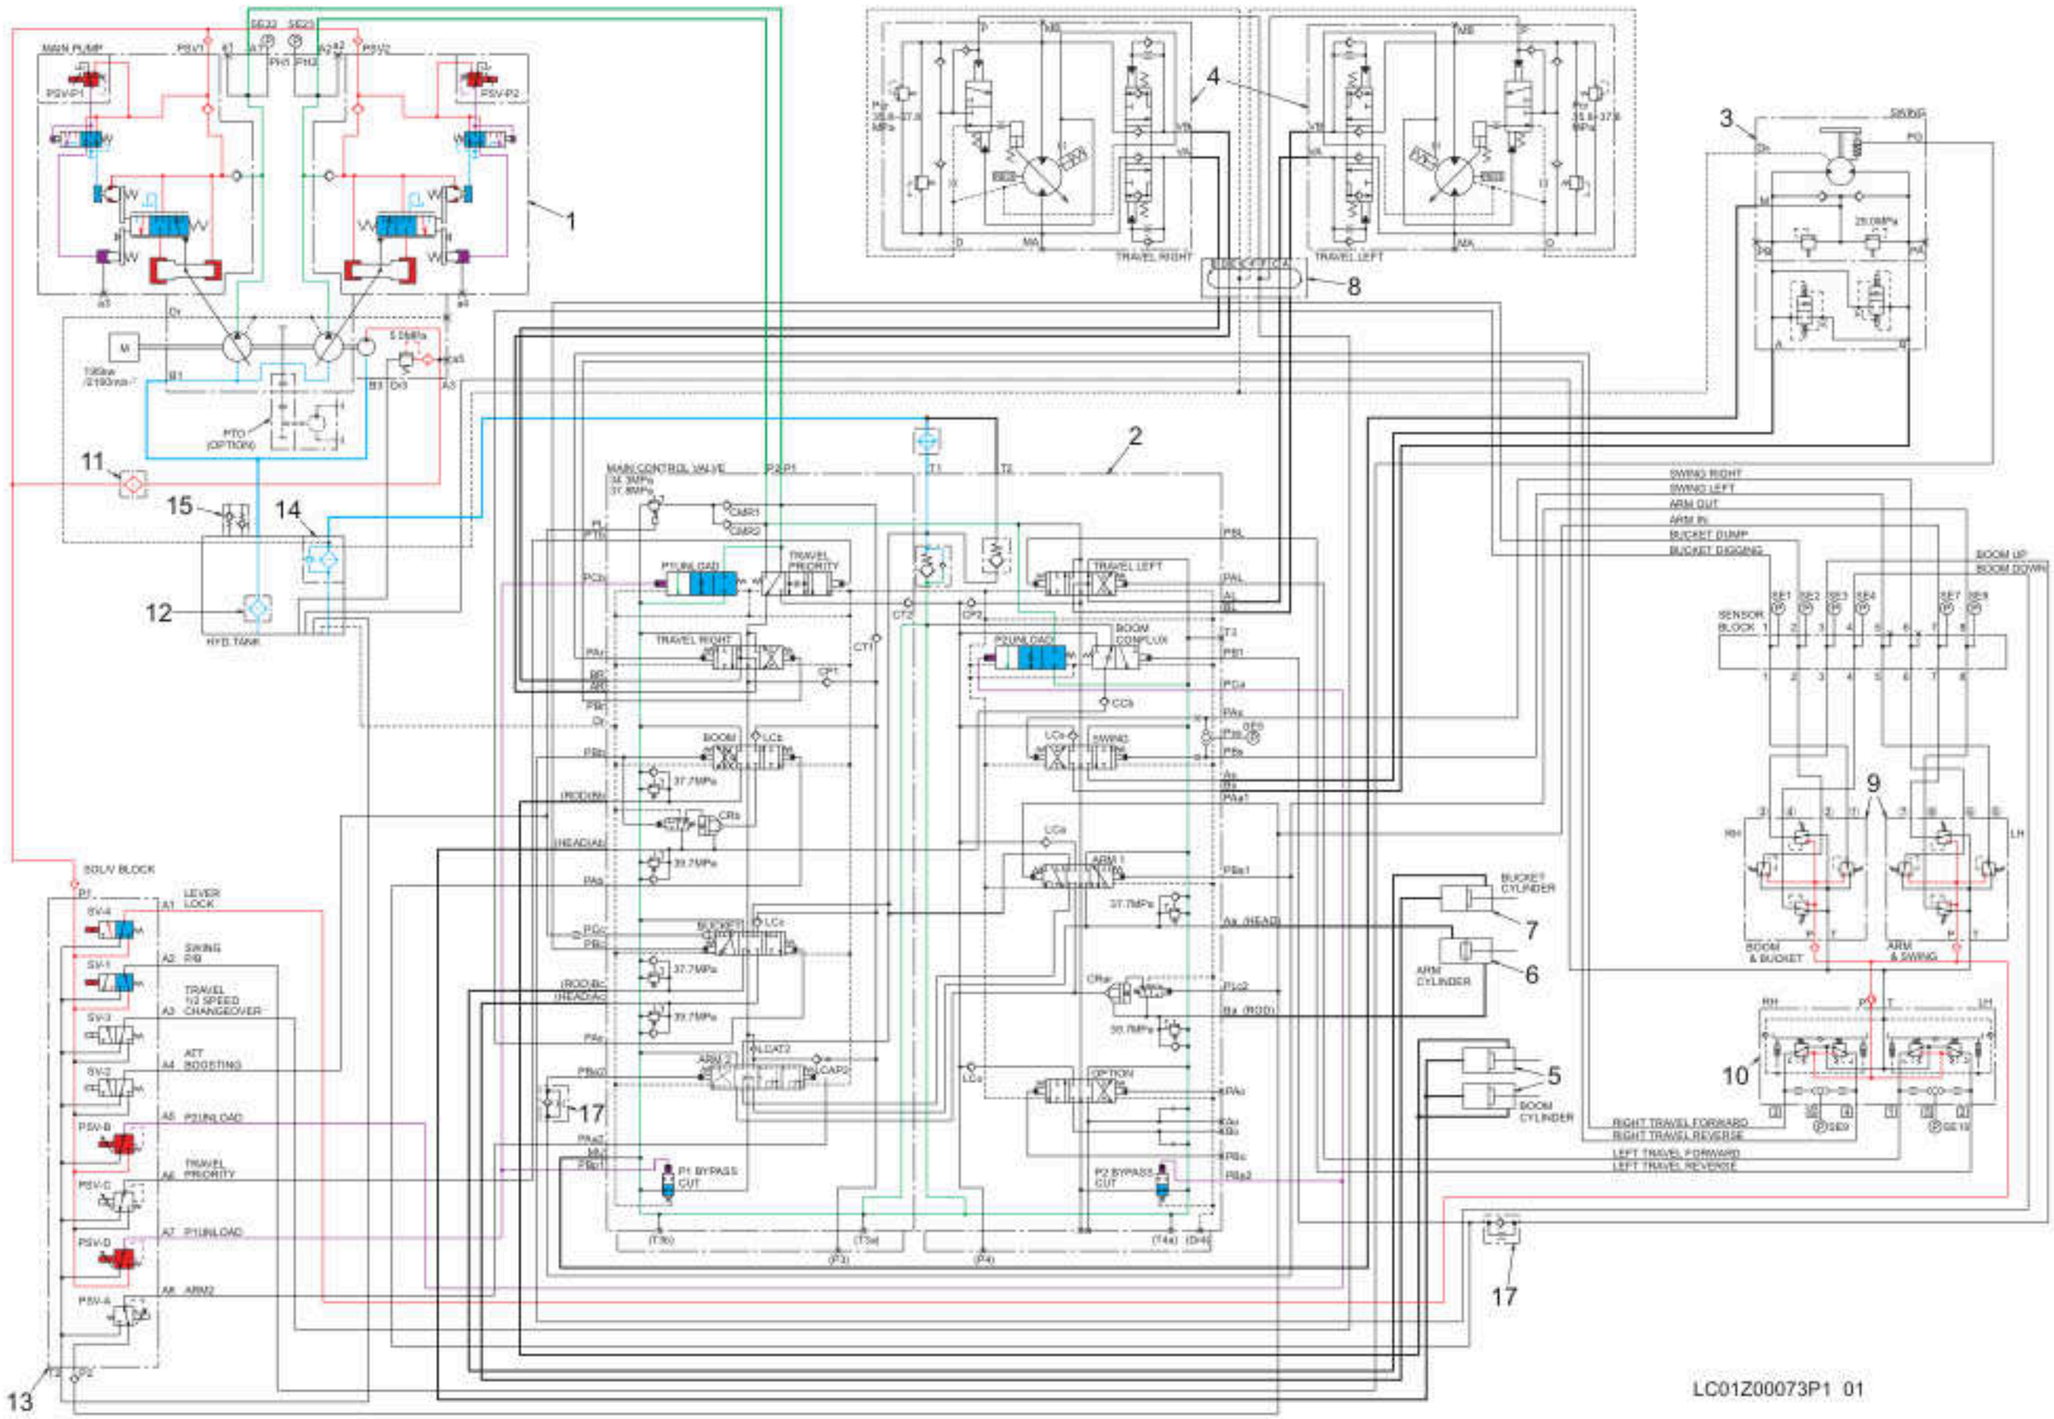


Fig. 22-13 PRESSURE DRAIN (RELEASE) CIRCUIT : At pressure release mode.

MidWestTech | Kobelco SK350-8 Acera Mark 8 Tier III Excavator Service Manual | Publication LC91ZU0002P1

Order the manual at mid-west-tech.com >