
ILLUSTRATED PARTS LIST

KUBOTA

M5500DT

TRACTOR

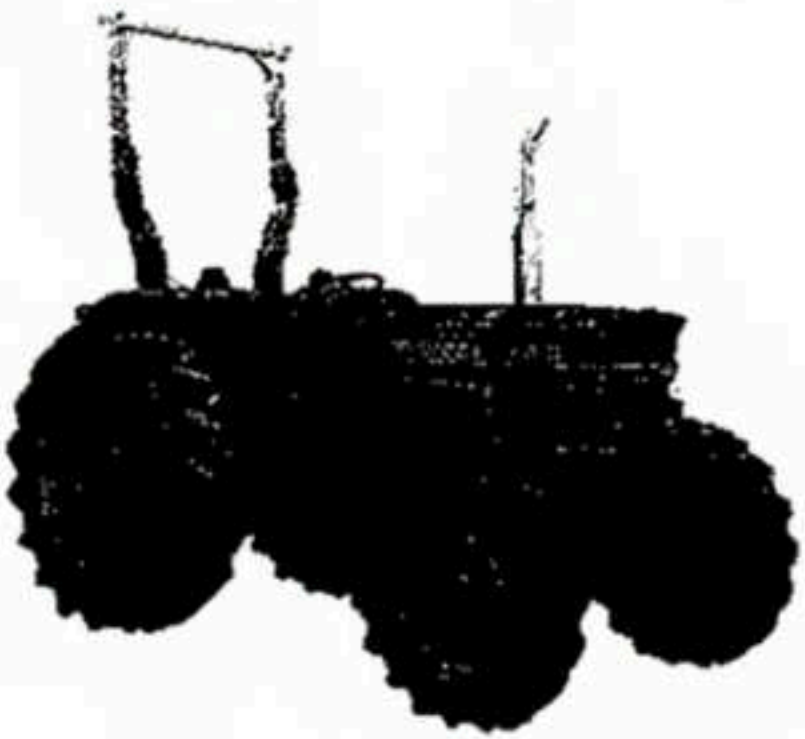

Kubota

Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	99999-99999	BLANK	0			ORDER BY REF.No.024	0	0
002	99999-99999	BLANK	0			ORDER BY REF.No.024	0	0
003	36200-32430	GEAR 32	1				1.54	3.388
004	36200-32440	COLLAR	1				0.45	0.99
005	33251-32450	COLLAR (1)	1				0.005	0.011
006	33251-32460	COLLAR (1)	1				0.008	0.0176
007	33251-32470	COLLAR (1)	1				0.009	0.0198
008	33251-32480	COLLAR (1)	1				0.01	0.022
009	33251-32490	COLLAR (1)	1				0.01	0.022
010	33251-32510	COLLAR (1)	1				0.011	0.0242
011	33251-32520	COLLAR (1)	1				0.011	0.0242
012	33251-32530	COLLAR (1)	1				0.011	0.0242
013	33251-32540	COLLAR (1)	1				0.011	0.0242
014	33251-32550	COLLAR (1)	1				0.012	0.0264
015	33251-32560	COLLAR (1)	1				0.012	0.0264
016	36200-32610	COLLAR (2)	1				0.023	0.0506
017	36200-32630	COLLAR (2)	1				0.025	0.055
018	36200-32650	COLLAR (2)	1				0.027	0.0594
019	36200-32670	COLLAR (2)	1				0.029	0.0638
020	36200-32690	COLLAR (2)	1				0.031	0.0682
021	14351-23450	BEARING MAIN 1	1				0.7	1.54
022	33400-32260	BEARING	1				1.13	2.486
023	33251-32440	NUT	1				0.088	0.1936
024	36300-32400	ASSY GEAR BEVEL	1			EXCEPT [NZ][AU]	9.8	21.56
024	36500-32400	ASSY GEAR BEVEL	1			[NZ][AU]	13	28.6

MidWestTech | Kubota M5500DT Tractor Parts Manual | Publication M5500DT Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	99999-99999	BLANK	0			ORDER BY REF.No.018	0	0
002	33251-82060	BUSH O/P ARM SHAFT R	2				0	0
003	36200-82130	BUSH O/P ARM SHAFT L	2				0	0
004	36200-82140	GASKET	1				0	0
005	36200-82150	STUD	2				0.12	0.264
006	36200-82160	BOLT	3				0.14	0.308
007	35702-82170	BOLT	2			[A][NZ][AU]	0.196	0.4312
007	36200-82170	BOLT	2			EXCEPT [A][NZ][AU]	0.17	0.374
008	01574-51240	STUD	2				0	0
009	02176-50120	NUT	4				0.01	0.022
010	04512-50120	WASHER SPRING	12				0	0
011	99999-99999	BLANK	0			ORDER BY REF.No.019	0	0
012	32280-41440	BUSH	2				0.044	0.0968
013	06613-30010	NIPPLE GREASE	2				0.01	0.022
014	01173-51235	BOLT	5				0.04	0.088
015	04512-50120	WASHER SPRING	5				0	0
016	36200-21610	BREATHER 1	1				0.008	0.0176
017	36200-21620	BREATHER 2	1				0.006	0.0132
018	36200-82100	ASSY CYLINDER OIL PR	1				35.75	78.65
019	36200-82120	ASSY BRACKET TOP LIN	1				2.002	4.4044
020	01173-51240	BOLT	3				0.045	0.099

MidWestTech | Kubota M5500DT Tractor Parts Manual | Publication M5500DT Order the manual at mid-west-tech.com >

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	99999-99999	BLANK	0			ORDER BY REF.No.042	0	0
002	36280-42270	ASSY BEARING	1				1.43	3.146
003	04612-00300	CIR-CLIP EXTERNAL	1				0.003	0.0066
004	36280-41270	SLEEVE	1				0	0
005	09500-38508	SEAL OIL	1				0.012	0.0264
006	70531-54750	NUT 35	1				0.105	0.231
007	33400-32710	CASE DIFF	1	<=10641			3.9	8.58
007	35450-32710	CASE DIFF	1	>=10642			4.8	10.56
008	33400-32720	GEAR DIFF SIDE 1	1				0.8	1.76
009	33400-32730	GEAR DIFF SIDE 2	1				1.1	2.42
010	99999-99999	BLANK	0			ORDER BU REF.No.041	0	0
011	33400-32760	BUSH	2	<=10641			0.024	0.0528
012	33400-32770	SHAFT DIFF PINION	1	<=10641			0.5	1.1
012	36330-32770	SHAFT DIFF PINION	1	>=10642			0	0
013	33251-32780	WASHER	2			SUITABILITY	0.025	0.055
014	33251-32790	WASHER	2			SUITABILITY	0.025	0.055
015	33400-32810	WASHER	2	<=10641			0.02	0.044
015	36330-32810	WASHER	2	>=10642			0.018	0.0396
016	33251-32820	KEY	1				0.002	0.0044
017	33400-32851	ASSY SHIFTER DIFF LO	1				0	0
018	99999-99999	BLANK	0			ORDER BY REF.No.042	0	0
019	36280-42320	BOLT	8				0.042	0.0924
020	36280-42410	CASE DIFF BEARING RH	1				1.04	2.288
021	36280-42420	CASE DIFF BEARING LH	1				1.21	2.662
022	04811-51050	O RING	2				0.003	0.0066
023	01517-51022	STUD	8				0	0
024	04512-50100	WASHER SPRING	8				0	0
025	02176-50100	NUT	8				0.005	0.011
026	08711-30209	BEARING	1				0.458	1.0076
027	08711-32011	BEARING	1				0.538	1.1836
028	36280-42430	SCREW	2				0.562	1.2364
029	09160-38558	SEAL OIL	2				0.018	0.0396
030	04811-00800	O RING	2				0.009	0.0198
031	36280-42440	STOPPER	2				0.004	0.0088
032	01202-50610	BOLT	2				0.004	0.0088
033	36280-42510	BAR SHIFT	1				0.624	1.3728
034	36280-42520	FORK SHIFT	1				0.53	1.166
035	33540-42530	CAM DIFFLOCK	1				0.011	0.0242
036	05411-00635	PIN SPRING	1				0.005	0.011
037	36280-42540	SPRING	1				0.102	0.2244
038	09500-16287	SEAL OIL	1				0.01	0.022
039	36200-32950	SHIM	1				0.002	0.0044
040	36280-43100	ASSY DIFF	1	<=10641			0	0
040	35450-32200	ASSY DIFF	1	>=10642			8.4	18.48
041	33400-32740	ASSY DIFF PINION	1	<=10641			0.31	0.682
041	36330-32750	ASSY DIFF PINION	1	>=10642			0	0
042	36280-42240	ASSY BEVEL PINION	1				5.5	12.1

MidWestTech | Kubota M5500DT Tractor Parts Manual | Publication M5500DT Order the manual at mid-west-tech.com >