
Model No. _____

Serial No. _____

PE3000 Series
Service & Parts Manual

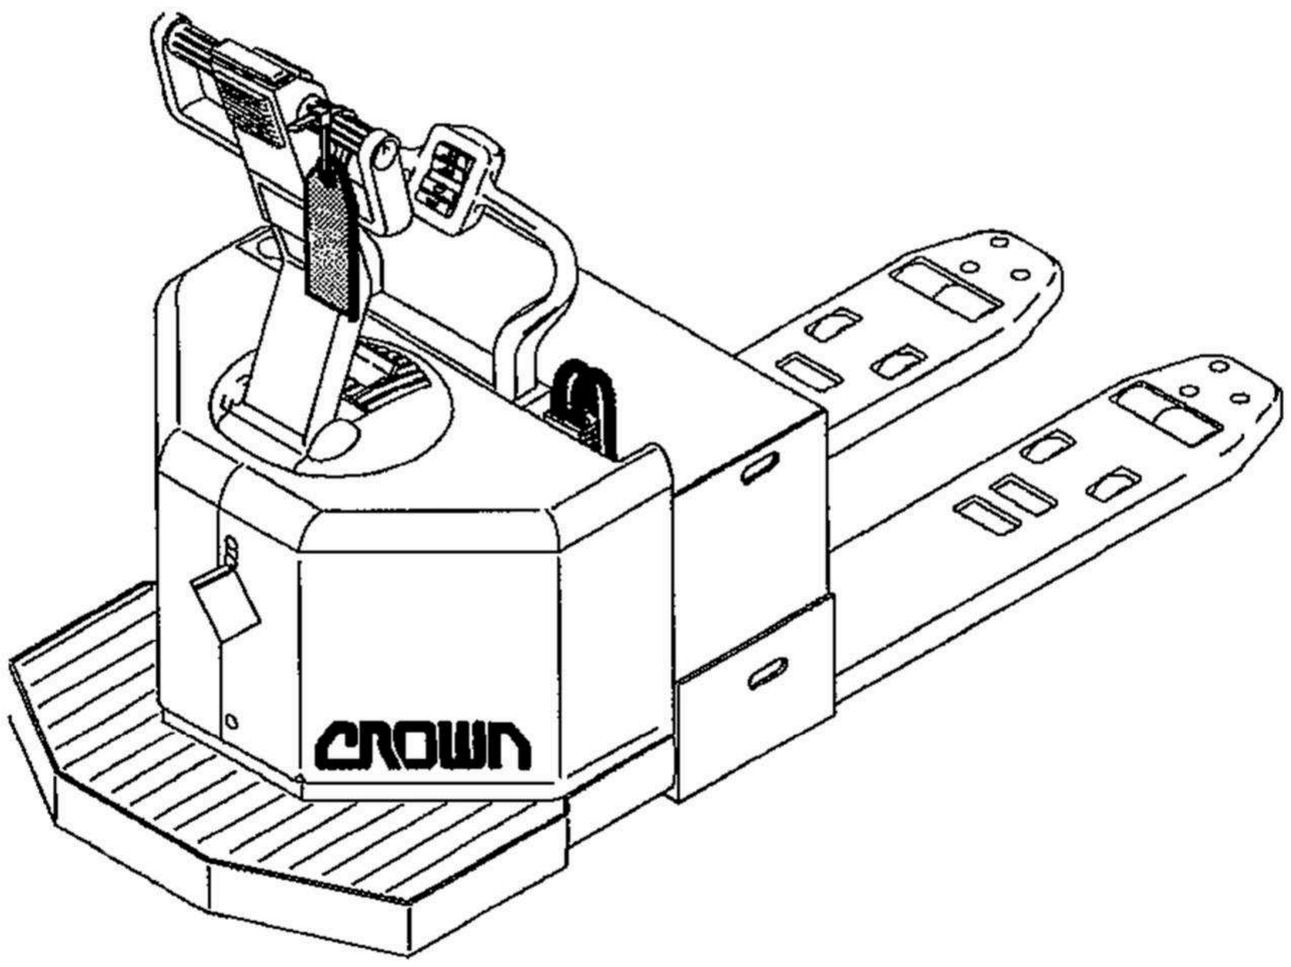


Crown 1986 PF7609 Rev 04/01

Re-Printed in U.S.A.

MidWestTech | Crown PE3000 Series Walkie Rider Pallet Truck Service Manual & Parts Catalog | Publication PF7609

Order the manual at mid-west-tech.com >

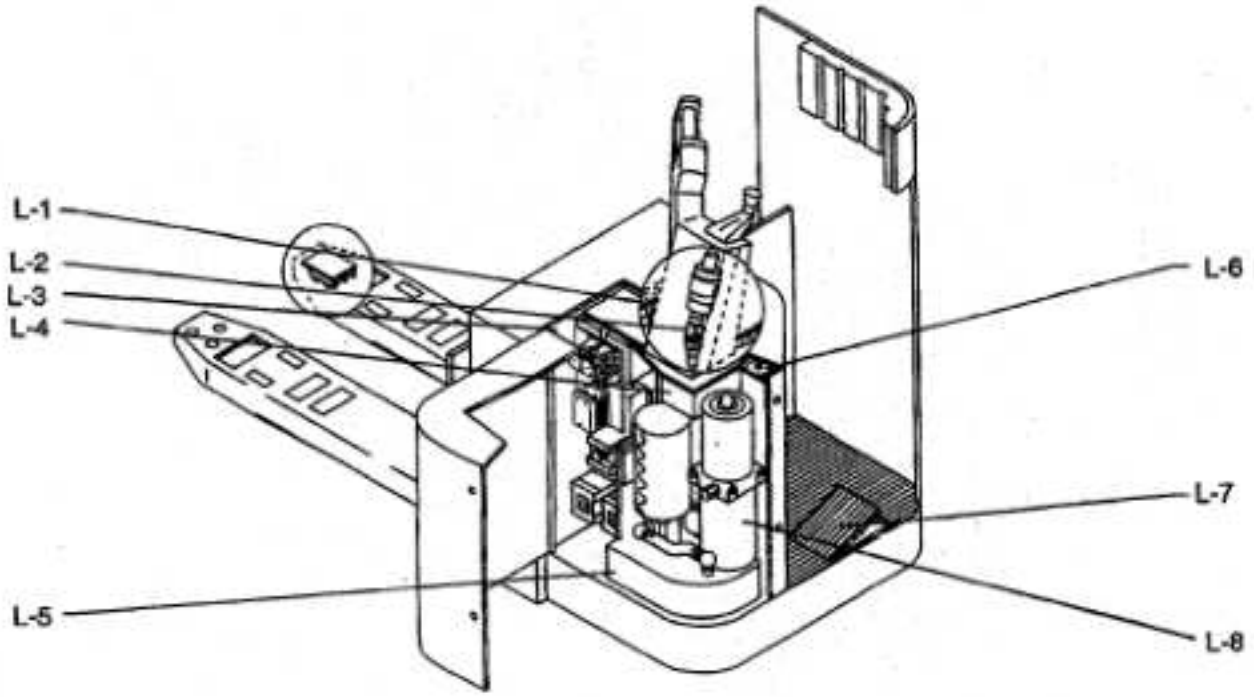

34215

ILLUSTRATION 1-3

LUBRICATION CHART


INDEX	COMPONENT	LUBE TYPE	QTY.	30 days 100 hr.	60 days 250 hr.	90 days 500 hr.	6 months 1000 hr.	12 months 2000 hr.
L-1	Steering Chain (PR)	F	AR		†			
L-2	Universal Joint (1 point) PR)	B	AR		L			
L-3	Door Hinges	F	AR		†			
L-4	Steering Gears (PR)	B	AR		†			
L-5	Hydraulic Reservoir- Power Steering (PR)	D	3.5 qt.		†	†	†	Chg.
L-6	Brake Reservoir (PR)	G	AR		†			
L-7	Brake Pedal Pivot (PR)	C	AR		†			
L-8	Hydraulic Reservoir-Lift	D	2 qt.		†	†	†	Chg.

† - Check Chg. - Change L - Lubricate AR - As Required

See Lube Type Chart for explanation. Lubrication intervals for Freezer/Corrosion trucks must be changed to a frequency that will minimize corrosion and wear on moving shafts and parts.

M1.0 - 6435 - 002

MidWestTech | Crown PE3000 Series Walkie Rider Pallet Truck Service Manual & Part... Order the manual at mid-west-tech.com >

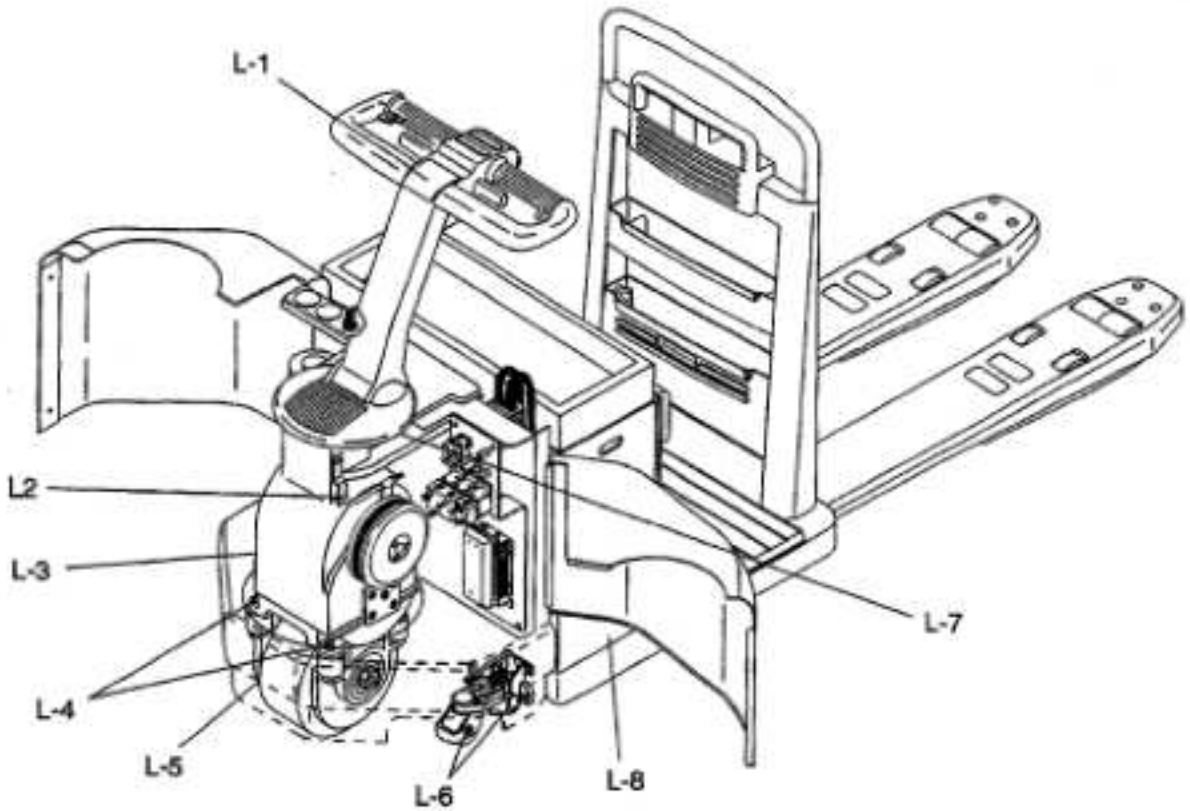

3851-01

ILLUSTRATION 1-4

LUBRICATION CHART

INDEX	COMPONENT	LUBE TYPE	QTY	30 days 100 hr.	60 days 250 hr.	90 days 500 hr.	6 months 1000 hr.	12 months 2000 hr.
L-1	Parking Brake (PC) & Brake Linkage	BB	AR		L			
L-2	Brake Linkage	C	AR		†			
L-3	Drive Unit-Level	A	3.5 pt.		†	†	†	Chg.
L-4	Drive Unit-Rollers (4 points)	F	AR		L			
L-5	Drive Unit-Axle (2 points)	F	AR		L			
* L-6	Caster (4 points), Quick Adjustment Caster (12 points), Quick Adjustment Caster w/Torsion Bar (14 points)	F	AR		L			
L-7	Drive Unit-Pivot (1 point)	F	AR		L			
L-8	Battery Rollers	C	AR		†			

† - Check Chg. - Change L - Lubricate AR - As Required

See Lube Type Chart for explanation. Lubrication intervals for Freezer/Corrosion trucks must be changed to a frequency that will minimize corrosion and wear on moving shafts and parts.

* Freezer/Corrosion Trucks – use low temperature (BB) grease on load wheels and caster wheels. Use type F grease on all other lift linkage and caster pivot points.

MidWestTech | Crown PE3000 Series Walkie Rider Pallet Truck Service Manual & Part... Order the manual at mid-west-tech.com >

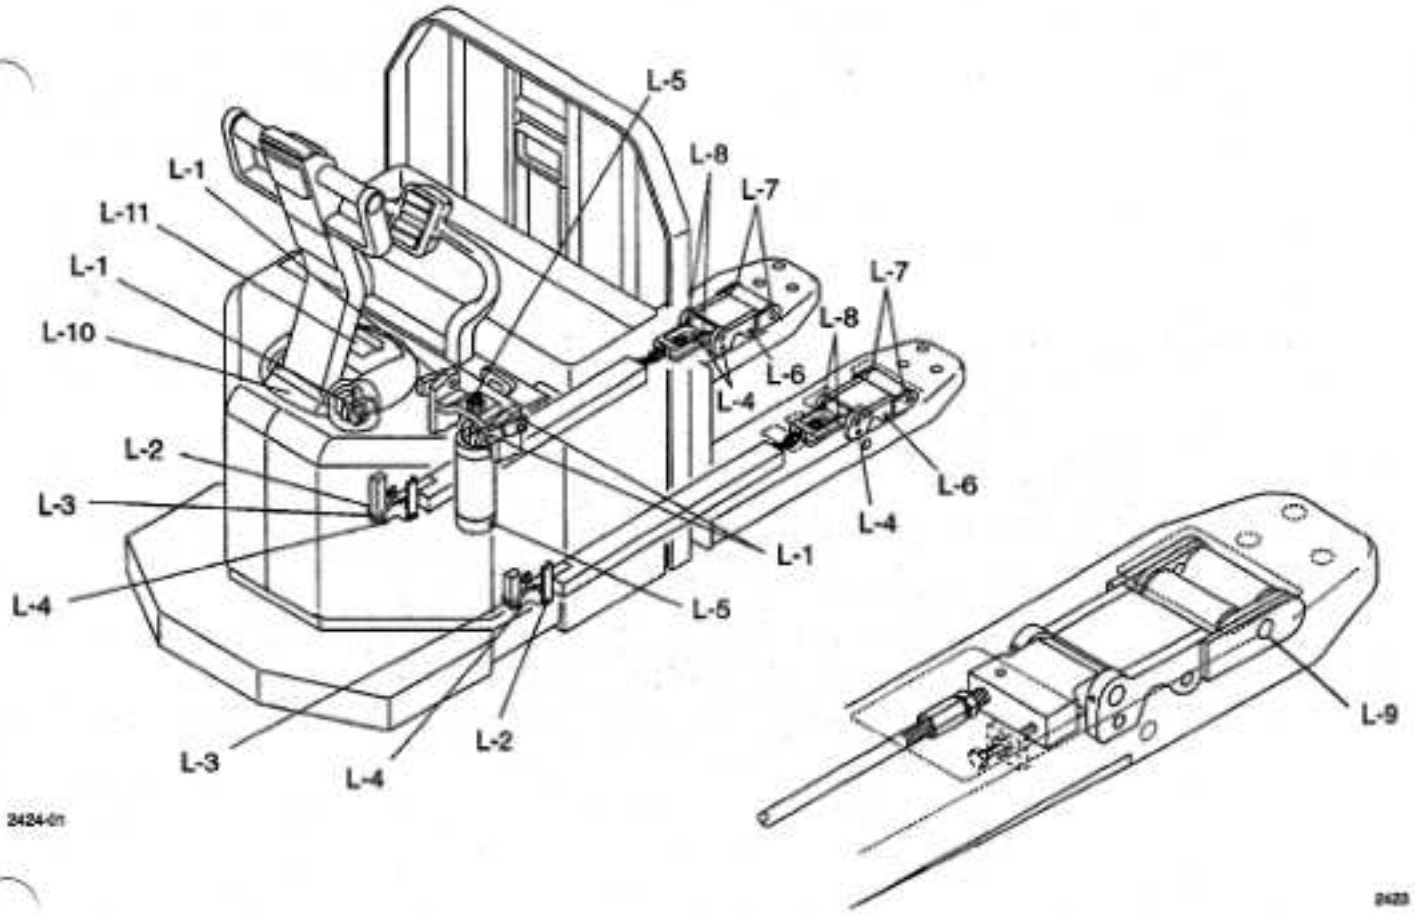


ILLUSTRATION 1-5

LUBRICATION CHART

INDEX	COMPONENT	LUBE TYPE	QTY.	30 days 100 hr.	60 days 250 hr.	90 days 500 hr.	6 months 1000 hr.	12 months 2000 hr.
* L-1	Upper Lift Linkage (4 points)	F	AR		L			
* L-2	Lower Linkage Pivot Pins (4 points)	F	AR		L			
* L-3	Power Unit Pivot (2 points)	F	AR		L			
* L-4	Tension Bars (9 in.[230mm] Fork-6 points. 7 in.[180mm] Fork-4 points)	F	AR		L			
L-5	Lift Cylinder (2 points)	F	AR		L			
* L-6	Rollers (2 points)	F	AR		L			
* L-7	Load Wheel Axle (4 points)	F	AR		L			
* L-8	Riser Pivot (4 points)	F	AR		L			
* L-9	Load Wheel Pivot Tandem) (4 points)	F	AR		L			
L-10	Torsion Springs	BB	AR		L			
L-11	Coast selector linkage, Yoke Roller Bearing and Double springs	BB	AR		L			

† - Check Chg - Change L - Lubricate AR - As Required

See Lube Type Chart for explanation. Lubrication intervals for Freezer/Corrosion trucks must be changed to a frequency that will minimize corrosion and wear on moving shafts and parts.

Freezer/Corrosion Trucks – use low temperature (BB) grease on load wheels and caster wheels. Use type F grease on all other lift linkage and caster pivot points.

MidWestTech | Crown PE3000 Series Walkie Rider Pallet Truck Service Manual & Part... Order the manual at mid-west-tech.com >