CRAWLER EXCAVATOR

SERVICE MANUAL

R110-7 (India)

HYUNDAI

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publication R1...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-19
Group 3 Swing Device 2-42
Group 4 Travel Device 2-54
Group 5 RCV Lever 2-68
Group 6 RCV Pedal 2-75

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-12
Group 5 Combined Operation 3-24

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-23
Group 4 Connectors 4-35

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode Selection System 5-3
Group 3 Power Boost System 5-4
Group 4 Travel Speed Control System 5-5
Group 5 Automatic Warming Up Function 5-6
Group 6 Engine Overheat Prevention Function 5-7
Group 7 Anti-Restart System 5-8
Group 8 Self-Diagnostic System 5-9

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Group 9 Engine Control System 5-11
Group 10 EPPR(Electro Proportional Pressure Reducing) Valve 5-17
Group 11 Prolix Switch 5-20
Group 12 Monitoring System 5-21

SECTION 6 TROUBLESHOOTING

Group 1 Before Trobleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-24
Group 4 Mechatronics System 6-41

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-21
Group 3 Track and Work Equipment 7-28

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-29
Group 5 Swing Device 8-43
Group 6 Travel Device 8-65
Group 7 RCV Lever 8-103
Group 8 Turning Joint 8-118
Group 9 Boom, Arm and Bucket Cylinder 8-123
Group 10 Undercarriage 8-140
Group 11 Work Equipment 8-152


SECTION 9 COMPONENT MOUNTING TORQUE

Group 1 Introduction Guide 9-1
Group 2 Engine System 9-2
Group 3 Electric System 9-4
Group 4 Hydraulic System 9-6
Group 5 Undercarriage 9-10
Group 6 Structure 9-11
Group 7 Work Equipment 9-14

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

2) R110D-7

(1) 4.3m(14' 1") MONO BOOM, 2.26m(7' 5") ARM AND REAR DOZER BLADE

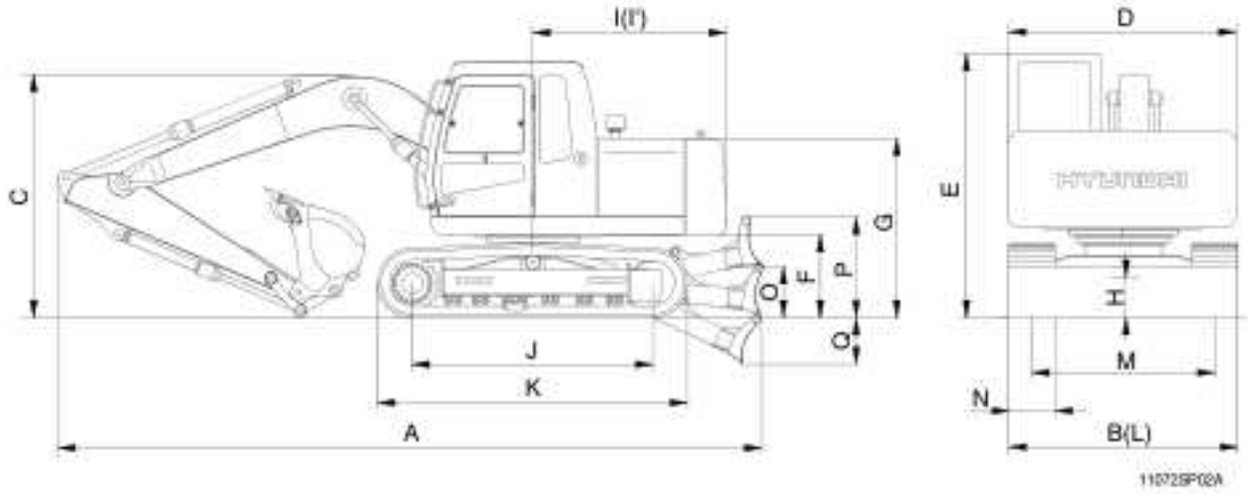


Description		Unit	Specification
Operating weight		kg(lb)	11900(26230)
Bucket capacity(SAE heaped), standard		$m^3(yd^3)$	0.45(0.59)
Overall length	A	mm(ft-in)	7650(25' 1")
Overall width, with 500mm shoe	B		2500(8' 2")
Overall height	C		2720(8' 11")
Superstructure width	D		2475(8' 1")
Overall height of cab	E		2800(9' 2")
Ground clearance of counterweight	F		900(2' 11")
Engine cover height	G		1990(6' 6")
Minimum ground clearance	H		440(1' 5")
Rear-end distance	I		2110(6' 11")
Rear-end swing radius	I'		2130(7' 0")
Distance between tumblers	J		2610(8' 7")
Undercarriage length	K		3340(10' 11")
Undercarriage width	L		2500(8' 2")
Track gauge	M		1990(6' 6")
Track shoe width, standard	N		500(20")
Height of blade	O		550(1' 10")
Ground clearance of blade up	P		500(1' 8")
Depth of blade down	Q		520(1' 8")
Travel speed(Low/high)		km/hr(mph)	3.4/5.5(2.1/3.4)
Swing speed		rpm	13.0
Gradeability		Degree(%)	35(70)
Ground pressure(500mm shoe)		$kgf/cm^2(psi)$	0.42(5.97)

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >


2. ENGINE SPEED IS SLOW AT ALL MODE

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

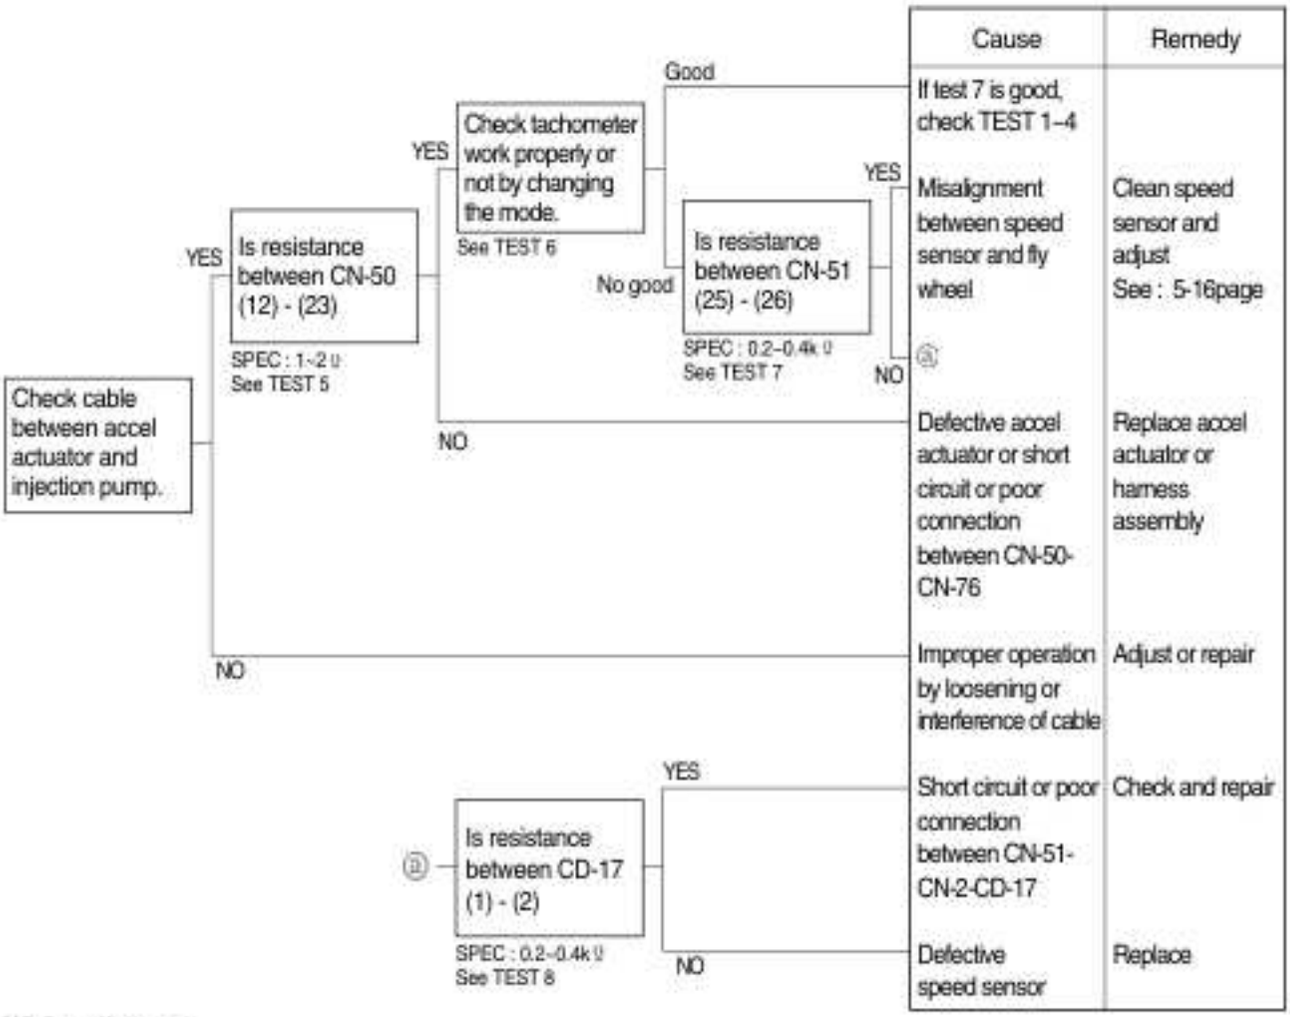


Wiring diagram

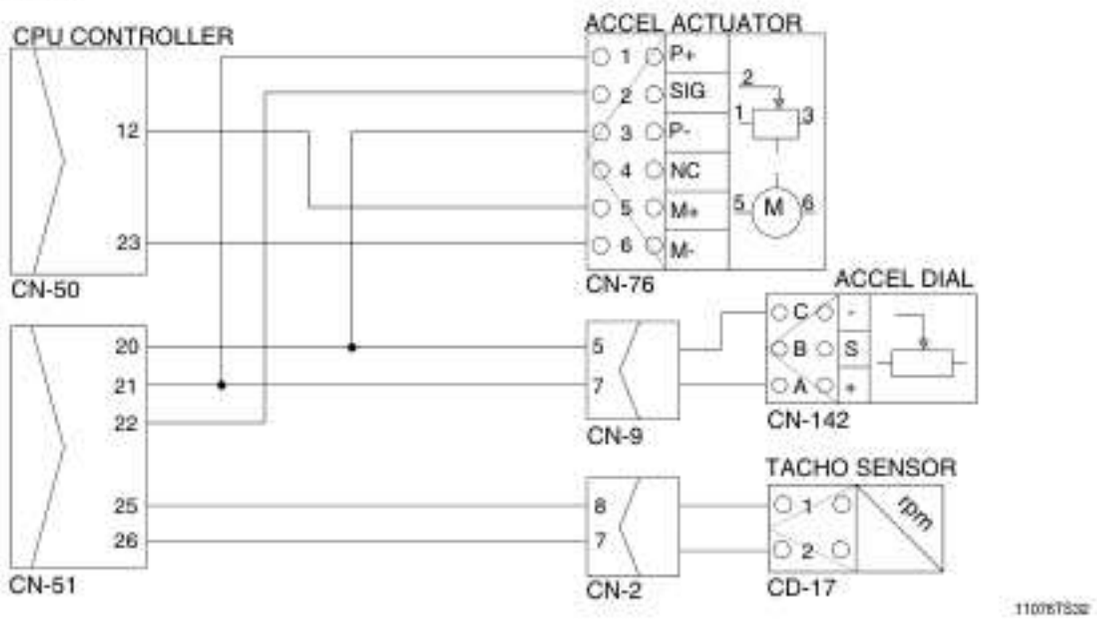

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

3) IDLER

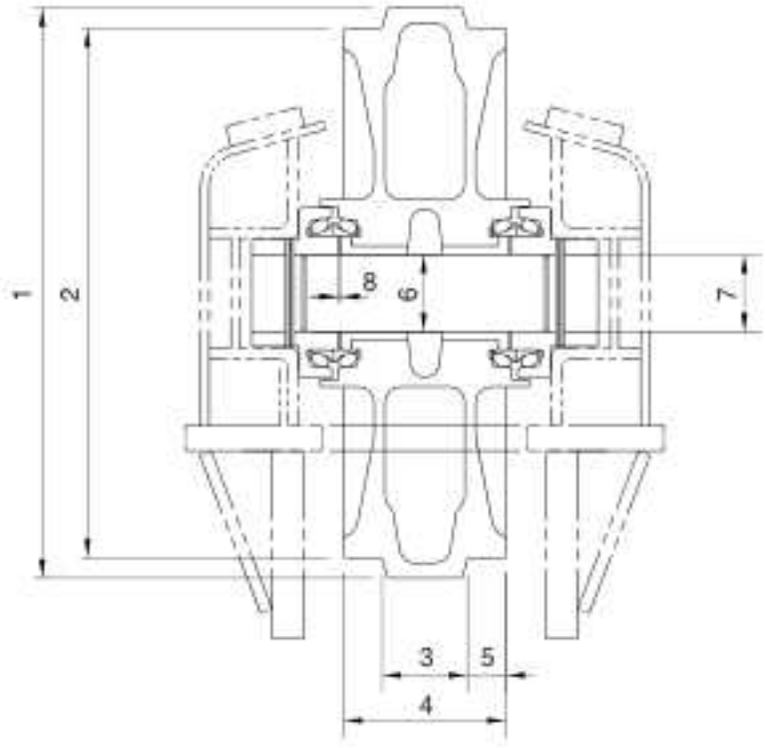

2103/MB03


Unit : mm

No.	Check item	Criteria				Remedy
1	Outside diameter of protrusion	Standard size		Repair limit		Rebuild or replace
		ø510		-		
2	Outside diameter of tread	ø470		ø460		
3	Width of protrusion	67		-		
4	Total width	135		-		
5	Width of tread	34		39		
6	Clearance between shaft and bushing	Standard size & tolerance		Standard clearance	Clearance limit	Replace bushing
		Shaft	Hole			
		ø70 0 -0.03	ø70.3 +0.05 0	0.3 to 0.38	2.0	
7	Clearance between shaft and support	ø70 0 -0.03	ø70 +0.07 +0.03	0.03 to 0.1	1.2	Rebuild or Replace
8	Side clearance of idler (Both side)	Standard clearance		Clearance limit		Replace bushing
		0.25–1.15		2.0		


MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

(31) Remove cam(58) from the body casing.



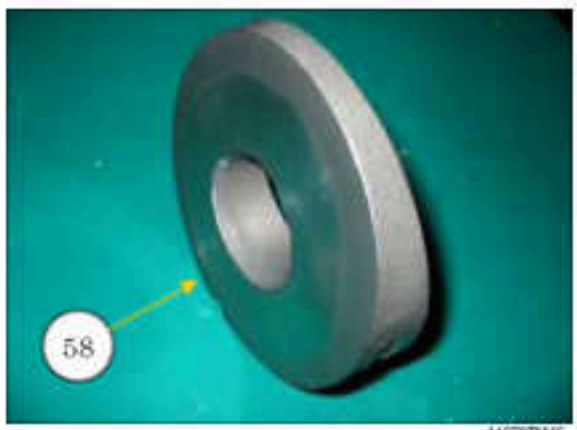

(32) Remove two steel balls(59) and piston(60) from the body casing. Remove the spring(61) behind the piston.

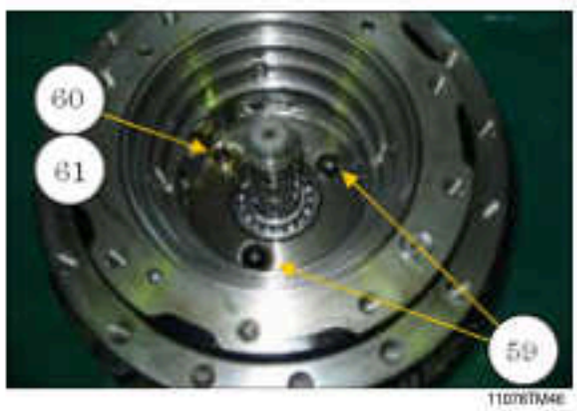




MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >


(2) Display map

① Monitoring

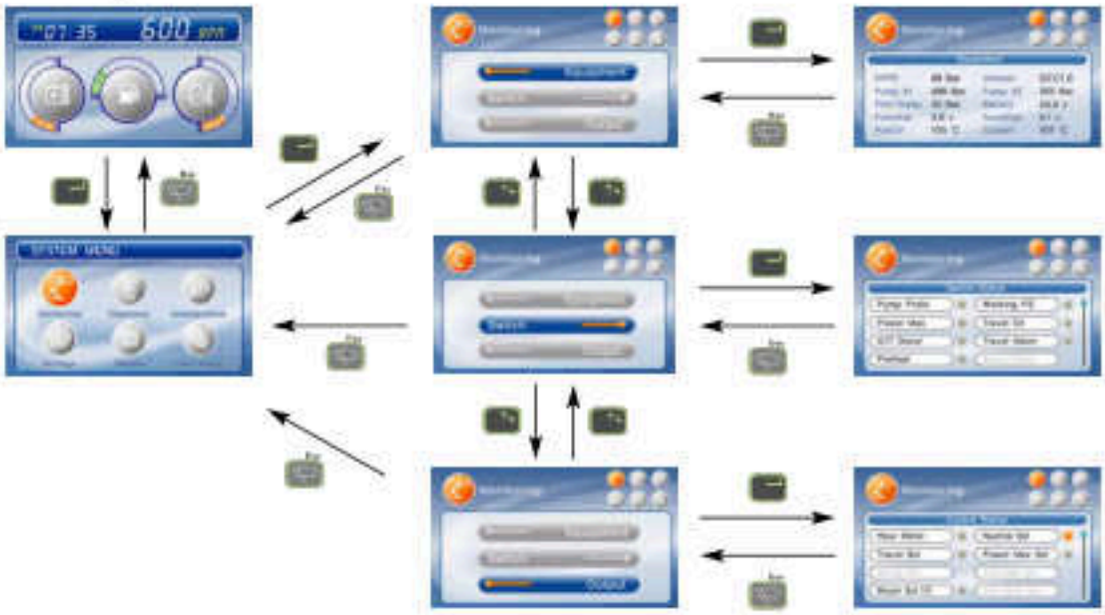


② Diagnosis

a. Protocol type 1

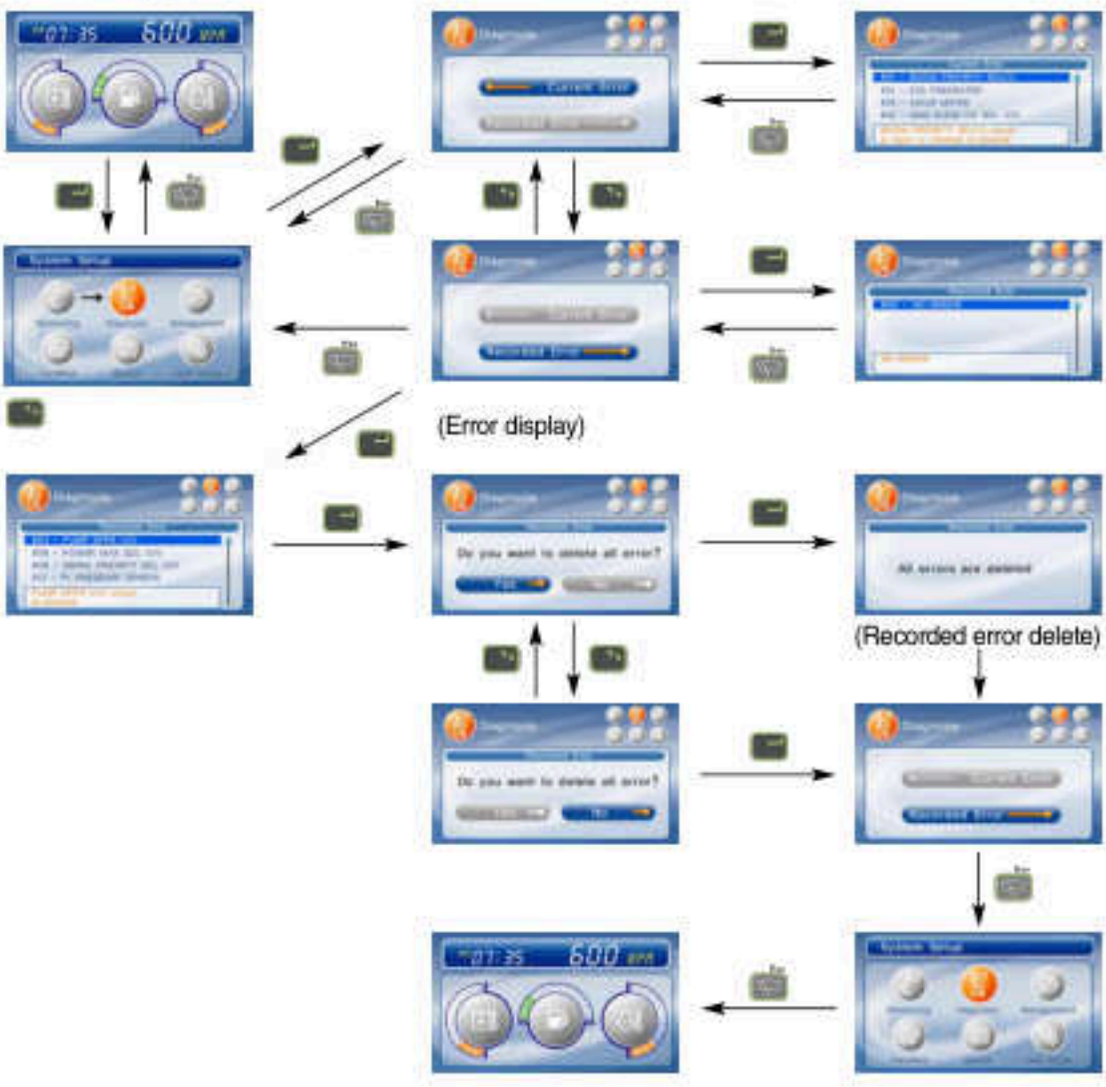

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

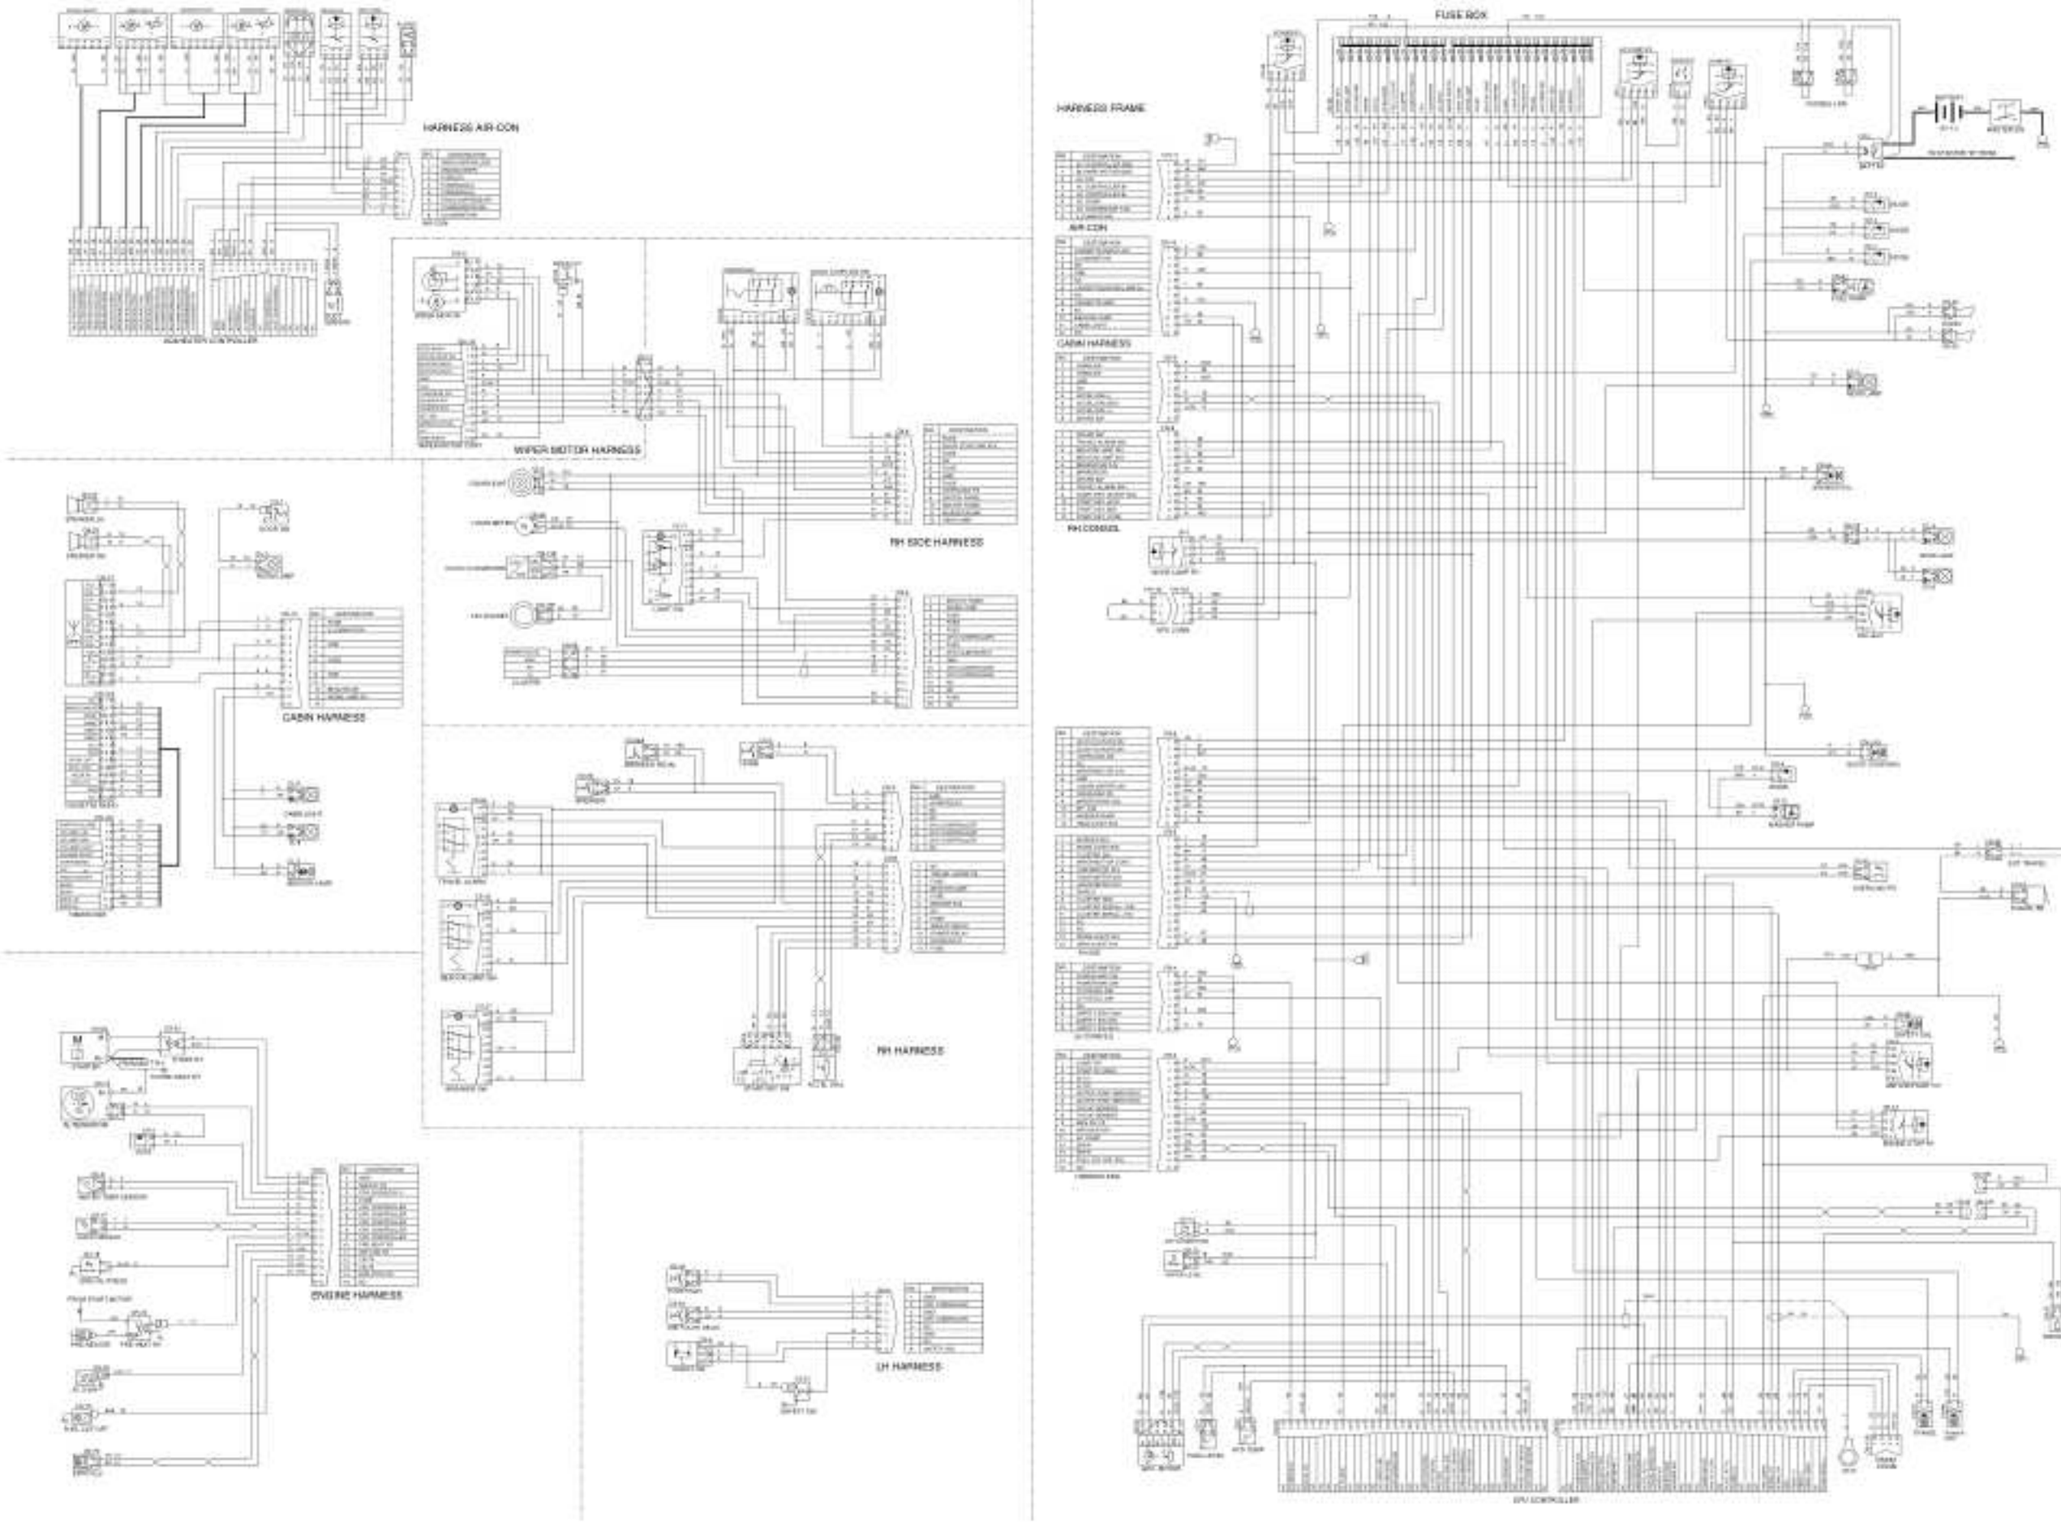

MidWestTech | Hyundai R110-7 (India) Crawler Excavator Service Manual | Publication R110-7 (India)
Order the manual at mid-west-tech.com >