WHEELED EXCAVATOR

SERVICE MANUAL

R140W-9

HYUNDAI

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R140W-9

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-47
Group 4 Travel Motor 2-59
Group 5 RCV Lever 2-66
Group 6 Accelerator Pedal 2-73
Group 7 Brake Pedal 2-74
Group 8 Transmission 2-76
Group 9 Travel Control Valve 2-83
Group 10 Steering Valve 2-85

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-14
Group 5 Combined Operation 3-29

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-24
Group 4 Connectors 4-32

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up Function 5-9
Group 7 Engine Overheat Prevention Function 5-10
Group 8 Variable Power Control System 5-11
Group 9 Attachment Flow Control System 5-12
Group 10 Anti-Restart System 5-13
Group 11 Self-Diagnostic System 5-14
Group 12 Engine Control System 5-27
Group 13 EPPR Valve 5-28
Group 14 Monitoring System 5-33
Group 15 Fuel Warmer System 5-56

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-25
Group 4 Mechatronics System 6-41

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-19
Group 3 Track and Work Equipment 7-28

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-30
Group 5 Swing Device 8-44
Group 6 Travel Motor 8-65
Group 7 Transmission 8-89
Group 8 Steering Valve 8-143
Group 9 Front Axle and Rear Axle 8-168
Group 10 RCV Lever 8-240

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

Group 11 Turning Joint 8-254
Group 12 Boom, Arm, Bucket, Dozer and Outrigger Cylinders 8-260
Group 13 Work Equipment 8-282

SECTION 9 COMPONENT MOUNTING TORQUE


Group 1 Introduction Guide 9-1
Group 2 Engine System 9-2
Group 3 Electric System 9-4
Group 4 Hydraulic System 9-6
Group 5 Power train System 9-9
Group 6 Structure 9-11
Group 7 Work Equipment 9-15

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

GROUP 2 MAIN CIRCUIT

The main hydraulic circuit consists of suction circuit, delivery circuit, return circuit and drain circuit.
The hydraulic system consists of one main pump, one control valve, one swing motor, four cylinders and two travel motors.
The swash plate type variable displacement axial piston pump is used as the main pump and it is driven by the engine at ratio 1.0 of engine speed.

1. SUCTION AND DELIVERY CIRCUIT

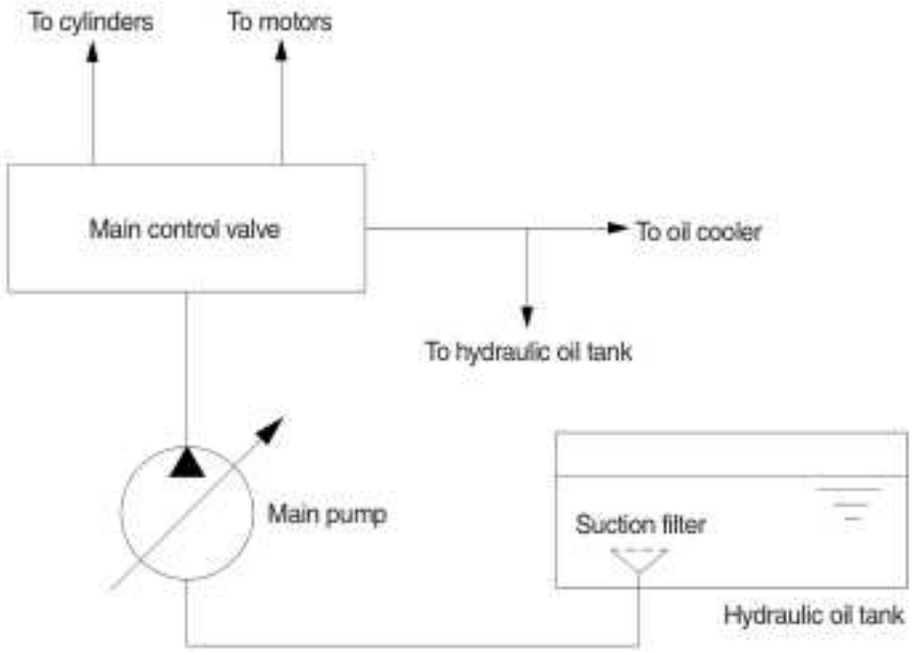


3-2 (290LC-7)

The pumps receive oil from the hydraulic tank through a suction filter. The discharged oil from the pump flows into the control valve and goes out the tank ports.
The oil discharged from the main pump flows to the actuators through the control valve.
The control valve controls the hydraulic functions.
The return oil from the actuators flows to the hydraulic tank through the control valve and the oil cooler.


MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

3) SWING MOTION IS IMPOSSIBLE IN ONE DIRECTION

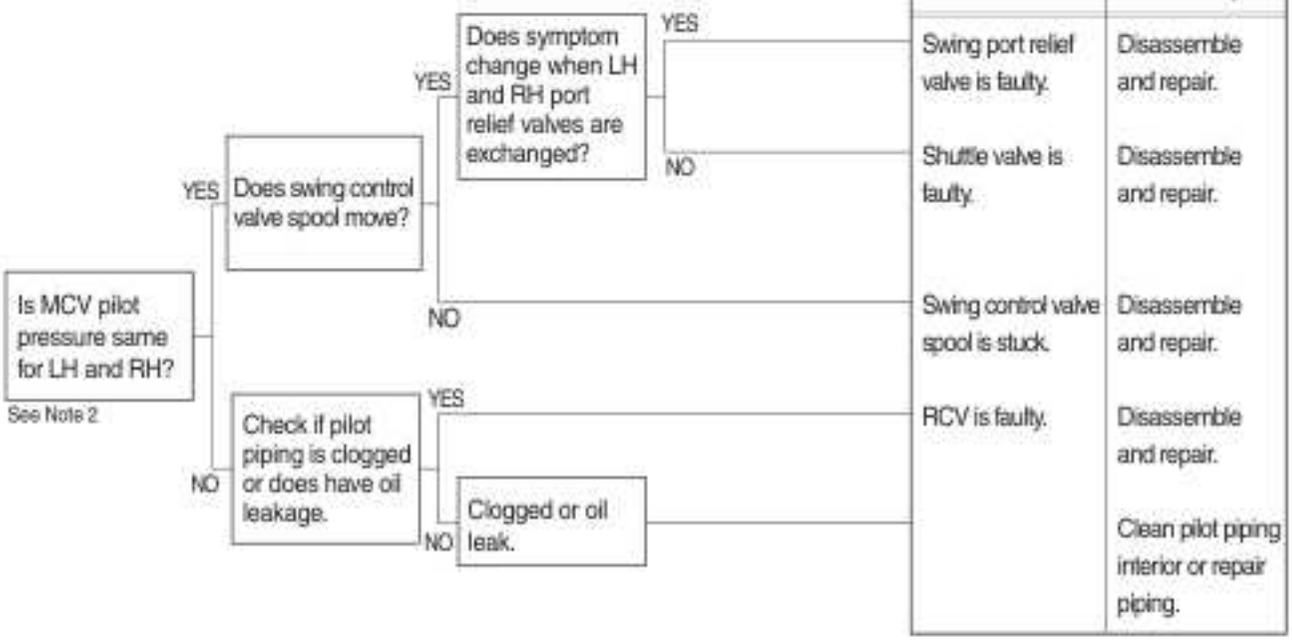

Cause	Remedy
Swing port relief valve is faulty.	Disassemble and repair.
Shuttle valve is faulty.	Disassemble and repair.
Swing control valve spool is stuck.	Disassemble and repair.
RCV is faulty.	Disassemble and repair.
Clogged or oil leak.	Clean pilot piping interior or repair piping.



4) MACHINE SWINGS BUT DOES NOT STOP

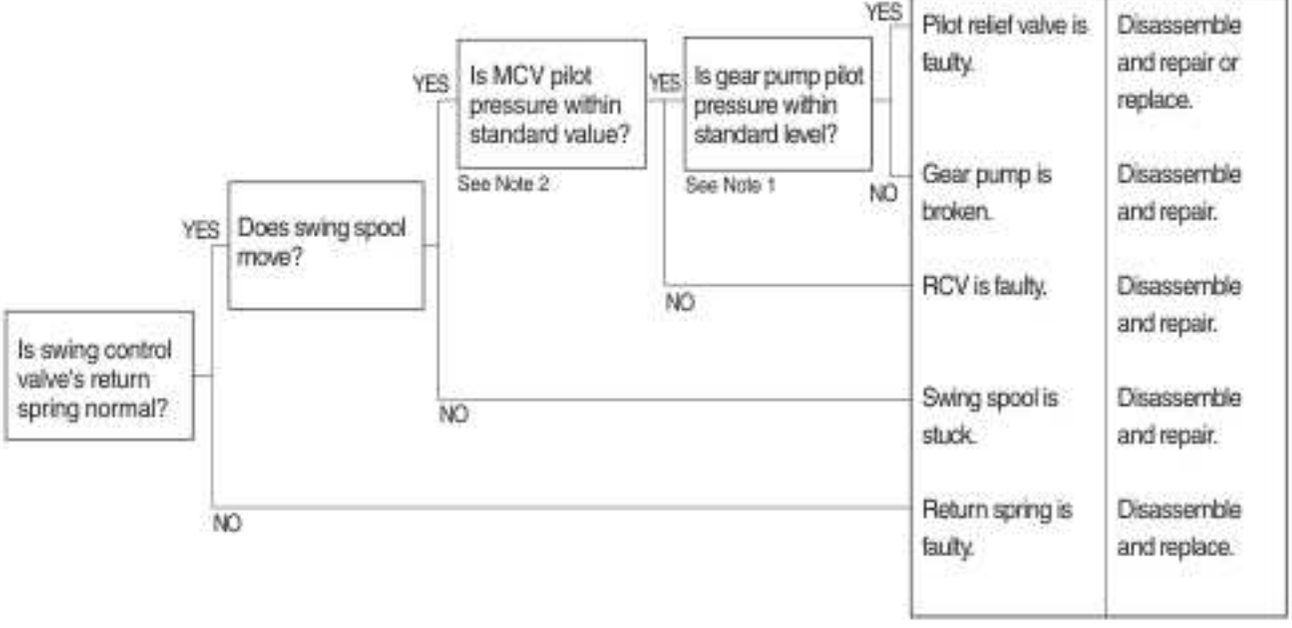

Cause	Remedy
Pilot relief valve is faulty.	Disassemble and repair or replace.
Gear pump is broken.	Disassemble and repair.
RCV is faulty.	Disassemble and repair.
Swing spool is stuck.	Disassemble and repair.
Return spring is faulty.	Disassemble and replace.

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

7. TURNING JOINT

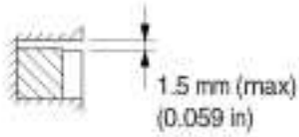Part name		Maintenance standards	Remedy
Body, Stem	Sliding surface with sealing sections	Plating worn or peeled due to seizure or contamination	Replace
	Sliding surface between body and stem other than sealing section	· Worn abnormality or damaged more than 0.1 mm (0.0039 in) in depth due to seizure contamination	Replace
		· Damaged more than 0.1 mm (0.0039 in) in depth	Smooth with oilstone
	Sliding surface with thrust plate	· Worn more than 0.5 mm (0.02 in) or abnormality	Replace
		· Worn less than 0.5 mm (0.02 in)	Smooth
		· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in)	Smooth
Cover	Sliding surface with thrust plate	· Worn more than 0.5 mm (0.02 in) or abnormality	Replace
		· Worn less than 0.5 mm (0.02 in)	Smooth
		· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in)	
Seal set	-	· Extruded excessively from seal groove square ring 	Replace
	-	· Slipper ring 1.5 mm (0.059 in) narrower than seal groove, or narrower than back ring 	Replace
	-	· Worn more than 0.5 mm (0.02 in) – 1.5 mm (MAX) (0.059 in) 	Replace

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

(3) Monitoring

① Active fault



- The active faults of the MCU or engine ECM can be checked by this menu.

② Logged fault



- The logged faults of the MCU or engine ECM can be checked by this menu.

③ Delete logged fault



- The logged faults of the MCU or engine ECM can be deleted by this menu.


④ Monitoring(Analog)



- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

2. TRANSMISSION DIAGRAM

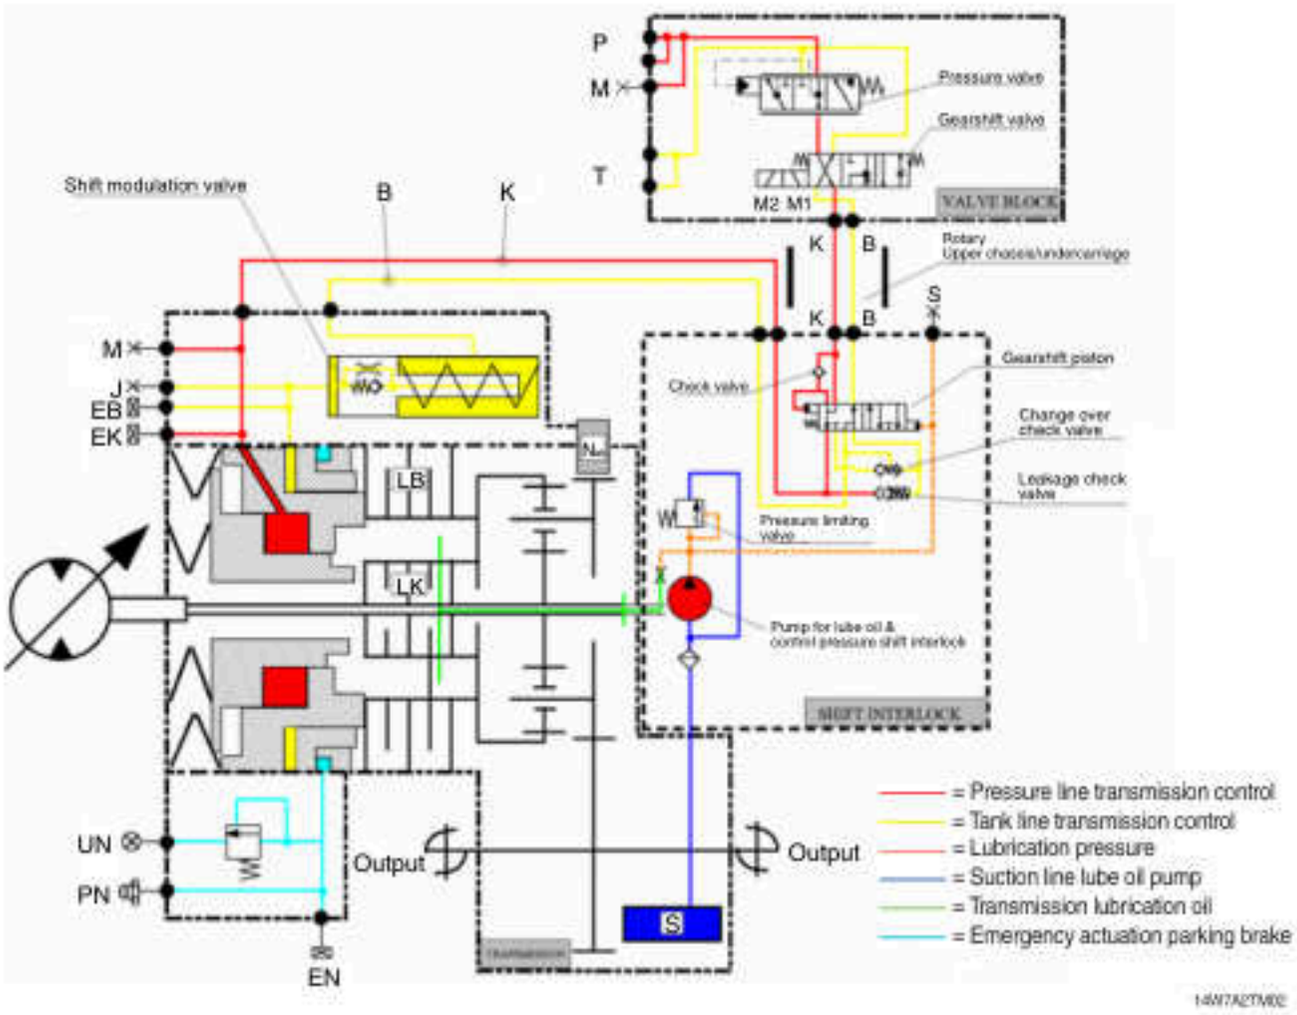

Measuring points-Transmission/Shift interlock :
J : High speed (brake)
M : Low speed (clutch)
S : Lubrication pressure

Connections-Transmission/Shift interlock :
B : Brake
K : Clutch
PN : Emergency actuation parking brake


Measuring points-Valve block :
M : System pressure transmission control

Connections-Valve block :
P : System pressure transmission control
T : Tank
B : Brake
K : Clutch

Solenoid valves-valve block :
M1 : Solenoid valve (low speed)
M2 : Solenoid valve (high speed)

Port	Name	Size	Port	Name	Size
P1 (B)	Shift pressure, High speed	M16 × 1.5	M	Gauge port, Low speed	M10 × 1.0
P2 (K)	Shift pressure, Low speed	M16 × 1.5	S	Lubrication pressure port	M10 × 1.0
J	Gauge port, High speed	M10 × 1.0	PN	Parking brake lubricant	Grease nipple

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R14... Order the manual at mid-west-tech.com >

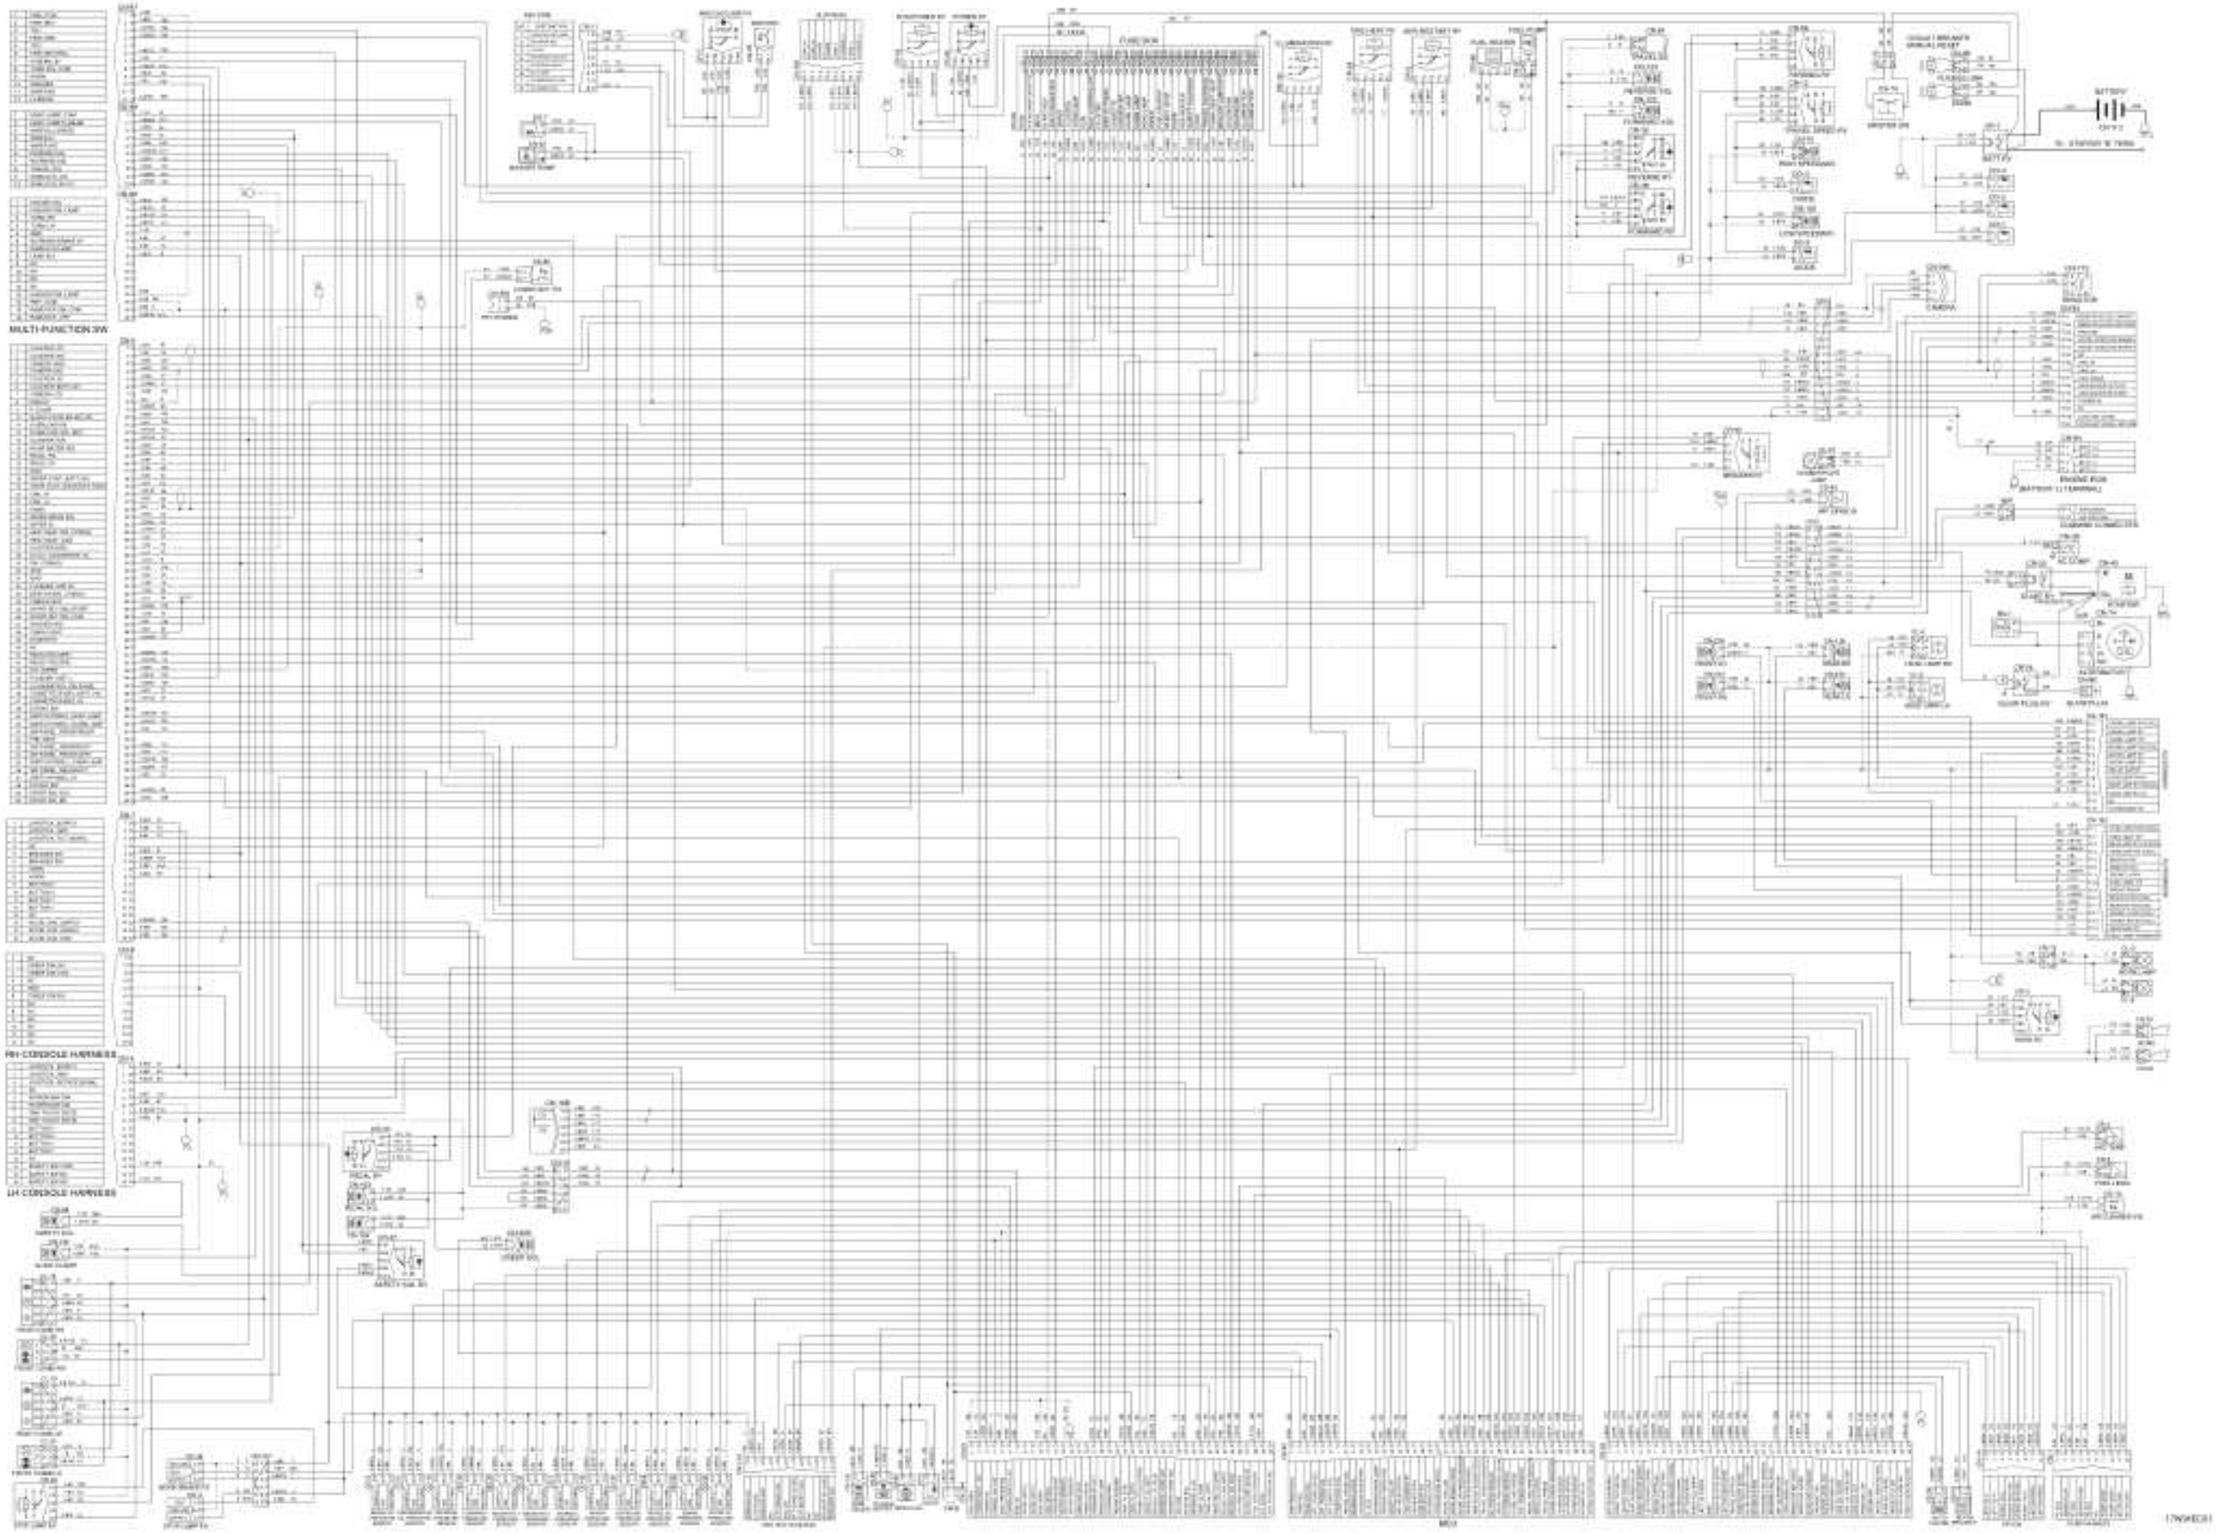

MidWestTech | Hyundai R140W-9 Wheel Excavator Service Manual | Publication R140W-9

Order the manual at mid-west-tech.com >