WHEELED EXCAVATOR

SERVICE MANUAL

R170W-9

HYUNDAI

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R170W-9

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-47
Group 4 Travel Motor 2-58
Group 5 RCV Lever 2-65
Group 6 Accelerator Pedal 2-72
Group 7 Brake Pedal 2-73
Group 8 Transmission 2-75
Group 9 Travel Control Valve 2-82
Group 10 Steering Valve 2-84

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-14
Group 5 Combined Operation 3-29

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-24
Group 4 Connectors 4-32

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up Function 5-9
Group 7 Engine Overheat Prevention Function 5-10
Group 8 Variable Power Control System 5-11
Group 9 Attachment Flow Control System 5-12
Group 10 Anti-Restart System 5-13
Group 11 Self-Diagnostic System 5-14
Group 12 Engine Control System 5-27
Group 13 EPPR Valve 5-28
Group 14 Monitoring System 5-33
Group 15 Fuel Warmer System 5-56

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-25
Group 4 Mechatronics System 6-41

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-19
Group 3 Track and Work Equipment 7-28

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-30
Group 5 Swing Device 8-44
Group 6 Travel Motor 8-69
Group 7 Transmission 8-93
Group 8 Steering Valve 8-147
Group 9 Front Axle 8-172
Group 10 Rear Axle 8-227
Group 11 RCV Lever 8-269

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

Group 12 Turning Joint 8-283
Group 13 Boom, Arm, Bucket, Dozer and Outrigger Cylinders 8-289
Group 14 Work Equipment 8-310

SECTION 9 COMPONENT MOUNTING TORQUE


Group 1 Introduction Guide 9-1
Group 2 Engine System 9-2
Group 3 Electric System 9-4
Group 4 Hydraulic System 9-6
Group 5 Power train System 9-9
Group 6 Structure 9-11
Group 7 Work Equipment 9-15

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

GROUP 2 MAIN CIRCUIT

The main hydraulic circuit consists of suction circuit, delivery circuit, return circuit and drain circuit.
The hydraulic system consists of one main pump, one control valve, one swing motor, four cylinders and two travel motors.
The swash plate type variable displacement axial piston pump is used as the main pump and it is driven by the engine at ratio 1.0 of engine speed.

1. SUCTION AND DELIVERY CIRCUIT

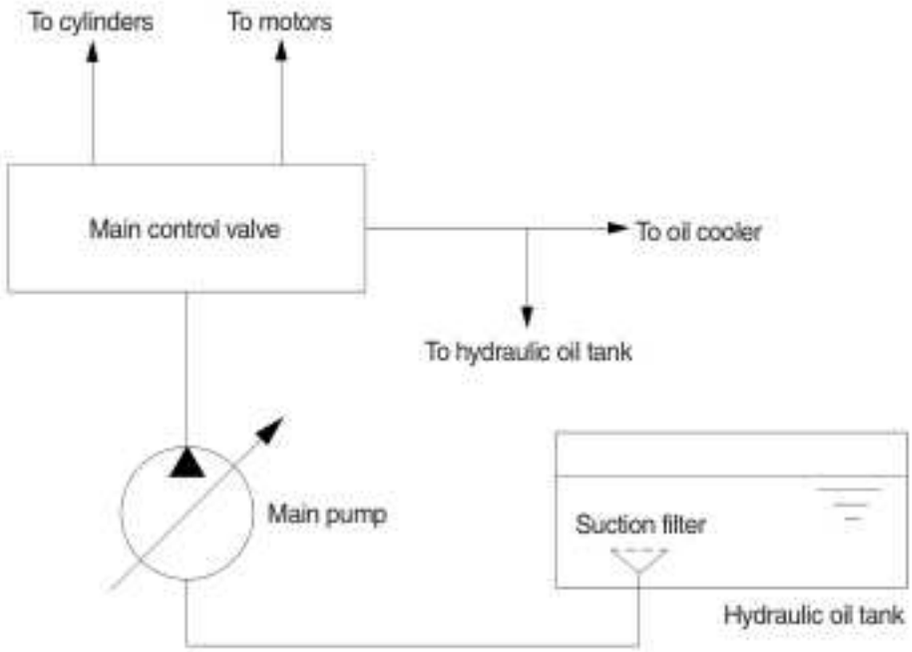

3-2 (290LC-7)



The pumps receive oil from the hydraulic tank through a suction filter. The discharged oil from the pump flows into the control valve and goes out the tank ports.
The oil discharged from the main pump flows to the actuators through the control valve.
The control valve controls the hydraulic functions.
The return oil from the actuators flows to the hydraulic tank through the control valve and the oil cooler.

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

Fault code J1939 SPN J1939 FMI	Reason	Effect (only when fault code is active)
287 91 19	SAE J1939 multiplexed accelerator pedal or lever sensor system - received network data In error. The OEM vehicle electronic control unit (VECM) detected a fault with its accelerator pedal.	Engine may only idle or engine will not accelerate to full speed.
288 974 19	SAE J1939 Multiplexing Remote Accelerator Pedal or Lever Position Sensor Circuit - Received Network Data In Error. The OEM vehicle electronic control unit (VECM) detected a fault with the remote accelerator.	The engine will not respond to the remote throttle. Engine may only idle. The primary or cab accelerator may be able to be used.
292 441 14	Auxiliary temperature Sensor Input 1 - Special instructions.	Possible engine power derate.
293 441 3	Auxiliary temperature sensor input 1 circuit - Voltage above normal, or shorted to high source. High signal voltage or open circuit detected at the OEM auxiliary temperature circuit.	None on performance.
294 441 4	Auxiliary temperature sensor input 1 circuit - Voltage below normal, or shorted to low source. Low signal voltage detected at the OEM auxiliary temperature circuit.	None on performance.
296 1388 14	Auxiliary pressure sensor input 1 - Special instructions.	Possible engine power derate.
297 1388 3	Auxiliary pressure sensor input 1 circuit - Voltage above normal, or shorted to high source. High signal voltage detected at the OEM pressure circuit.	None on performance.
298 1388 4	Auxiliary pressure sensor input 1 circuit - Voltage below normal, or shorted to low source. Low signal voltage or open circuit detected at the OEM pressure circuit.	None on performance.
319 251 2	Real time clock power interrupt - Data erratic, intermittent, or incorrect. Real time clock lost power.	None on performance. Data in the ECM will not have accurate time and date information.
322 651 5	Injector solenoid driver cylinder 1 circuit - Current below normal, or open circuit. High resistance detected on injector number 1 circuit or no current detected at number 1 injector driver or return pin when the voltage supply at the harness is on.	Engine can possibly misfire or run rough.
323 655 5	Injector solenoid driver cylinder 5 circuit - Current below normal, or open circuit. High resistance detected on injector number 5 circuit or no current detected at number 5 injector driver or return pin when the voltage supply at the harness is on.	Engine can possibly misfire or run rough.
324 653 5	Injector solenoid driver cylinder 3 circuit - Current below normal, or open circuit. High resistance detected on injector number 3 circuit or no current detected at number 3 injector driver or return pin when the voltage supply at the harness is on.	Engine can possibly misfire or run rough.
325 656 5	Injector solenoid driver cylinder 6 circuit - Current below normal, or open circuit. High resistance detected on injector number 6 circuit or no current detected at number 6 injector driver or return pin when the voltage supply at the harness is on.	Engine can possibly misfire or run rough.

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >


7. TURNING JOINT

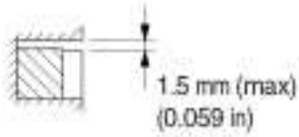Part name		Maintenance standards	Remedy
Body, Stem	Sliding surface with sealing sections	Plating worn or peeled due to seizure or contamination	Replace
	Sliding surface between body and stem other than sealing section	· Worn abnormality or damaged more than 0.1 mm (0.0039 in) in depth due to seizure contamination	Replace
		· Damaged more than 0.1 mm (0.0039 in) in depth	Smooth with oilstone
	Sliding surface with thrust plate	· Worn more than 0.5 mm (0.02 in) or abnormality	Replace
		· Worn less than 0.5 mm (0.02 in)	Smooth
		· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in)	Smooth
Cover	Sliding surface with thrust plate	· Worn more than 0.5 mm (0.02 in) or abnormality	Replace
		· Worn less than 0.5 mm (0.02 in)	Smooth
		· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in)	
Seal set	-	· Extruded excessively from seal groove square ring 	Replace
	-	· Slipper ring 1.5 mm (0.059 in) narrower than seal groove, or narrower than back ring 	Replace
	-	· Worn more than 0.5 mm (0.02 in) – 1.5 mm (MAX) (0.059 in) 	Replace


MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

(3) Disassemble rear cover assy sub


① Disassemble pin (8, 23), valve plate (24) from rear cover (21).

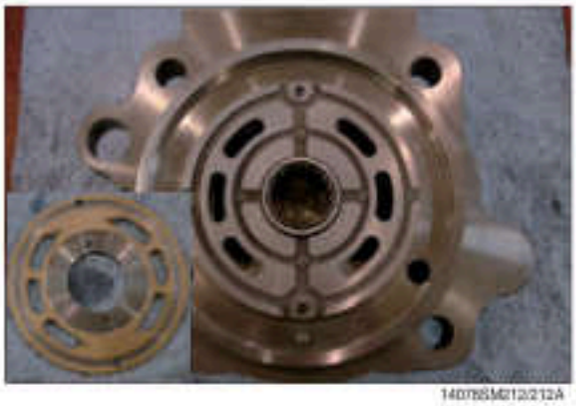

② Using a torque wrench, disassemble relief valve assy (31) 2 set from rear cover (21).

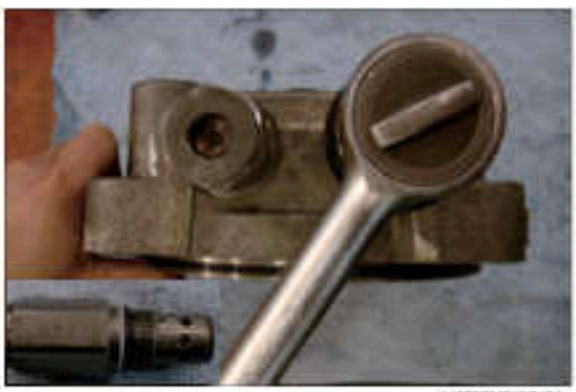

③ After disassembling plug with a L-wrench from rear cover (21), disassemble respectively back up ring, O-ring, O-ring, spring, anti-inversion valve assy (32)

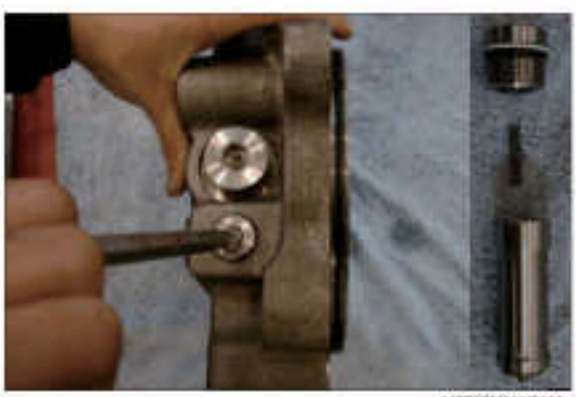

④ Disassemble make up check valve assy with a torque wrench from rear cover (21).



MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

(3) Monitoring

① Active fault



- The active faults of the MCU or engine ECM can be checked by this menu.

② Logged fault



- The logged faults of the MCU or engine ECM can be checked by this menu.

③ Delete logged fault




- The logged faults of the MCU or engine ECM can be deleted by this menu.

④ Monitoring(Analog)



- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R17... Order the manual at mid-west-tech.com >

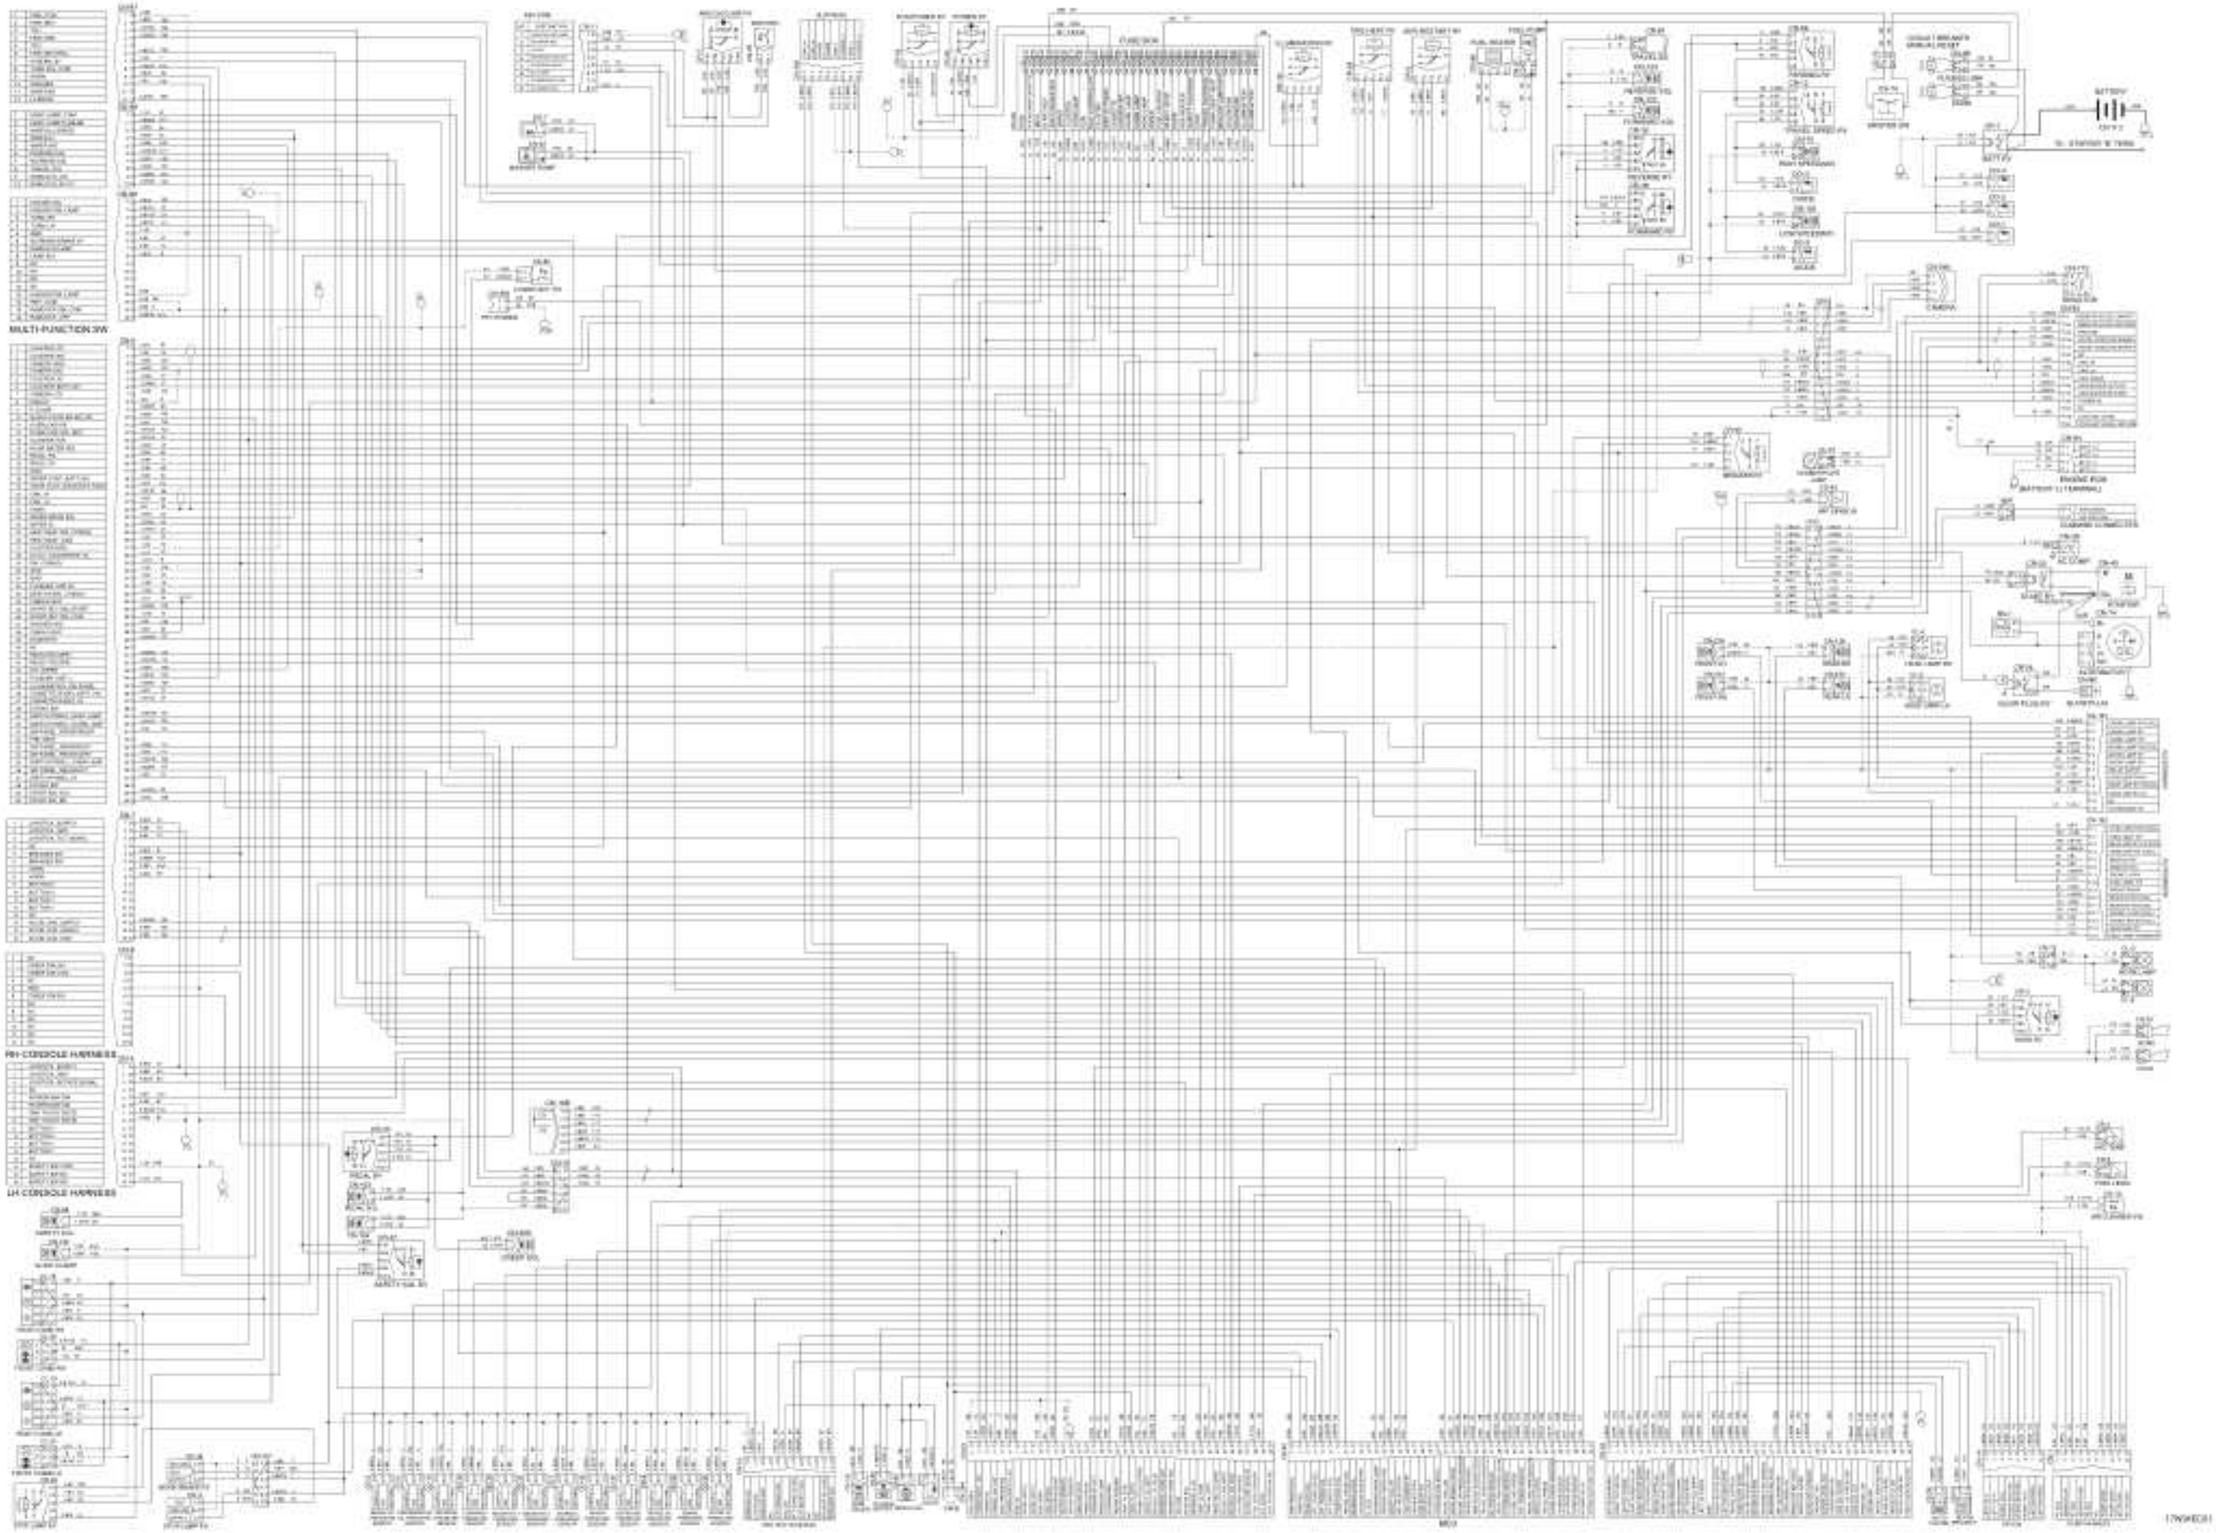

MidWestTech | Hyundai R170W-9 Wheel Excavator Service Manual | Publication R170W-9

Order the manual at mid-west-tech.com >