WHEELED EXCAVATOR

SERVICE MANUAL

R180W-9A

HYUNDAI

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R180W-...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-47
Group 4 Travel Motor 2-58
Group 5 RCV Lever 2-64
Group 6 Accelerator Pedal 2-71
Group 7 Brake Pedal 2-72
Group 8 Transmission 2-74
Group 9 Travel Control Valve 2-81
Group 10 Steering Valve 2-83

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-14
Group 5 Combined Operation 3-29

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-24
Group 4 Connectors 4-33

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up Function 5-9
Group 7 Engine Overheat Prevention Function 5-10
Group 8 Variable Power Control System 5-11
Group 9 Attachment Flow Control System 5-12
Group 10 Anti-Restart System 5-13
Group 11 Self-Diagnostic System 5-14
Group 12 Engine Control System 5-39
Group 13 EPPR Valve 5-40
Group 14 Monitoring System 5-45
Group 15 Fuel Warmer System 5-70

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-25
Group 4 Mechatronics System 6-41

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-19
Group 3 Track and Work Equipment 7-28

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-30
Group 5 Swing Device 8-44
Group 6 Travel Motor 8-69
Group 7 Transmission 8-93
Group 8 Steering Valve 8-147
Group 9 Front Axle 8-172
Group 10 Rear Axle 8-243
Group 11 RCV Lever 8-285

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

Group 12 Turning Joint 8-299
Group 13 Boom, Arm, Bucket, Dozer and Outrigger Cylinders 8-305
Group 14 Work Equipment 8-326

SECTION 9 COMPONENT MOUNTING TORQUE

Group 1 Introduction Guide 9-1
Group 2 Engine System 9-2
Group 3 Electric System 9-4
Group 4 Hydraulic System 9-6
Group 5 Power train System 9-9
Group 6 Structure 9-11
Group 7 Work Equipment 9-15

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

3. MACHINE ERROR CODES TABLE

Error code		Description
HCESPN	FMI	
101	3	Hydraulic oil temperature sensor circuit - Voltage above normal, or shorted to high source.
	4	Hydraulic oil temperature circuit - Voltage below normal, or shorted to low source.
105	0	Working pressure sensor data above normal range.
	1	Working pressure sensor data below normal range.
	2	Working pressure sensor data error.
	4	Working pressure sensor circuit - Voltage below normal, or shorted to Low source.
108	0	Travel oil pressure sensor data above normal range.
	1	Travel oil pressure sensor data below normal range.
	2	Travel oil pressure sensor data error.
	4	Travel oil pressure sensor circuit - Voltage below normal, or shorted to low source.
120	0	Main pump 1 (P1) pressure sensor data above normal range.
	1	Main pump 1 (P1) pressure sensor data below normal range.
	2	Main pump 1 (P1) pressure sensor data error.
	4	Main pump 1 (P1) pressure sensor circuit - Voltage below normal, or shorted to low source.
121	0	Main pump 2 (P2) pressure sensor data above normal range.
	1	Main pump 2 (P2) pressure sensor data below normal range.
	2	Main pump 2 (P2) pressure sensor data error.
	4	Main pump 2 (P2) pressure sensor circuit - Voltage below normal, or shorted to low source.
122	0	Overhead pressure sensor data above normal range.
	1	Overhead pressure sensor data below normal range.
	2	Overhead pressure sensor data error.
	4	Overhead pressure sensor circuit - Voltage below normal, or shorted to low source.
123	0	Negative 1 pressure sensor data above normal range.
	1	Negative 1 pressure sensor data below normal range.
	2	Negative 1 pressure sensor data error.
	4	Negative 1 pressure sensor circuit - Voltage below normal, or shorted to low source.
124	0	Negative 2 Pressure sensor data above normal range.
	1	Negative 2 Pressure sensor data below normal range.
	2	Negative 2 Pressure sensor data error.
	4	Negative 2 Pressure sensor circuit - Voltage below normal, or shorted to low source.
125	0	Pilot pump (P3) pressure sensor data above normal range.
	1	Pilot pump (P3) pressure sensor data below normal range.
	2	Pilot pump (P3) pressure sensor data error.
	4	Pilot pump (P3) pressure sensor circuit - Voltage below normal, or shorted to low source.
127	0	Boom up pilot pressure sensor data above normal range.
	1	Boom up pilot pressure sensor data below normal range.
	2	Boom up pilot pressure sensor data error.
	4	Boom up pilot pressure sensor circuit - Voltage below normal, or shorted to low source.
133	0	Arm in/out & bucket in pilot pressure sensor data above normal range.
	1	Arm in/out & bucket in pilot pressure sensor data below normal range.
	2	Arm in/out & bucket in pilot pressure sensor data error.
	4	Arm in/out & bucket in pilot pressure sensor circuit - Voltage below normal, or shorted to low source.

※ Some error codes are not applied to this machine.

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

19. MALFUNCTION OF BOOM PRIORITY EPPR VALVE

- Fault code : HCESPN 141, FMI 5 or 6


※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE



Cause	Remedy
Short circuit or poor connection between CN-53 (19)-CN-133 (1) or CN-53 (9)-CN-133 (2)	Repair or replace
Defective EPPR valve	Repair or replace

Wiring diagram

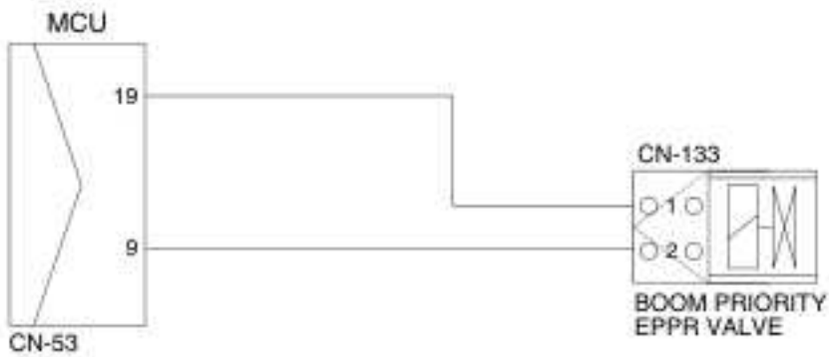

21096MS15

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

(13) Determination of shims for setting the bearing rolling torque (differential bearing) and the backlash (bevel gear set)

※ Determine the required shims on basis of the read value (test dimension/crown wheel) and the corresponding specifications of the table below:
(KRS – SET – RIGHT) (KRS = bevel gear set) : Test dimension see crown wheel rear side.

※ The test dimension "70" is stamped into the crown wheel rear side. If no + or deviation is indicated, this value corresponds with the test dimension/ actual value "70" in the table below. According to this value, the required shims are allocated in the table below.


※ Any + or – deviation of the test dimension caused by production is also marked on the crown wheel rear side (e.g. – 20 or – 10 / 10 or 20) . In accordance with this deviation, the required shims are allocated in the table below.



17W98RAD80

(14) Legend to sketch:

1 = Crown wheel
2 = Differential carrier
3 = Shim (crown wheel side)
4 = Shim (diff. carrier side)
5 = Axle housing
6 = Axle housing
7 = Axle drive housing
8 = Input pinion

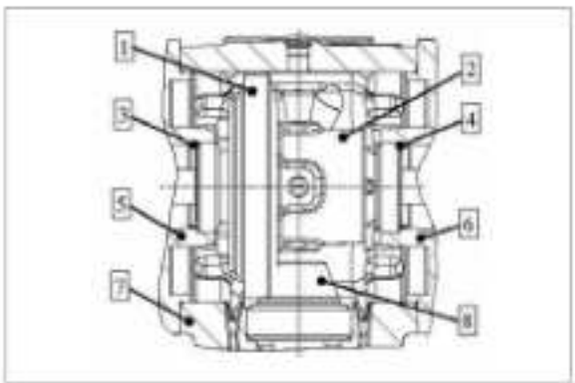


17W98RAD80

Shims for differential					
Test dimension/crown wheel marking 70 and deviation	-20	-10	0	10	20
results in → test dim. / actual value	69.80	69.90	70.0	70.10	70.20
Shim/ diff. carrier side Required shim thickness	0.95	1.05	1.15	1.25	1.35
Shim No.	0730 006 518	0730 006 519	0730 006 521	0730 006 522	0730 006 524
Shim/crown wheel side Required shim thickness	1.35	1.25	1.15	1.05	0.95
Shim No.	0730 006 524	0730 006 522	0730 006 521	0730 006 519	0730 006 518

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

(3) Disassemble rear cover assy sub


① Disassemble pin (8, 23), valve plate (24) from rear cover (21).

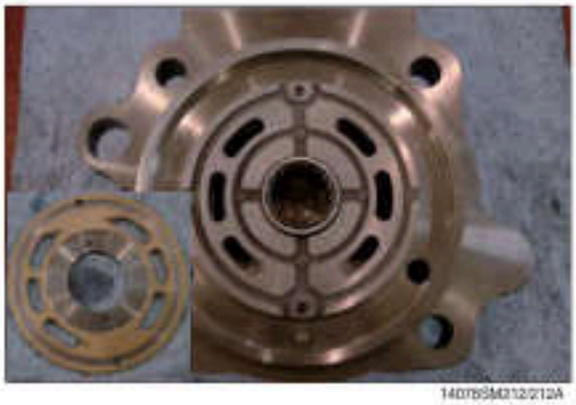


② Using a torque wrench, disassemble relief valve assy (31) 2 set from rear cover (21).



③ After disassembling plug with a L-wrench from rear cover (21), disassemble respectively back up ring, O-ring, O-ring, spring, anti-inversion valve assy (32)

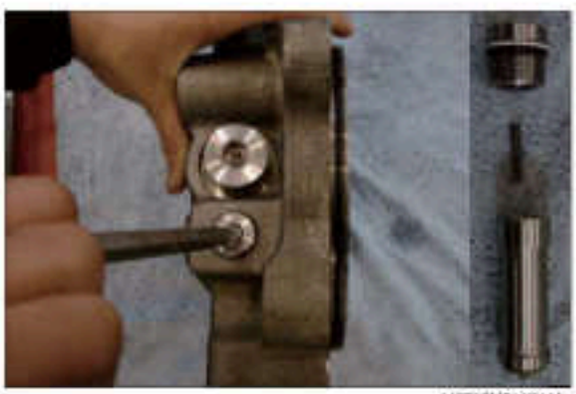

④ Disassemble make up check valve assy with a torque wrench from rear cover (21).

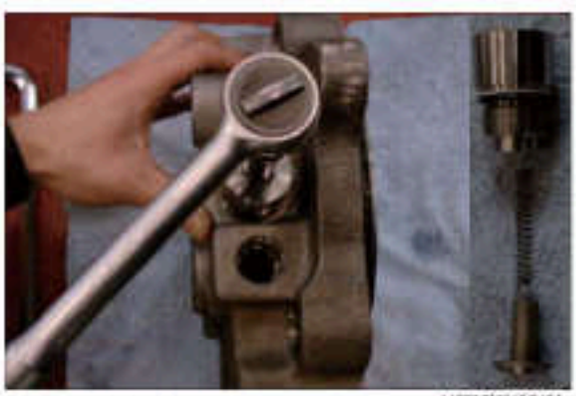

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

③ Machine Information



- This can confirm the identification of the cluster, MCU, engine and machine.

④ A/S phone number




Enter the new A/S phone number



The new phone number is stored in MCU


⑤ Service menu

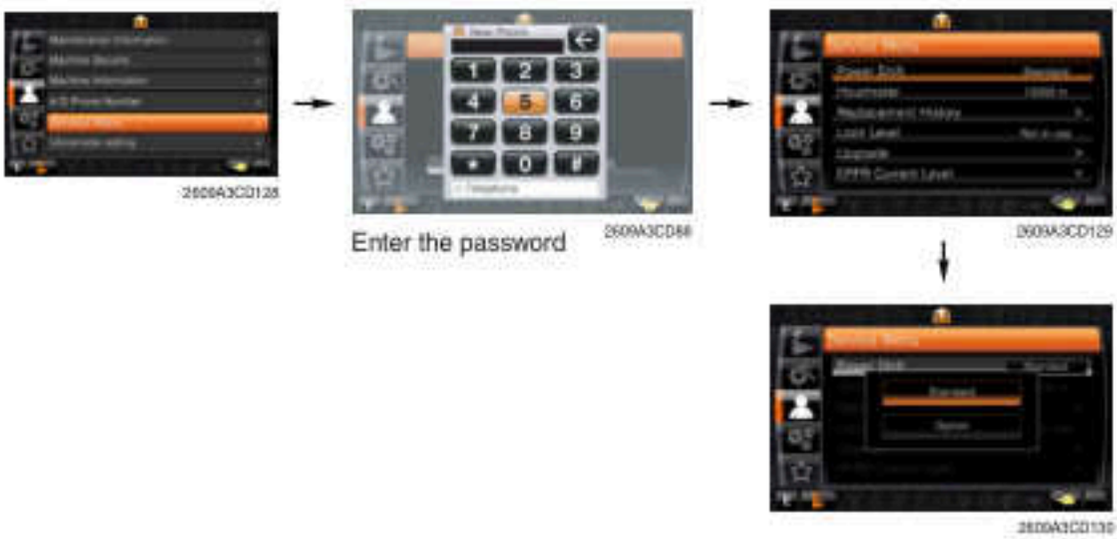

Enter the password

- Power shift (standard/option) : Power shift pressure can be set by option menu.
- Hourmeter : Operating hours since the machine line out can be checked by this menu.
- Replacement history : Replacement history of the MCU and cluster can be checked by this menu.
- Lock level (not in use/in use)
- Upgrade : Firm ware can be upgraded by this menu. (the USB port is located under the cluster)
- EPPR current level (attach EPPR/boom priority EPPR)

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R1... Order the manual at mid-west-tech.com >

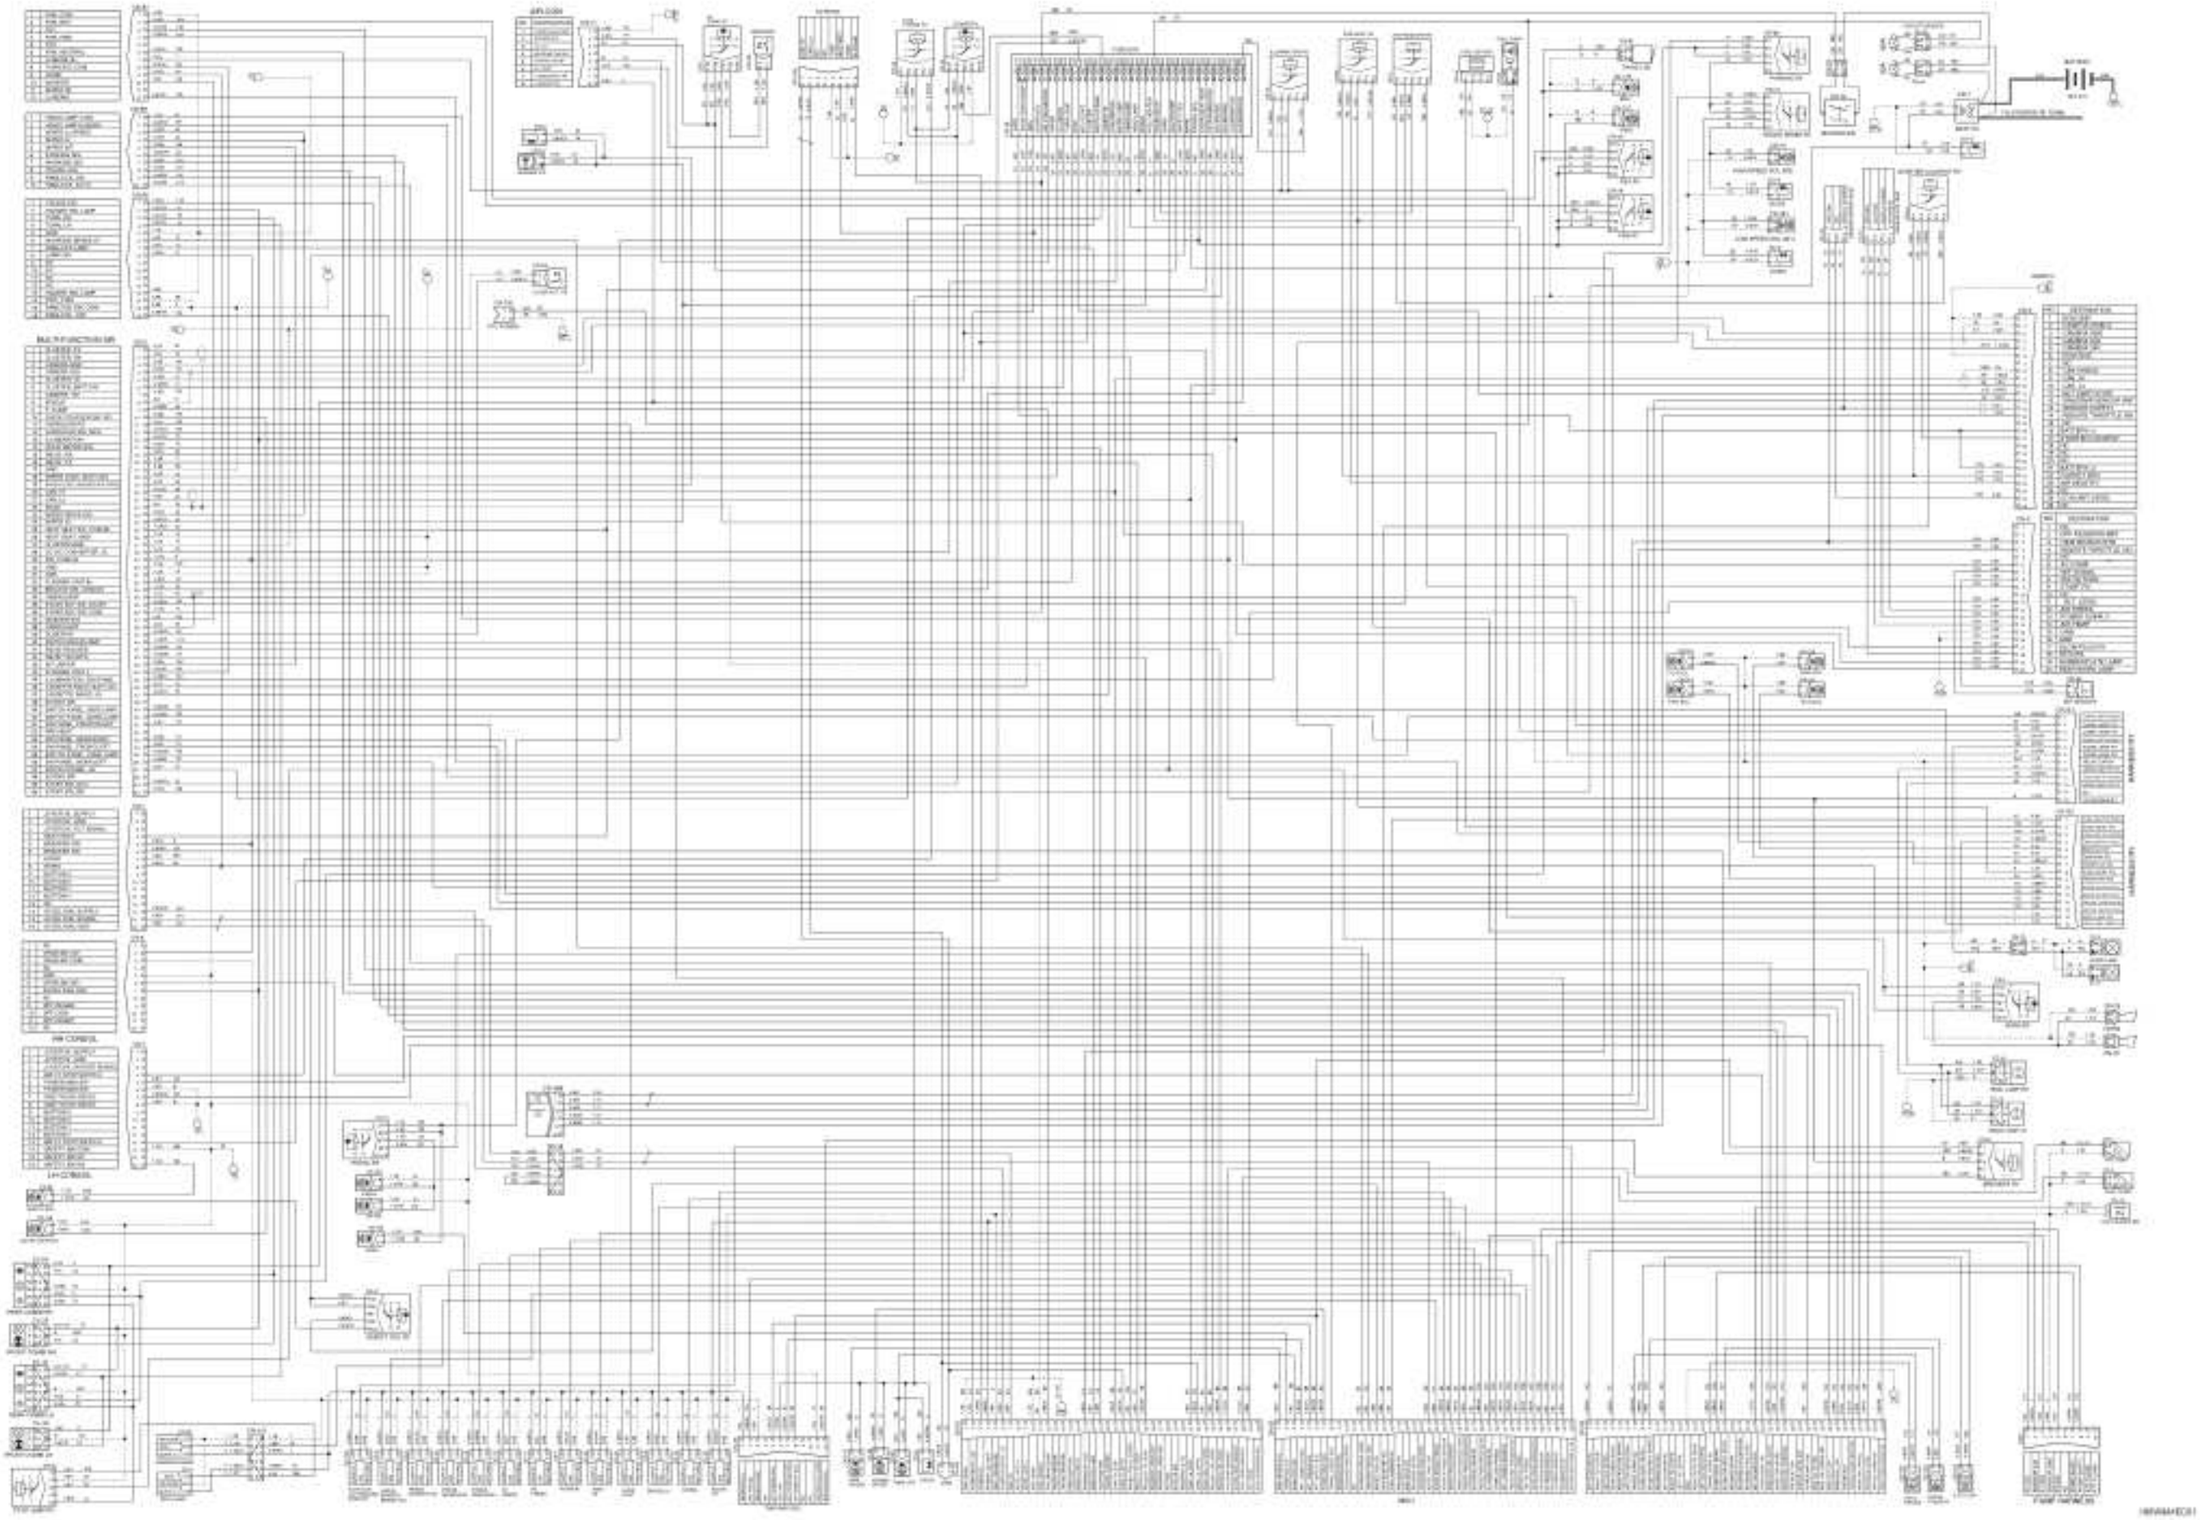

MidWestTech | Hyundai R180W-9A Wheel Excavator Service Manual | Publication R180W-9A

Order the manual at mid-west-tech.com >