WHEELED EXCAVATOR

SERVICE MANUAL

R210W-9A

HYUNDAI

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R210W-...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-21
Group 3 Swing Device 2-48
Group 4 Travel Motor 2-70
Group 5 RCV Lever 2-76
Group 6 Accelerator Pedal 2-83
Group 7 Brake Pedal 2-84
Group 8 Transmission 2-86
Group 9 Travel Control Valve 2-93
Group 10 Steering Valve 2-95
Group 11 Axle 2-97

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-14
Group 5 Combined Operation 3-29

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-24
Group 4 Connectors 4-33

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

Group 3 Automatic Deceleration System 5-6
Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up Function 5-9
Group 7 Engine Overheat Prevention Function 5-10
Group 8 Variable Power Control System 5-11
Group 9 Attachment Flow Control System 5-12
Group 10 Anti-Restart System 5-13
Group 11 Self-Diagnostic System 5-14
Group 12 Engine Control System 5-27
Group 13 EPPR Valve 5-28
Group 14 Monitoring System 5-33
Group 15 Fuel Warmer System 5-56

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-25
Group 4 Mechatronics System 6-41

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-19
Group 3 Track and Work Equipment 7-28

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precautions 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-36
Group 5 Swing Device 8-58
Group 6 Travel Motor 8-113
Group 7 Transmission 8-137
Group 8 Steering Valve 8-191
Group 9 Front Axle 8-216
Group 10 Rear Axle 8-287

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

Group 11 RCV Lever 8-329
Group 12 Turning Joint 8-343
Group 13 Boom, Arm, Bucket, Dozer and Outrigger Cylinders 8-349
Group 14 Work Equipment 8-370

SECTION 9 COMPONENT MOUNTING TORQUE

Group 1 Introduction Guide 9-1
Group 2 Engine System 9-2
Group 3 Electric System 9-4
Group 4 Hydraulic System 9-6
Group 5 Power train System 9-9
Group 6 Structure 9-11
Group 7 Work Equipment 9-15

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

When all spools are in the neutral positions, the pressurized oil discharged from the hydraulic pump (A1) passes through Port P1, the main path (1), the bypass circuit (2) passing the spools for travel (301), swing (305), boom confluence (boom 2; 307), option (309) and arm 1 (302), and the arm 1 side posi-nega conversion valve (611), and returns to the hydraulic oil tank through the tank port (R1).


The positive control signal pressure (Pi1) of the arm 1 side posi-nega conversion valve (611) is led from Port Pc1 to the regulator (Pi1) on the hydraulic pump (A1) side, and controls the pump discharge flow rate to its minimum value.

The oil discharged from the hydraulic pump (A2) passes through Port P2, the main path (3), the bypass circuit (2) passing the spools for dozer (312), boom 1 (303), bucket (304) and arm 2 (306), and the boom1 side posi-nega conversion valve (611), and returns to the hydraulic oil tank through the tank port (R1).


The positive control signal pressure (Pi2) of the boom 1 side posi-nega conversion valve (611) is led from Port Pc2 to the regulator (Pi2) on the hydraulic pump (A2) side, and controls the pump discharge flow rate to its minimum value.
When any of nine main spools is changed over, the bypass circuit (2) is cut off and the hydraulic oil at Port N1 or N2 in the negative control circuit is shut off.

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

4) BOOM, ARM OR BUCKET POWER IS WEAK

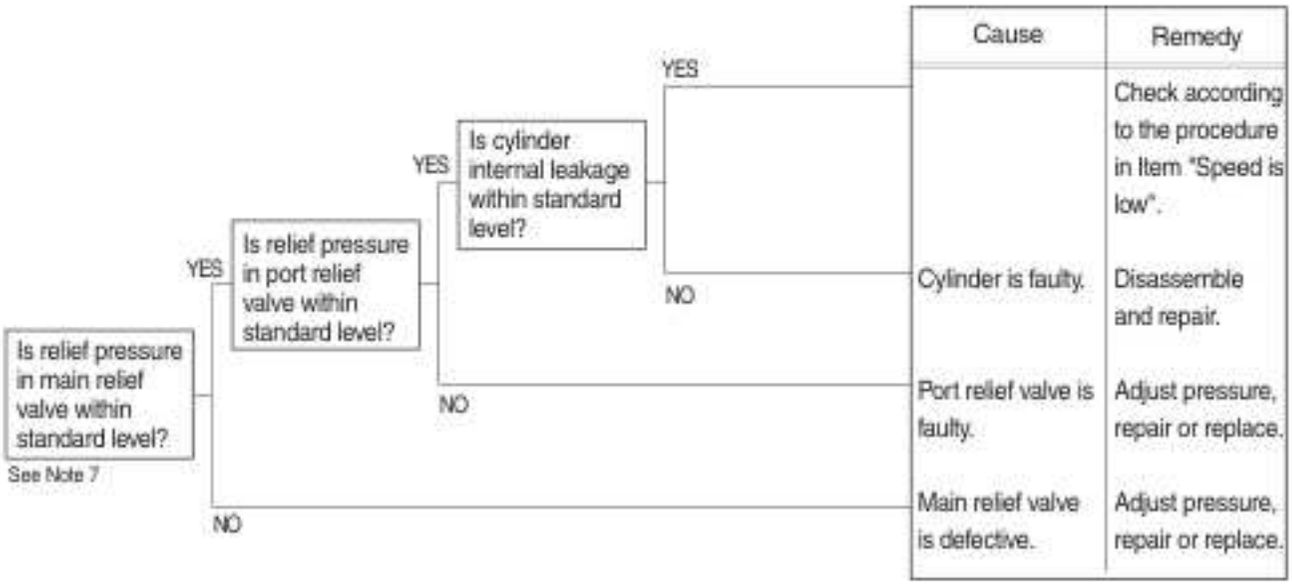

5) ONLY BUCKET OPERATION IS TOTALLY IMPOSSIBLE

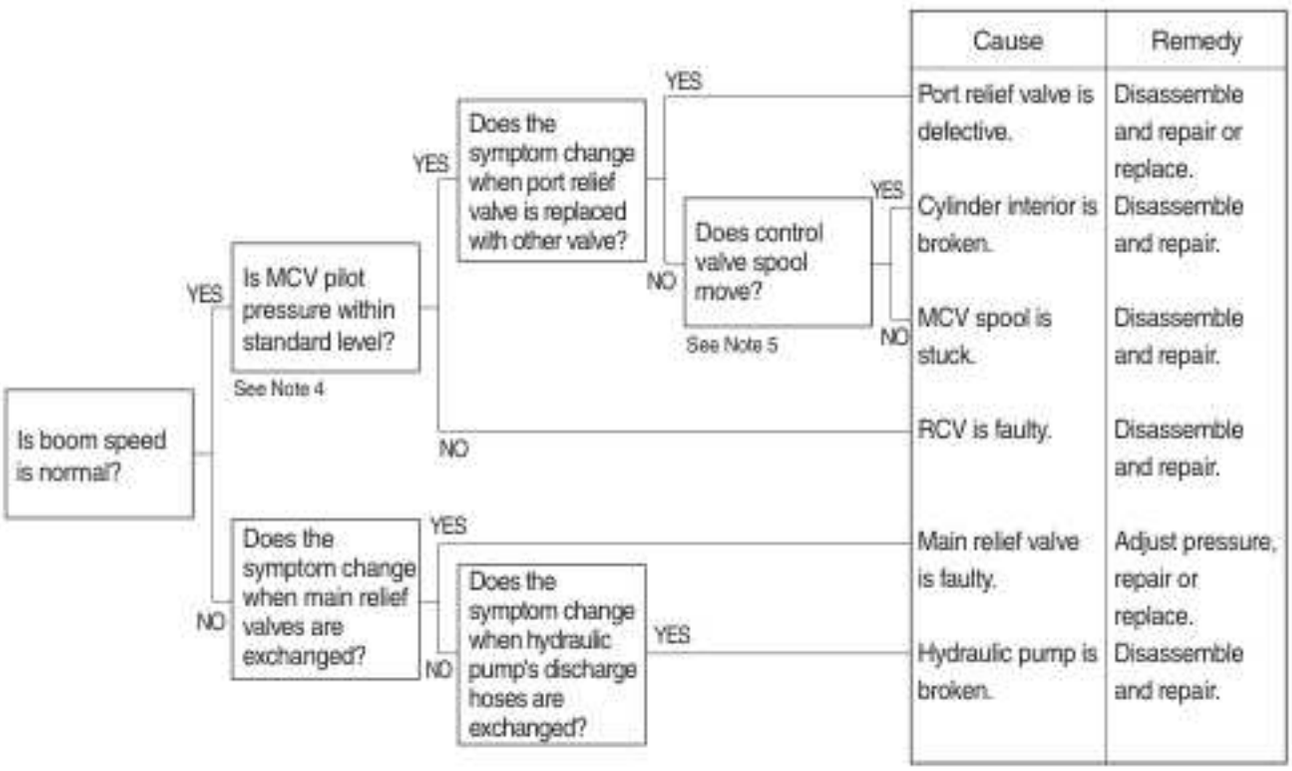

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

2) ENGINE SPEED

(1) Measure the engine speed at each power mode

※ The engine speed at each power mode must meet standard RPM; if not, all other operational performance data will be unreliable. It is essential to perform this test first.

(2) Preparation

① Warm up the machine, until the engine coolant temperature reaches 50˚C or more, and the hydraulic oil is 50±5˚C.

② Set the accel dial at 10 (Max) position.

③ Measure the engine RPM.

(3) Measurement


① Start the engine. The engine will run at start idle speed. Measure engine speed with a engine rpm display.

② Measure and record the engine speed at each mode (P, S, E).

③ Select the P-mode.

④ Lightly operate the bucket control lever a few times, then return the control lever to neutral; The engine will automatically enter the auto-idle speed after 4 seconds.

⑤ Measure and record the auto deceleration speed.

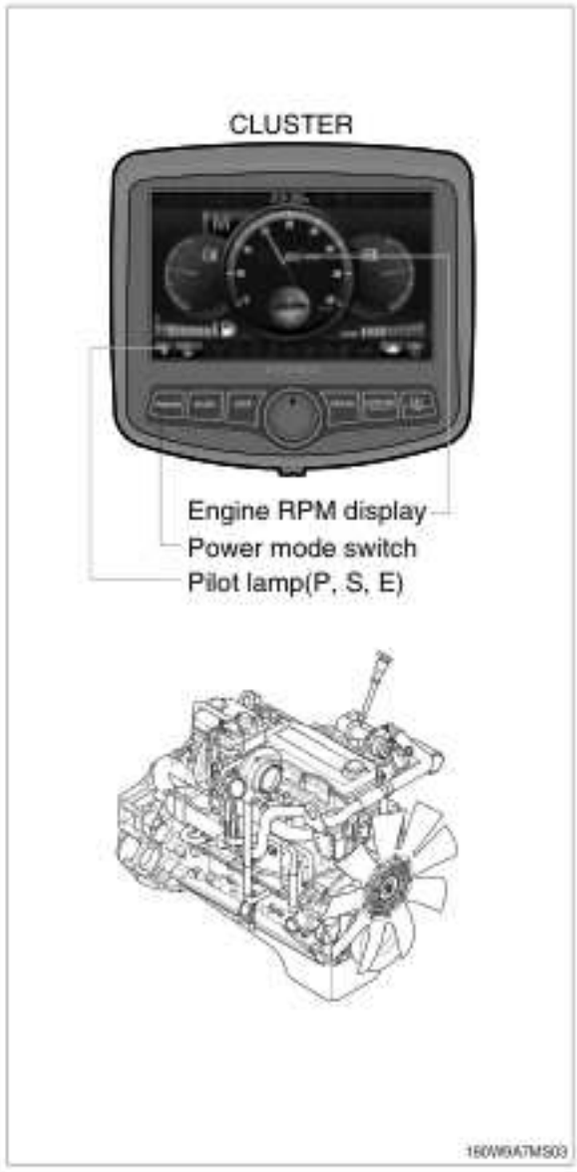

(4) Evaluation

The measured speeds should meet the following specifications.

Unit : rpm

Model	Engine speed	Standard	Remarks
R210W-9A	Start idle	850±100	
	P mode	1700±50	
	S mode	1500±50	
	E mode	1350±50	
	Auto decel	1000±100	
	One touch decel	850±50	

Condition : Set the accel dial at 10 (max) position.

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

3) ASSEMBLING PINION GEAR SUB ASSY

(1) Prepare drive shaft pinion gear vertical with ground.




2209A83M21

(2) Fully apply grease (albania EP02) to O-ring groove of sleeve.

※ Be sure to maintain it vertical with ground when assembling it.

(3) Put O-ring into O-ring groove of sleeve. Fully apply grease on O-ring.

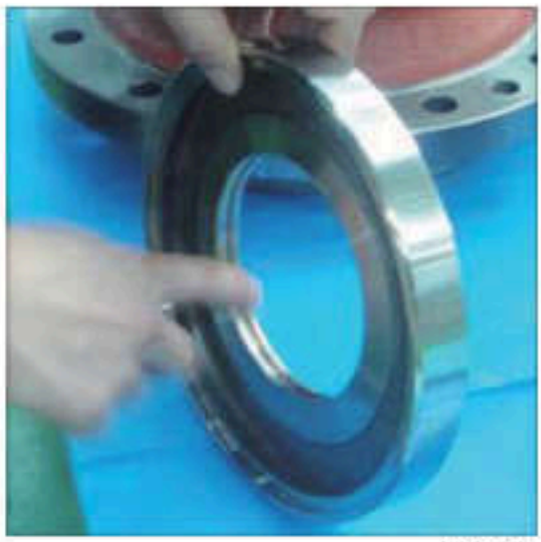

2209A83M22

(4) Assemble taper bearing and sleeve into drive shaft using press jig.
Use special jig for pressing. Leave no space between sleeve and taper bearing.



2209A83M23

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

3) DISASSEMBLY

The figure in ( ) shown after the part name in the explanation sentence shows its number in the structure figures (8-31~32).

(1) Place control valve on working bench.

※ Disassemble it in clean place and pay attention not to damage flange faces and plate faces.



(2) Disassembling of main spools

· Travel (301), dozer (312), bucket (304), swing (305), option (308), arm 2 (306), boom 2 (307), swing priority (311).

① Loosen the hexagon the socket head bolts (273) and remove the spring cover (201, 202) and the O-ring (261).

· Hexagon key wrench : 6 mm




② Pull out the spool, spring, spring seats (322), stopper (335 or 339) and spacer bolt (336) in the spool assembly condition from the casing.

※ When pulling out the spool assembly from housing, pay attention not to damage the housing.



MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R2... Order the manual at mid-west-tech.com >

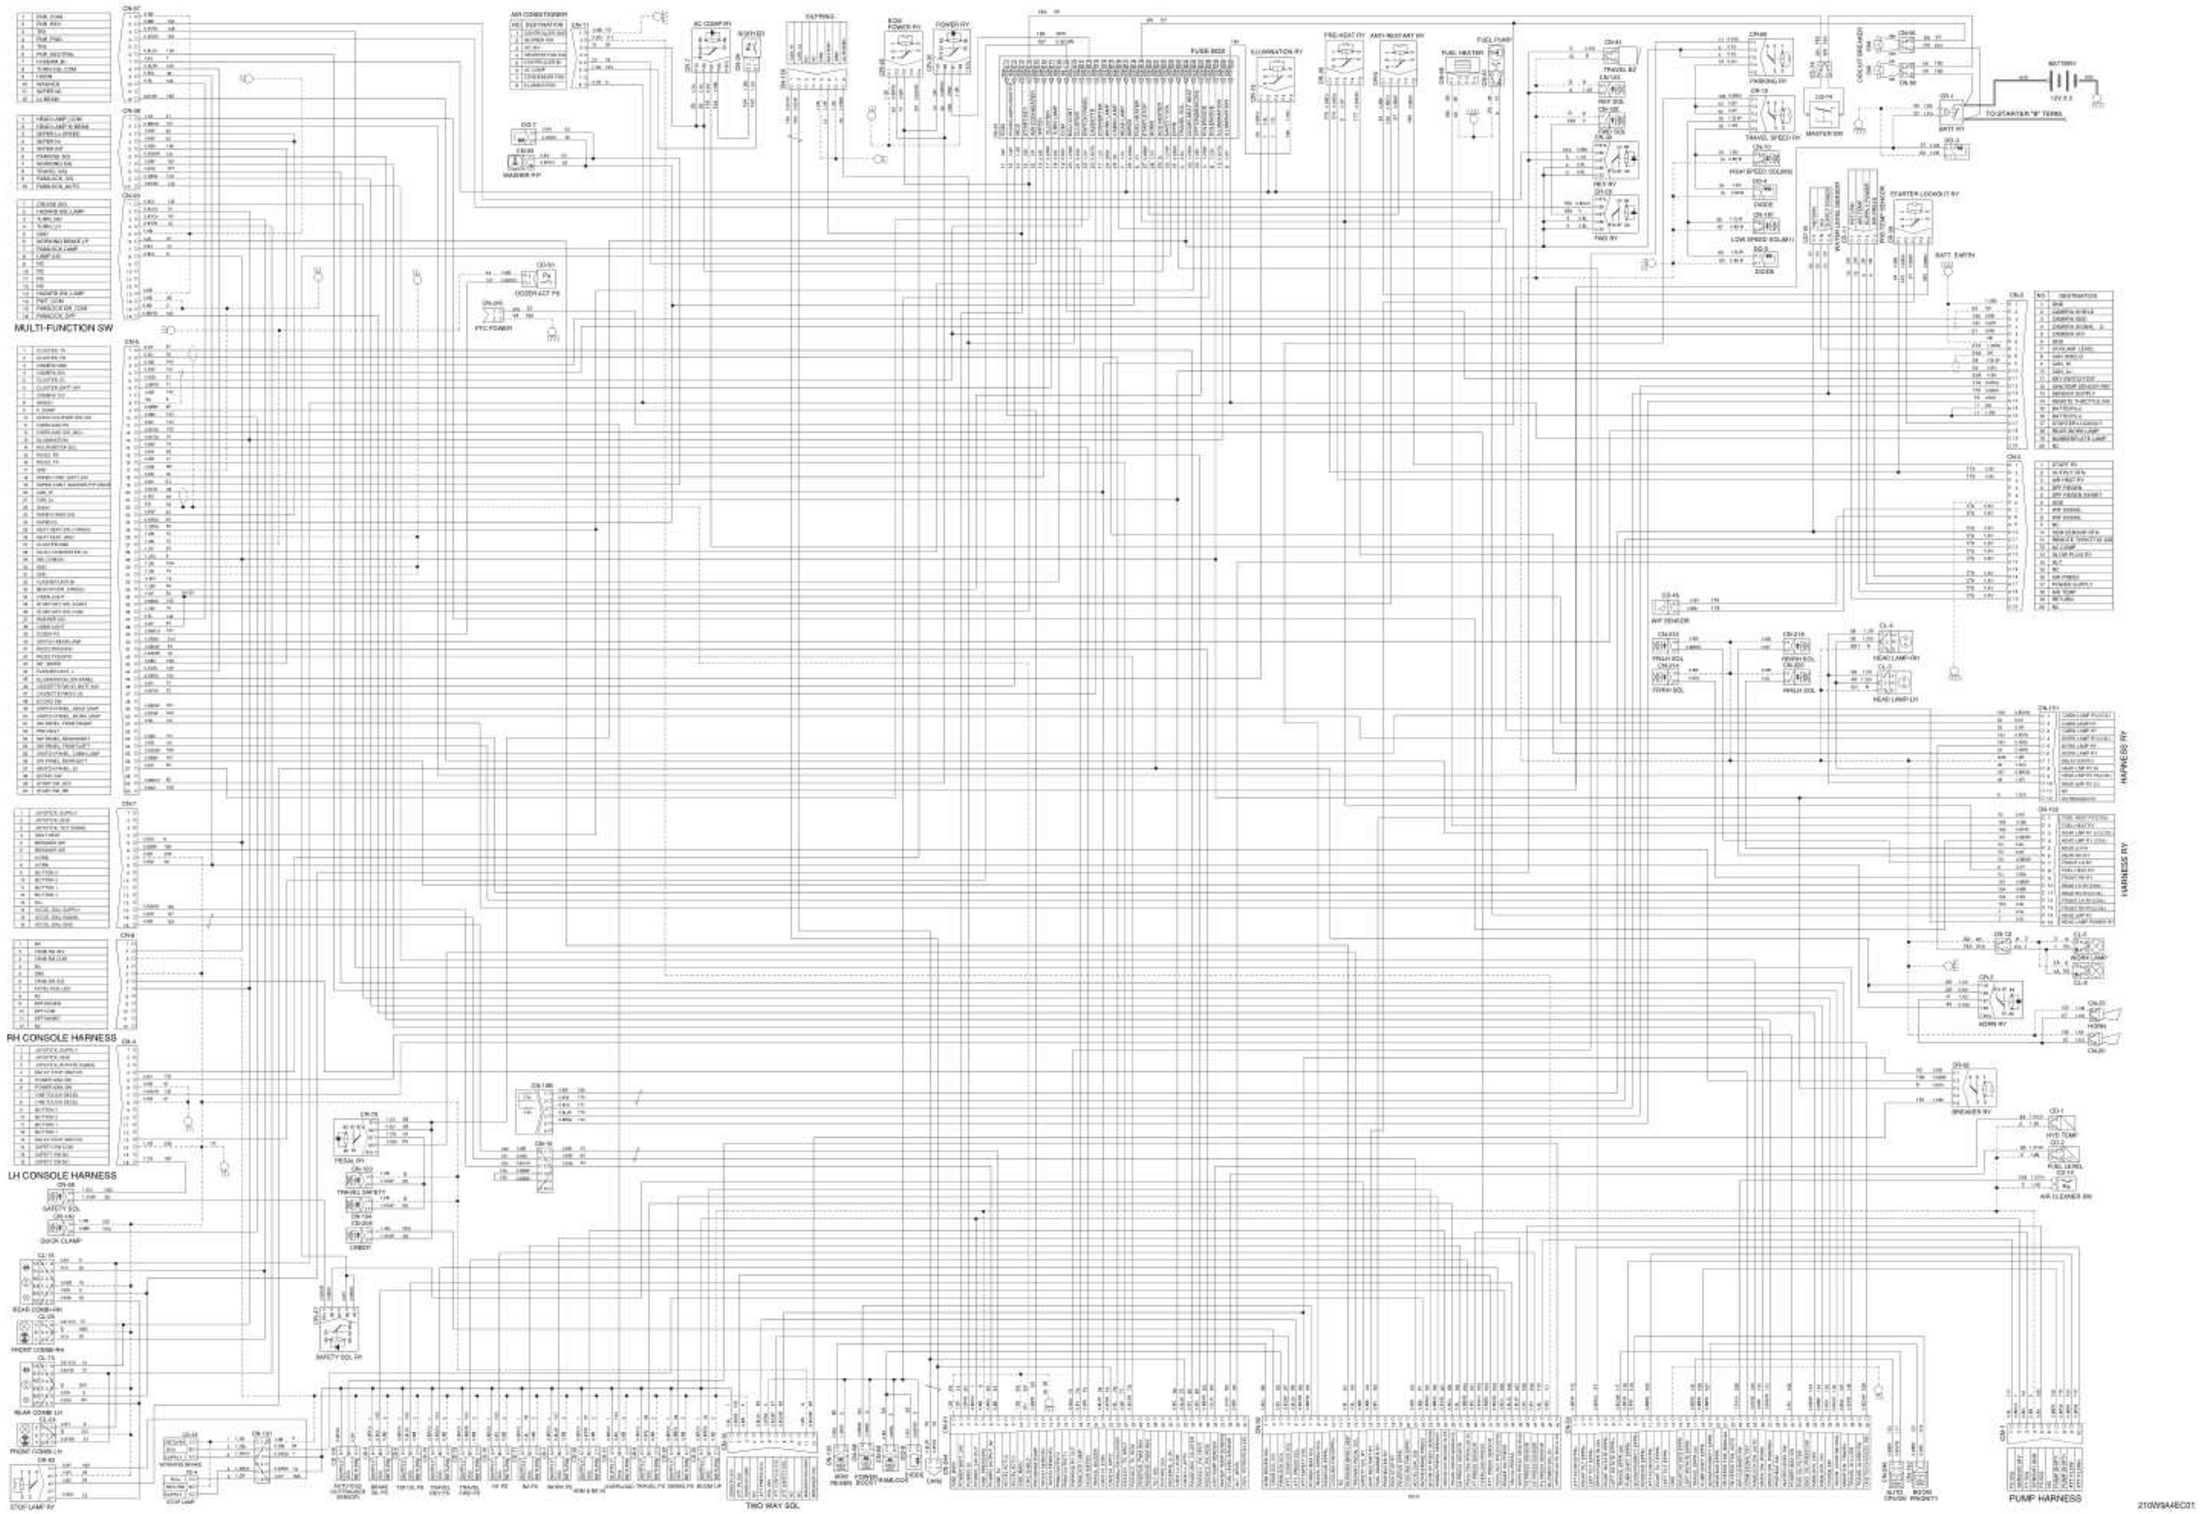

MidWestTech | Hyundai R210W-9A Wheel Excavator Service Manual | Publication R210W-9A
Order the manual at mid-west-tech.com >