CRAWLER EXCAVATOR

SERVICE MANUAL

R300LC-9SH

HYUNDAI

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication R30...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-55
Group 4 Travel Device 2-65
Group 5 RCV Lever 2-88
Group 6 RCV Pedal 2-95

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-3
Group 3 Pilot Circuit 3-6
Group 4 Single Operation 3-15
Group 5 Combined Operation 3-25

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electric Circuit 4-3
Group 3 Electrical Component Specification 4-38
Group 4 Connectors 4-46

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-5
Group 3 Automatic Deceleration System 5-11
Group 4 Power Boost System 5-13
Group 5 Travel Speed Control System 5-15
Group 6 Automatic Warming Up Function 5-17
Group 7 Engine Overheat Prevention Function 5-19
Group 8 Variable Power Control System 5-21

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

Group 9 Attachment Flow Control System 5-22
Group 10 Anti-Restart System 5-23
Group 11 Self-Diagnostic System 5-24
Group 12 Engine Control System 5-31
Group 13 EPPR (Electro Proportional Pressure Reducing) Valve 5-33
Group 14 Monitoring System 5-39
Group 15 Fuel Warmer System 5-71

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-24
Group 4 Mechatronics System 6-56

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-23
Group 3 Track and Work Equipment 7-31

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-30
Group 5 Swing Device 8-51
Group 6 Travel Device 8-79
Group 7 RCV Lever 8-112
Group 8 Turning Joint 8-126
Group 9 Boom, Arm and Bucket Cylinder 8-131
Group 10 Undercarriage 8-148
Group 11 Work Equipment 8-160

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

SECTION 9 COMPONENT MOUNTING TORQUE


Group 1 Introduction guide 9-1
Group 2 Engine system 9-2
Group 3 Electric system 9-5
Group 4 Hydraulic system 9-8
Group 5 Undercarriage 9-11
Group 6 Structure 9-13
Group 7 Work equipment 9-17

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

3. WORKING RANGE

1) R300LC-9SH, R300NLC-9SH

· 6.25 m (20' 6") BOOM

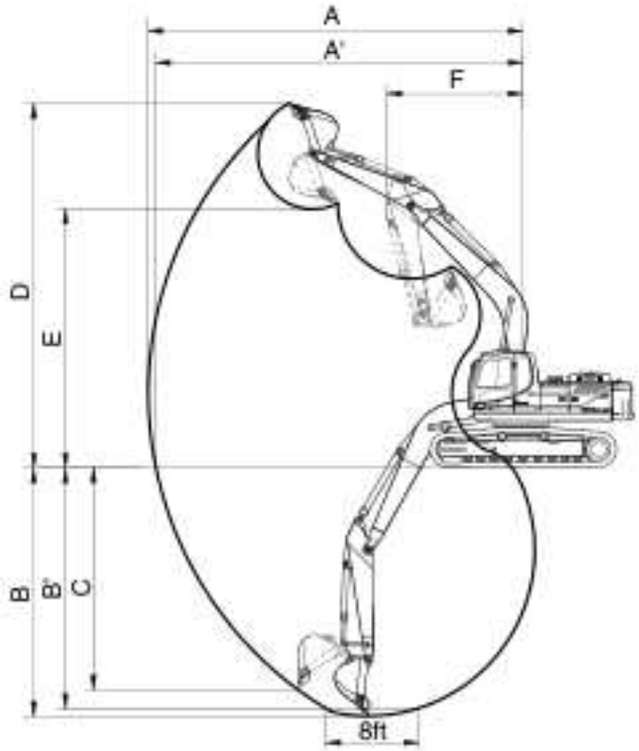


Description		2.10m (6' 11") Arm	2.50 m (8' 2") Arm	3.05 m (10' 0") Arm	3.75 m (12' 4") Arm
Max digging reach	A	10020 mm (32' 10")	10280 mm (33' 7")	10820 mm (35' 6")	11400 mm (37' 5")
Max digging reach on ground	A'	9820 mm (32' 3")	10080 mm (33' 1")	10620 mm (34' 10")	11220 mm (36' 10")
Max digging depth	B	6440 mm (21' 1")	6840 mm (22' 5")	7390 mm (24' 3")	8090 mm (26' 7")
Max digging depth (8 ft level)	B'	6240 mm (20' 6")	6630 mm (21' 9")	7300 mm (23' 11")	7920 mm (26' 0")
Max vertical wall digging depth	C	6000 mm (19' 8")	5850 mm (19' 2")	6380 mm (20' 11")	7080 mm (23' 3")
Max digging height	D	10070 mm (33' 0")	10110 mm (33' 2")	10160 mm (33' 4")	10360 mm (34' 0")
Max dumping height	E	6940 mm (22' 9")	7030 mm (23' 1")	7110 mm (23' 4")	7310 mm (24' 0")
Min swing radius	F	4380 mm (14' 4")	4260 mm (14' 0")	4230 mm (13' 11")	4140 mm (13' 7")
Bucket digging force	SAE	168.7 [184] kN	168.7 [184] kN	168.7 [184] kN	168.7 [184] kN
		17200 [18760] kgf	17200 [18760] kgf	17200 [18760] kgf	17200 [18760] kgf
		37920 [41370] lbf	37920 [41370] lbf	37920 [41370] lbf	37920 [41370] lbf
	ISO	192.2 [209.7] kN	192.2 [209.7] kN	192.2 [209.7] kN	192.2 [209.7] kN
		19600 [21380] kgf	19600 [21380] kgf	19600 [21380] kgf	19600 [21380] kgf
		43210 [47140] lbf	43210 [47140] lbf	43210 [47140] lbf	43210 [47140] lbf
Arm digging force	SAE	180.4 [195.9] kN	156.9 [170.4] kN	131.4 [142.7] kN	114.7 [124.6] kN
		18400 [19980] kgf	16000 [17370] kgf	13400 [14550] kgf	11700 [12700] kgf
		40570 [44050] lbf	35270 [38290] lbf	29540 [32070] lbf	25790 [28000] lbf
	ISO	190.3 [206.6] kN	163.8 [177.8] kN	136.3 [148] kN	119.6 [129.9] kN
		19400 [21060] kgf	16700 [18130] kgf	13900 [15090] kgf	12200 [13250] kgf
		42770 [46440] lbf	36820 [39980] lbf	30640 [33270] lbf	26900 [29210] lbf

[ ] : Power boost

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

2) SPEED ON ONE SIDE FALLS AND THE MACHINE CURVES

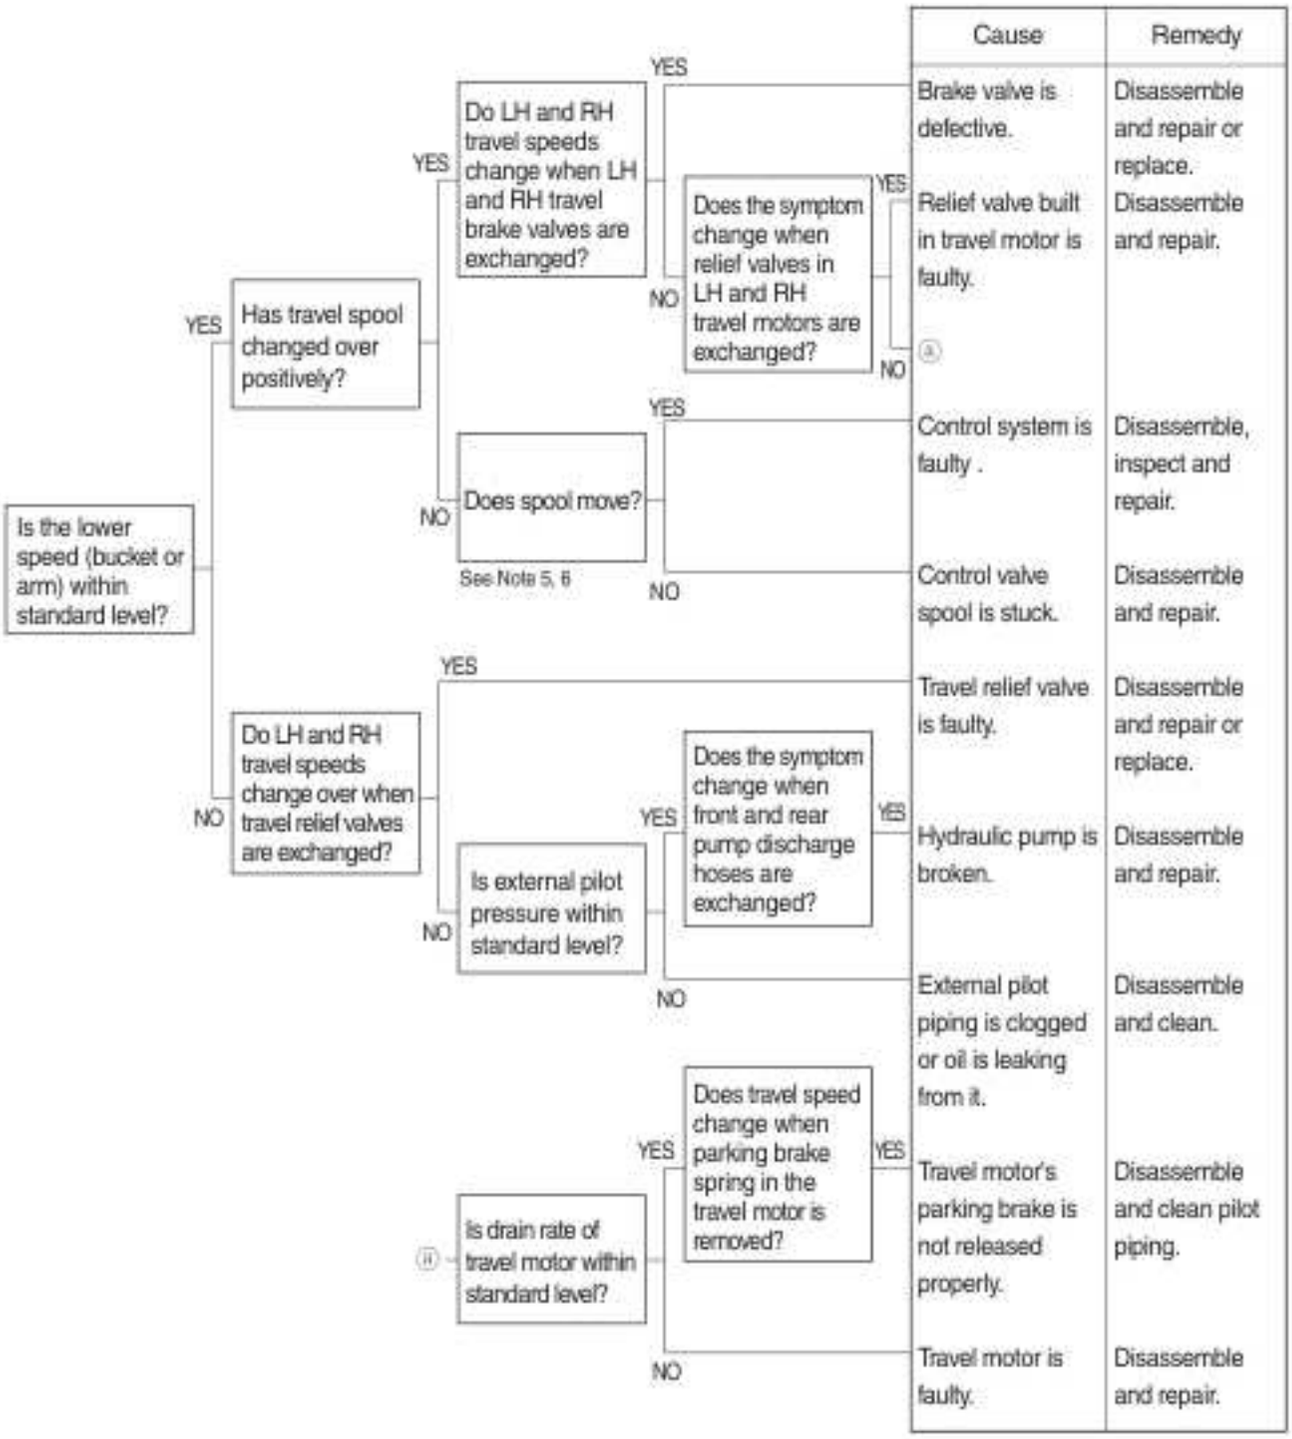


MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >


9. MALFUNCTION OF POWER MAX

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

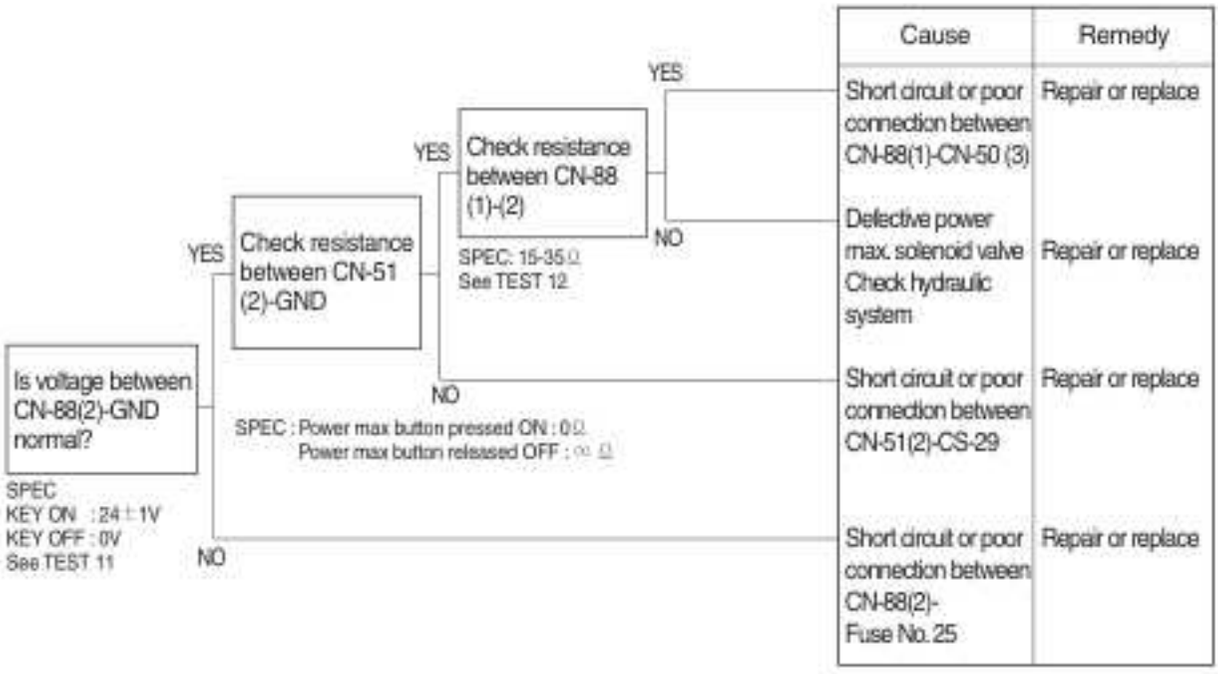


Wiring diagram

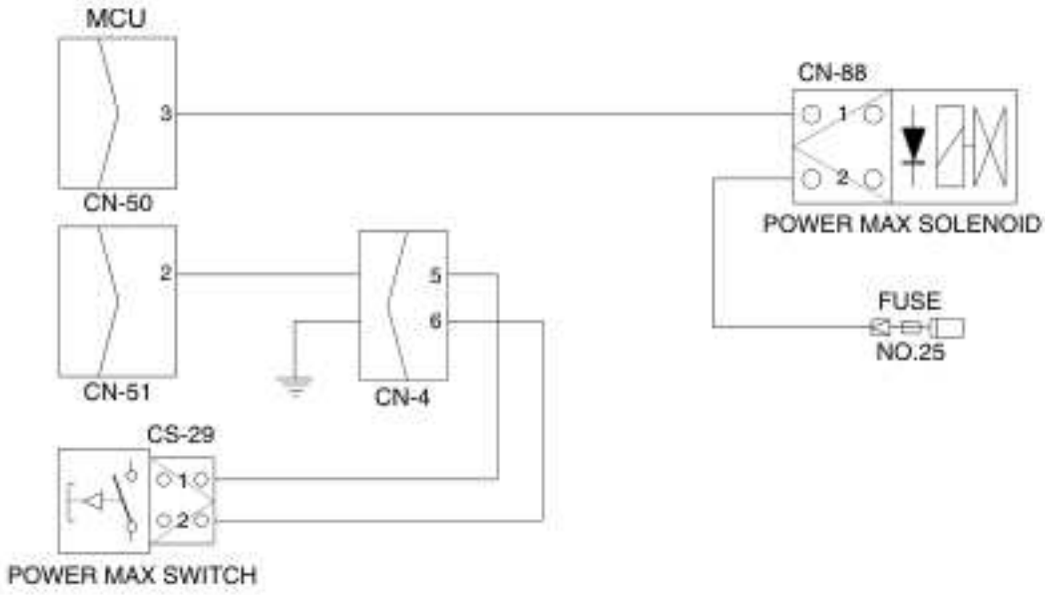

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

⑧ Assemble the piston assy (18) in the set plate (17).

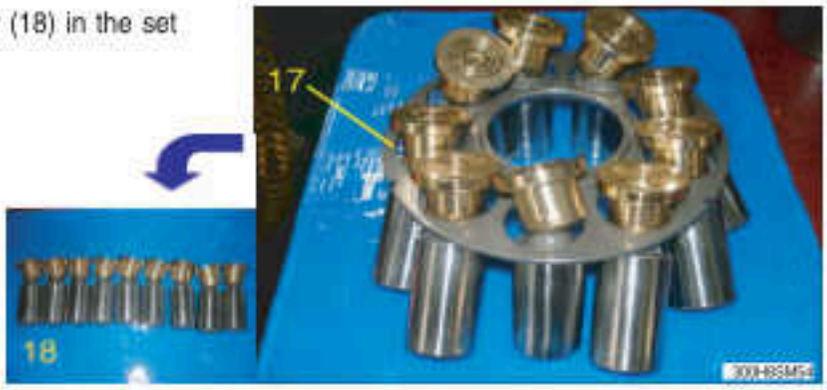

⑨ Assemble the piston assy (18) in the cylinder block (11).
Apply the clean hydraulic oil in the piston assy and hole of cylinder block (11) before assemble the piston assy (18)



⑩ The workbench horizontally, assemble the cylinder block assy in the body (1) and insert the O-ring (21, 22).




⑪ Insert the O-ring (21, 22) in the body (1).



MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >


(2) Display map

① Monitoring

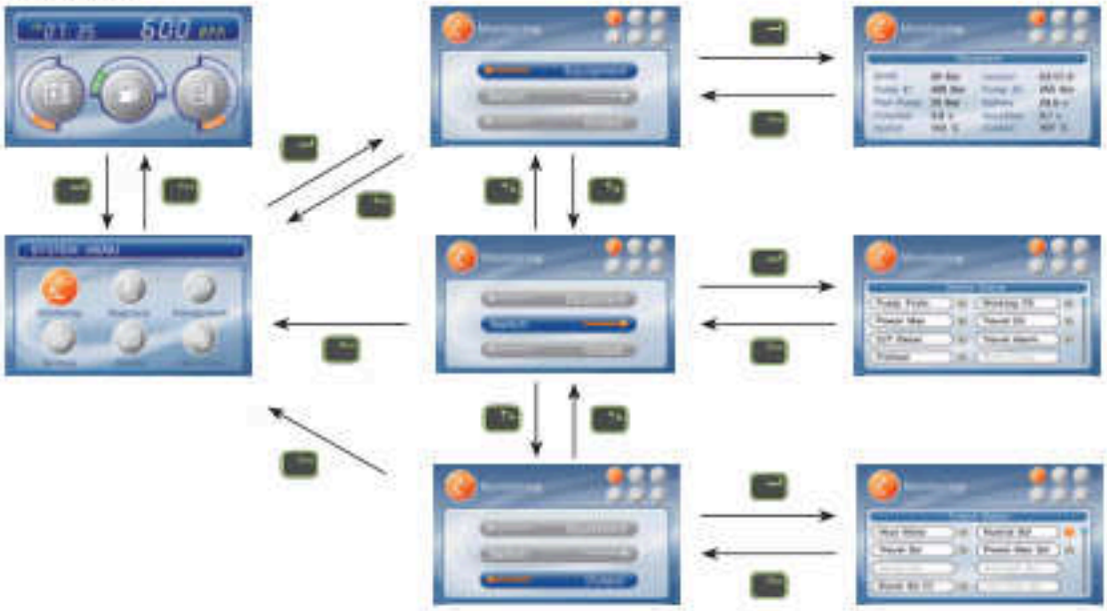

② Diagnosis

a. Protocol type 1

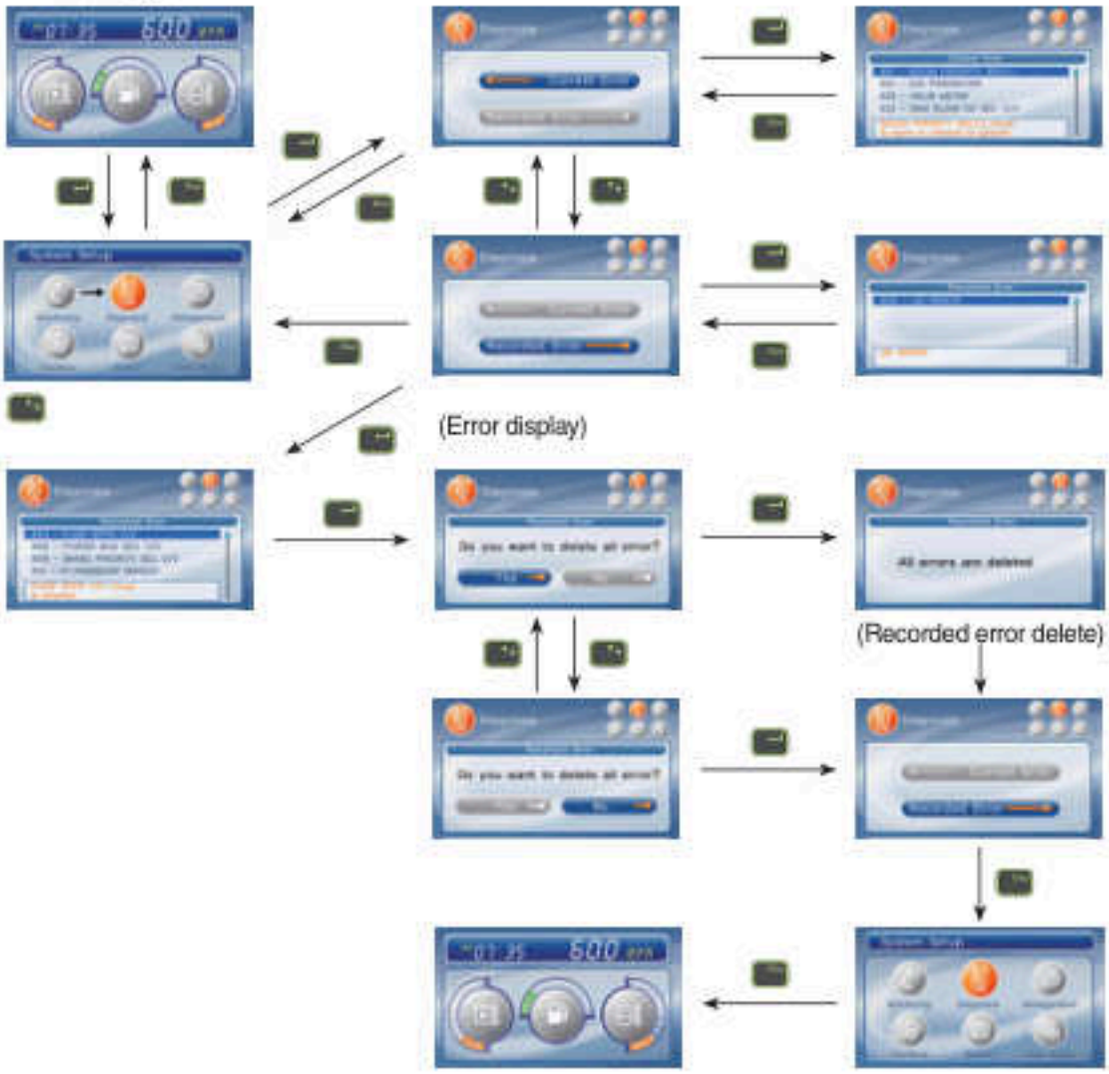

MidWestTech | Hyundai R300LC-9SH Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >