CRAWLER EXCAVATOR

SERVICE MANUAL

R380LC-9

HYUNDAI

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R380L...

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-46
Group 4 Travel Device 2-58
Group 5 RCV Lever 2-71
Group 6 RCV Pedal 2-78

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-13
Group 5 Combined Operation 3-23

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electric Circuit 4-3
Group 3 Electrical Component Specification 4-21
Group 4 Connectors 4-29

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6
Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up System 5-9
Group 7 Engine Overheat Prevention System 5-10
Group 8 Variable power Control System 5-11
Group 9 Attachment Flow Control System 5-12

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >

Group 10 Anti-restart System 5-13
Group 11 Self-Diagnostic System 5-14
Group 12 Engine Control System 5-27
Group 13 EPPR (Electro Proportional Pressure Reducing) Valve 5-28
Group 14 Monitoring System 5-33
Group 15 Fuel Warmer System 5-56

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-24
Group 4 Mechatronics System 6-40

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-21
Group 3 Track and Work Equipment 7-29

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-31
Group 5 Swing Device 8-51
Group 6 Travel Device 8-71
Group 7 RCV Lever 8-103
Group 8 Turning Joint 8-117
Group 9 Boom, Arm and Bucket Cylinder 8-122
Group 10 Undercarriage 8-139
Group 11 Work Equipment 8-151

SECTION 9 COMPONENT MOUNTING TORQUE

Group 1 Introduction guide 9-1
Group 2 Engine system 9-2
Group 3 Electric system 9-4
Group 4 Hydraulic system 9-6
Group 5 Undercarriage 9-9
Group 6 Structure 9-10
Group 7 Work equipment 9-14

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >

3) GEAR PUMP

Item	Specification
Type	Fixed displacement gear pump single stage
Capacity	15cc/rev
Maximum pressure	40 kgf/cm² (570 psi)
Rated oil flow	27 ℓ /min (7.1 U.S. gpm/5.9 U.K. gpm)

4) MAIN CONTROL VALVE

Item	Specification
Type	9 spools
Operating method	Hydraulic pilot system
Main relief valve pressure	330 kgf/cm² (4690 psi) [360 kgf/cm² (5120 psi)]
Overload relief valve pressure	390 kgf/cm² (5550 psi)

[ ]: Power boost

5) SWING MOTOR

Item	Specification
Type	Axial piston motor
Capacity	233 cc/rev
Relief pressure	290 kgf/cm² (4120 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	107 kgf · m (773 lbf · ft)
Brake release pressure	30–50 kgf/cm² (427–711 psi)
Reduction gear type	2 - stage planetary

6) TRAVEL MOTOR

Item	Specification
Type	Variable displacement axial piston motor
Relief pressure	360 kgf/cm² (5120 psi)
Capacity (max / min)	185.2/114.2 cc/rev
Reduction gear type	3-stage planetary
Braking system	Automatic, spring applied hydraulic released
Brake release pressure	8.5 kgf/cm² (121 psi)
Braking torque	44.4 kgf · m (321 lbf · ft)

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >

GROUP 4 CONNECTORS

1. CONNECTOR DESTINATION

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	AMP	10	I/conn (Frame harness-Pump PS harness)	S816-010002	S816-110002
CN-2	AMP	12	I/conn (Frame harness-Engine harness)	S816-012002	S816-112002
CN-3	AMP	15	I/conn (Frame harness-Engine harness)	2-85262-1	368301-1
CN-4	AMP	16	I/conn (Console harness LH-Frame harness)	S816-012002	S816-116002
CN-5	DEUTSCH	60	I/conn (Side harness RH-Frame harness)	DRB16-60SAE-L018	DRB12-60PAE-L018
CN-7	AMP	16	I/conn (Console harness RH-Frame harness)	368047-1	S816-116002
CN-8	AMP	12	I/conn (Console harness RH-Frame harness)	S816-012002	S816-112002
CN-10	DEUTSCH	12	I/conn (Cab harness-Side harness RH)	DT06-12S-EP06	DT04-12P-BE02
CN-11	DEUTSCH	8	I/conn (Frame harness-Aircon harness)	DT06-8S-EP06	-
CN-12	DEUTSCH	2	I/conn (Frame harness-Boom wire harness)	DT06-2S-EP06	DT04-2P-E004
CN-14	AMP	8	I/conn (Frame harness-Bucket EPPR)	S816-008002	S816-108002
CN-15	AMP	12	I/conn (Frame harness-Breaker solenoid)	S816-012002	S816-112002
CN-16	AMP	6	Emergency engine start & speed control	S816-006002	S816-106002
CN-17	DEUTSCH	8	I/conn (Wiper harness-Side harness RH)	DT06-8S-EP06	DT04-8P
CN-20	MOLEX	2	Horn	36825-0211	-
CN-21	AMP	6	Wiper motor	925276-0	-
CN-22	KET	2	Washer pump	MG640605	-
CN-23	KET	2	Speaker-LH	MG610070	-
CN-24	KET	2	Speaker-RH	MG610070	-
CN-25	MOLEX	2	Horn	36825-0211	-
CN-27	KUM	16	Radio & CD/MP3 player	PK145-16017	-
CN-28	KUM	1	Aircon compressor	NMWP01F-B	-
CN-29	KET	2	Receiver dryer	MG640795	-
CN-36	AMP	12	Fuse & relay box	S816-012002	-
CN-45	RING-TERM	-	Starter motor B+	S820-308000	-
CN-48	AMP	1	Hour meter	2-520193-2	-
CN-51	DEUTSCH	40	MCU	DRC26-40SA	-
CN-52	DEUTSCH	40	MCU	DRC26-40SB	-
CN-53	DEUTSCH	40	MCU	DRC26-40SC	-
CN-56	DEUTSCH	6	Cluster	-	DT04-6P-E005
CN-60	YAZAKI	2	Fusible link	21N4-01320	7122-4125-50
CN-61	DEUTSCH	2	Fuel filler pump	DT06-2S-EP06	-
CN-66	DEUTSCH	2	Breaker solenoid	DT06-2S-EP06	-
CN-68	DEUTSCH	2	Safety solenoid	DT06-2S-EP06	-
CN-70	DEUTSCH	2	Travel high solenoid	DT06-2S-EP06	-

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an operator to maintain the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system and Mechatronics system. At each system part, an operator can check the machine according to the troubleshooting process diagram.

※ Before carring out troubleshooting procedure, check monitoring menu in the cluster.

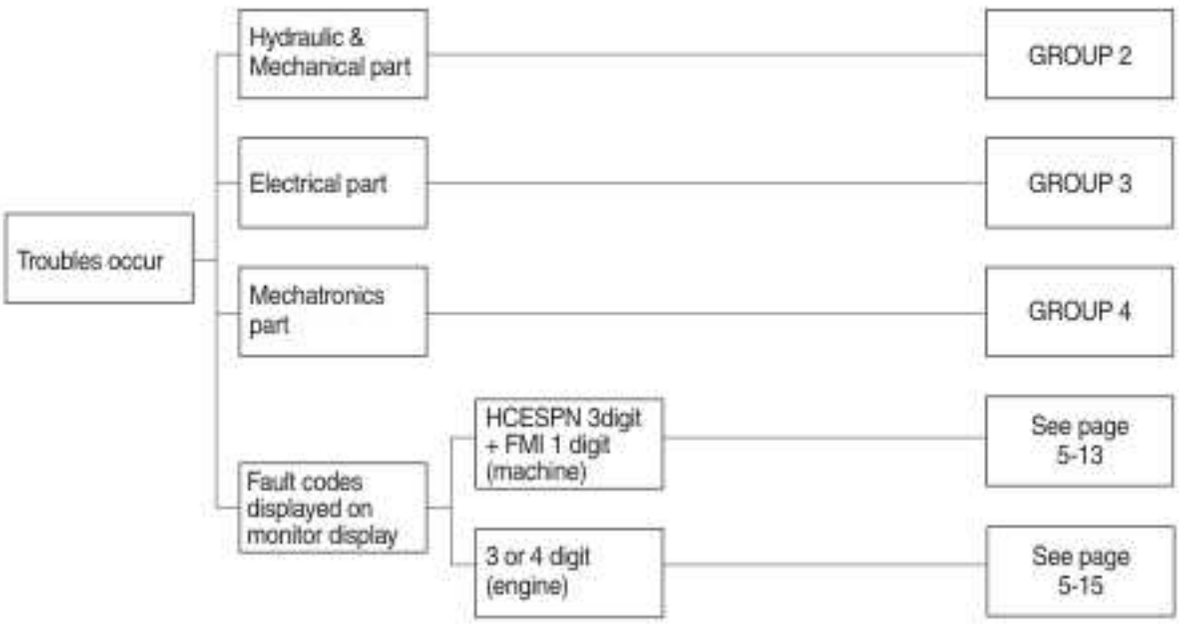

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >

(8) Remove carrier 2 (6), with planetary gears 2 (13), sun gear 3 (11), etc. fitted.

※ Use M10 eyebolt. In this case, thrust ring (26) is removed simultaneously.



(9) Disassembling of carrier 2 sub-assembly

① Push in spring pin (36), and remove pin 2 (16), from carrier 2.

※ Carry out the following check in advance. If any abnormality should be found, carry out disassembling.

- Is there any crevice, crack or pitting on tooth surface of planetary gear?
- When turning planetary gear lightly, is there any abnormal noise or eccentric clearance? Carry out check similarly to the above for carrier 3.



② Remove side plate (20), planetary gear 2 (13), and needle bearing (22) from carrier 2.

③ Remove thrust ring (26).



④ Remove snap ring (46), and remove carrier 2 (6) from sun gear 3 (11).

⑤ Remove thrust ring (27) from sun gear 3 (11).



MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >

3) ASSEMBLING TRAVEL MOTOR

(1) Shaft sub assembly

① Fit bearing spacer to shaft (08) and press-fit roller bearing (09).

※ Press the roller bearing after preheating.






a. Induction heating apparatus temperature : 100˚C

b. Be careful not to damage the sliding surface for the seal on the shaft.




② Insert stop ring (10) with snap ring pliers.

※ Pay attention to the direction of the stop ring. (round direction is bearing direction.)

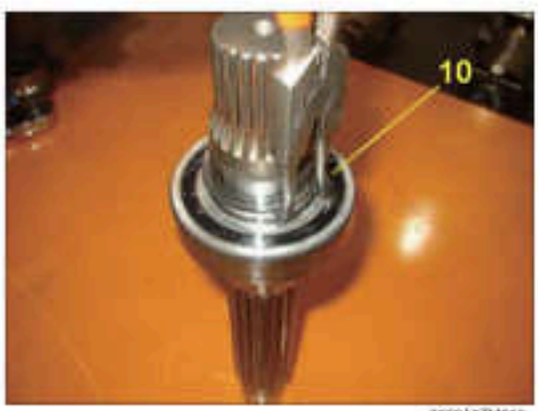

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R3... Order the manual at mid-west-tech.com >

- ELECTRICAL CIRCUIT (1/2)

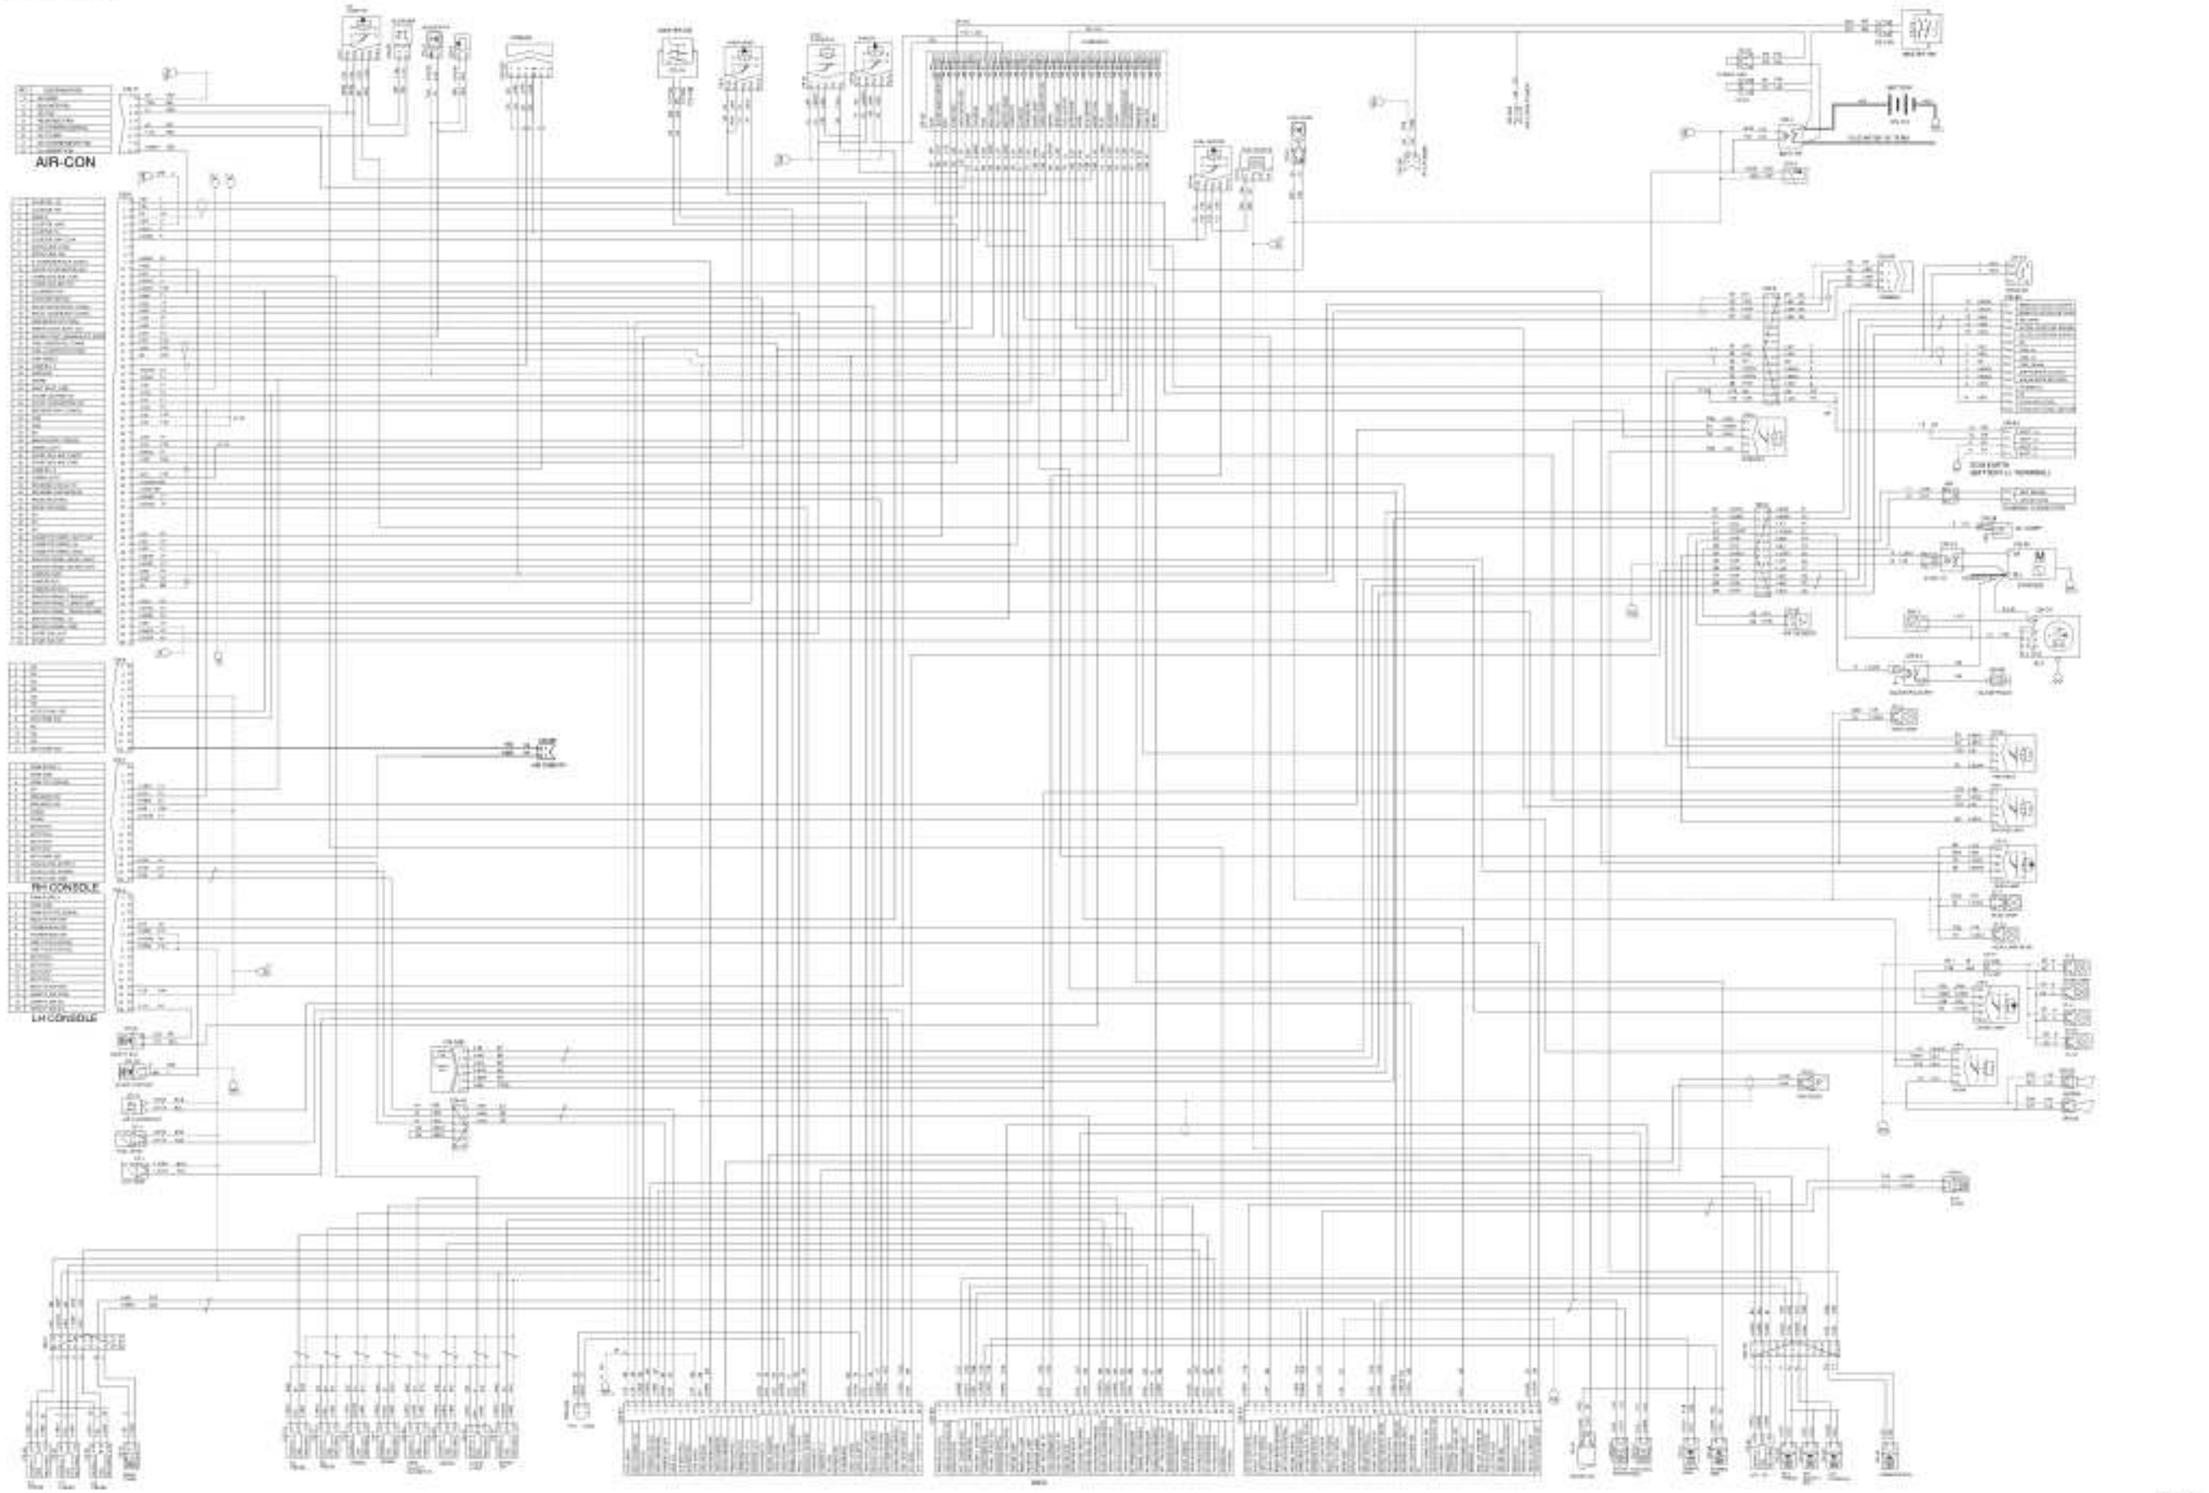

MidWestTech | Hyundai R380LC-9 Crawler Excavator Service Manual | Publication R380LC-9

Order the manual at mid-west-tech.com >