
ILLUSTRATED PARTS LIST

KUBOTA

R520S

TRACTOR

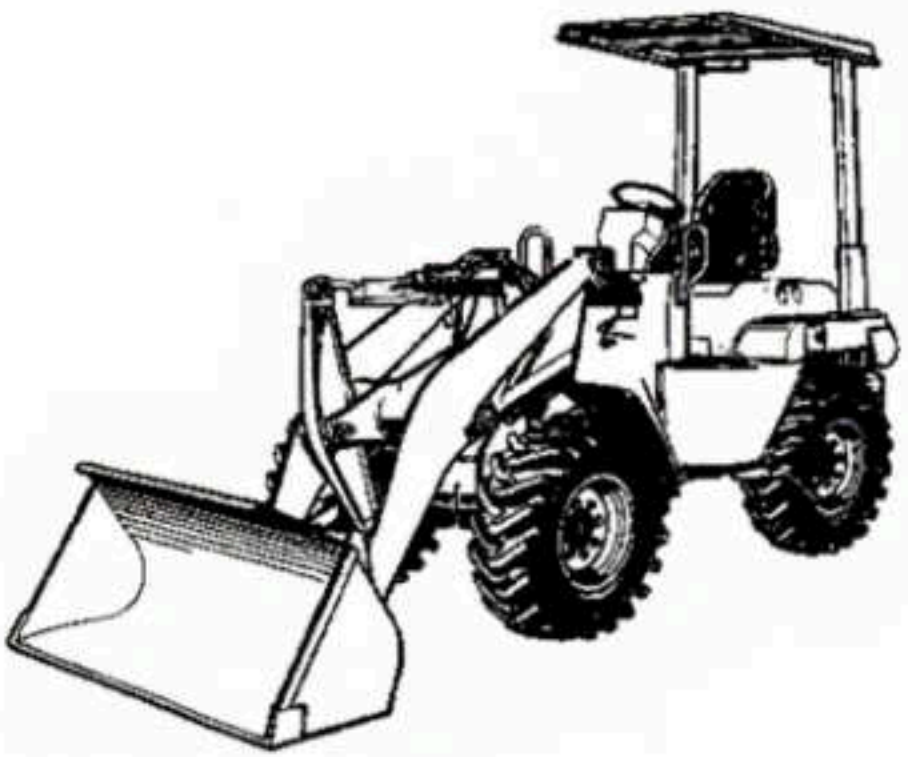

Kubota

Order the manual at mid-west-tech.com >

CONTROL LEVER (SHOVEL) (COMPONENT PARTS)

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	R2411-65300	ASSY LEVER CONTROL	1				0	0
020	R1411-65210	BASE CONTROL SHAFT	1				0	0
030	R2401-65220	COVER CONTROL SHAFT	1				0.66	1.452
040	01023-60610	BOLT	2				0.01	0.022
050	04013-60060	WASHER PLAIN	2				0.001	0.0022
060	R1401-65310	ARM CONTROL	1				0.18	0.396
070	08141-06002	BEARING BALL	2				0.029	0.0638
080	04611-00320	CIR CLIP INTERNAL	2				0.002	0.0044
090	04015-60080	WASHER PLAIN	1				0.01	0.022
100	01123-60816	BOLT	1				0.01	0.022
110	R1401-65320	PIN	1				0.055	0.121
120	01023-60610	BOLT	1				0.01	0.022
130	04013-60060	WASHER PLAIN	2				0.001	0.0022
140	R1401-65330	LEVER CONTROL	1				0.39	0.858
150	68841-65250	BEARING NEEDLE	1				0.02	0.044
160	R1401-65510	ARM LOCK	1				0.05	0.11
170	04013-60080	WASHER PLAIN	1				0.002	0.0044
180	05511-50215	PIN SPLIT	1				0.001	0.0022
190	R1401-65520	ROD LOCK	1				0.025	0.055
200	05122-50614	PIN JOINT	1				0.004	0.0088
210	04013-60060	WASHER PLAIN	1				0.001	0.0022
220	05511-51612	PIN SPLIT	1				0.001	0.0022
230	R1401-65540	SPRING	1				0.003	0.0066
240	36330-87450	RING RUBBER	1				0.001	0.0022

MidWestTech | Kubota R520S Tractor Parts Manual | Publication R520S Order the manual at mid-west-tech.com >

LIFT CYLINDER RIGHT (COMPONENT PARTS)

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	R1511-72150	CYLINDER LIFT RH	1				0	0
020	R1511-93330	ASSY TUBE CYLINDER	1				0	0
025	68881-93460	BUSH	1				0.25	0.55
030	R1511-93320	ROD CYLINDER	1				0	0
040	68881-93330	CYLINDER HEAD	1				1.18	2.596
050	68881-93340	CIR CLIP INTERNAL	1				0.001	0.0022
060	68881-93370	BUSH	1				0.05	0.11
070	68881-93420	PISTON	1				0.75	1.65
080	R1411-93420	NUT	1				0	0
090	R1511-93460	PIPE	1				0	0
100	R1511-93470	PIPE	1				0	0
110	R1411-93490	BOLT	2				0	0
120	R1411-93920	KIT SEAL	1				0	0
130	68881-93350	SEAL DUST	1				0.017	0.0374
140	R1411-93170	O RING	1				0	0
150	68881-93380	GASKET	1				0.005	0.011
160	68881-93190	RETAINER O RING	1				0.001	0.0022
170	68881-93210	O RING	1				0.001	0.0022
180	68881-93430	PISTON RING	1				0.008	0.0176
190	68881-93240	RING	1				0.005	0.011

MidWestTech | Kubota R520S Tractor Parts Manual | Publication R520S Order the manual at mid-west-tech.com >

HOOD LOCK

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	R2401-43310	DAMPER GAS	1				0.474	1.0428
020	05122-51030	PIN JOINT	1				0.02	0.044
030	05525-61000	PIN SNAP	2				0.002	0.0044
040	R1401-43200	ASSY HOOK	1				0.75	1.65
050	R1401-43210	BRACKET	1				0.404	0.8888
060	R1401-43300	ASSY PLATE	1				0.154	0.3388
070	R1401-43222	PLATE	1				0.15	0.33
080	08511-01012	BUSH	2				0.003	0.0066
090	05122-51065	PIN JOINT	1				0.04	0.088
100	04013-60100	WASHER PLAIN	1				0.003	0.0066
110	05511-50318	PIN SPLIT	1				0.001	0.0022
120	87200-22310	SPRING LEVER RETURN	2				0.003	0.0066
130	R1401-43230	LINK	1				0.044	0.0968
140	R1401-43350	ASSY LEVER	1				0.09	0.198
150	08511-01012	BUSH	1				0.003	0.0066
160	04013-60060	WASHER PLAIN	1				0.001	0.0022
170	05511-51612	PIN SPLIT	1				0.001	0.0022
180	01133-61025	BOLT	2				0.02	0.044
190	04015-60100	WASHER PLAIN	2				0.015	0.033
200	09664-80030	TUBE FUEL	1				0	0
210	R1411-43362	STAY	1				0	0
220	04512-60120	WASHER SPRING	1				0.005	0.011

MidWestTech | Kubota R520S Tractor Parts Manual | Publication R520S Order the manual at mid-west-tech.com >