
NEW HOLLAND
AGRICULTURE

OPERATOR'S MANUAL

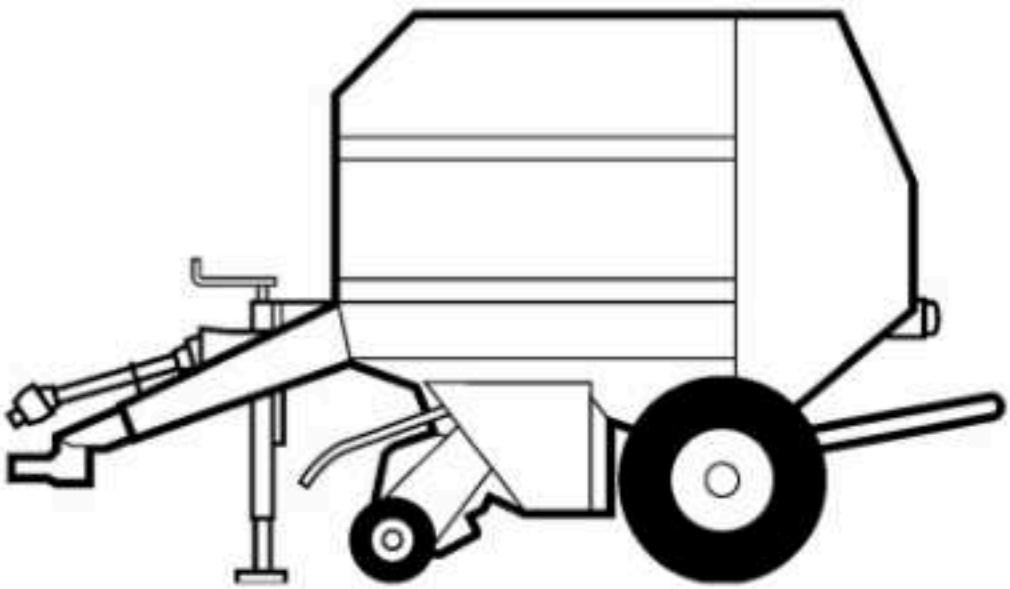

BR6090

Bas - BR6090OM-DRAFT
Issue date June 2011
EN

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Foreword 1-1
Note to the Owner 1-4
Legal obligations 1-6
Baler operation 1-7
Net / Twine Baler Units 1-12
Net Wrapper 1-16
Twine Wrapper 1-18
Twine Wrapper 1-20
Crop cutter 1-26
Tractor Requirements 1-29
Power take off (PTO) 1-30
Jack stand 1-31
Parking Brake 1-32

2 SAFETY INFORMATION

Safety rules 2-1
Safety decals 2-10
Safety Features 2-16
Tailgate 2-18

3 CONTROLS/INSTRUMENTS

Monitor Operation

Baler Operator Controls 3-1

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Machine safety 4-1
Tractor attachment 4-3
Tractor attachment 4-3
Hydraulic connections 4-13
Baler Preparation 4-15
Pick up 4-17
Knife 4-18
Baler blockage 4-19
Feeder Reverser 4-21
Tailgate 4-22
Sensors 4-23
Monitor 4-24
Monitor 4-28
Electrical connections 4-28

STARTING THE UNIT

Machine preparation 4-30

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM Order the manual at mid-west-tech.com >

PARKING THE UNIT

Parking the machine 4-30

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Towing the machine 5-1

PREPARING FOR ROAD TRANSPORT

Transporting the machine 5-3
Lifting the machine 5-5

6 WORKING OPERATIONS

GENERAL INFORMATION

Bale Formation Overview 6-1
Pick up 6-7
Baler Preparation 6-11
Driveline protection 6-12
Crop cutter 6-18
Crop cutter 6-18
Net Wrapper 6-22
Net Installation 6-23
Net Installation 6-26
Net Wrapper 6-26
Twine Wrapper 6-27
Twine Installation 6-28
Bale density 6-30
Bale density 6-31
Tailgate Latch Sensor 6-47
Bale ejection 6-48

7 MAINTENANCE

GENERAL INFORMATION

Lubrication 7-1
Torque charts - Minimum tightening torques for normal assembly 7-3
Power take off (PTO) Cut out clutch 7-7
Drive chains Main drive chain 7-8
Floor Roll Drive Chain 7-8
Pickup Drive Chain 7-8
Drive chains 7-9
Auger 7-9
Drive chains Main and rotor drive chain 7-9
Pickup tines 7-10
Pick up Flotation - wide pickup 7-11

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM
Order the manual at mid-west-tech.com >

Cam adjustment Cam follower bearing replacement 7-12
Knife 7-13
Crop cutter 7-14
Cutter knives 7-16
Net Twine Wrapper Sensors 7-19
Net Wrapper 7-20
Twine Wrapper Twine wrapper (if installed) 7-21
Net wrap adjustment 7-22
Duckbill 7-22
Duckbill 7-23
Conveyor Adjustments 7-23
Conveyor Adjustments 7-24
Conveyor Adjustments 7-25
Bale density 7-27
Bale density 7-28
Bale ejection 7-28
Tailgate Latch adjustments 7-29
Tailgate 7-30
Automatic oiling system Oiler - accessory 7-31
Automatic oiling system 7-34
Hydraulic Hose Replacement Interval 7-35
Wheels and tires 7-36
Wheels and tires 7-37

MAINTENANCE CHART

Maintenance Chart 7-38

10 hours or daily Service

Chain and bar system - Lubricate 7-39
Front hitch 7-39
Tailgate 7-40
Chain Drive 7-40
PTO PTO shaft 7-40
Drive chain lubrication 7-41
Drive chain lubrication 7-41
Chain Drive 7-41
Tailgate 7-42

50 hours Service

Gearbox 7-42
Twine Wrapper 7-43
Tailgate 7-43
Gearbox 7-44
Tailgate 7-44
Pick up 7-44
Feeder 7-45
Feeder 7-45
Bale shape Bale shape indicator 7-45


1200 hours or 12 months Service

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM
Order the manual at mid-west-tech.com >

3 - CONTROLS/INSTRUMENTS

Monitor Operation

Baler Operator Controls [25783688]

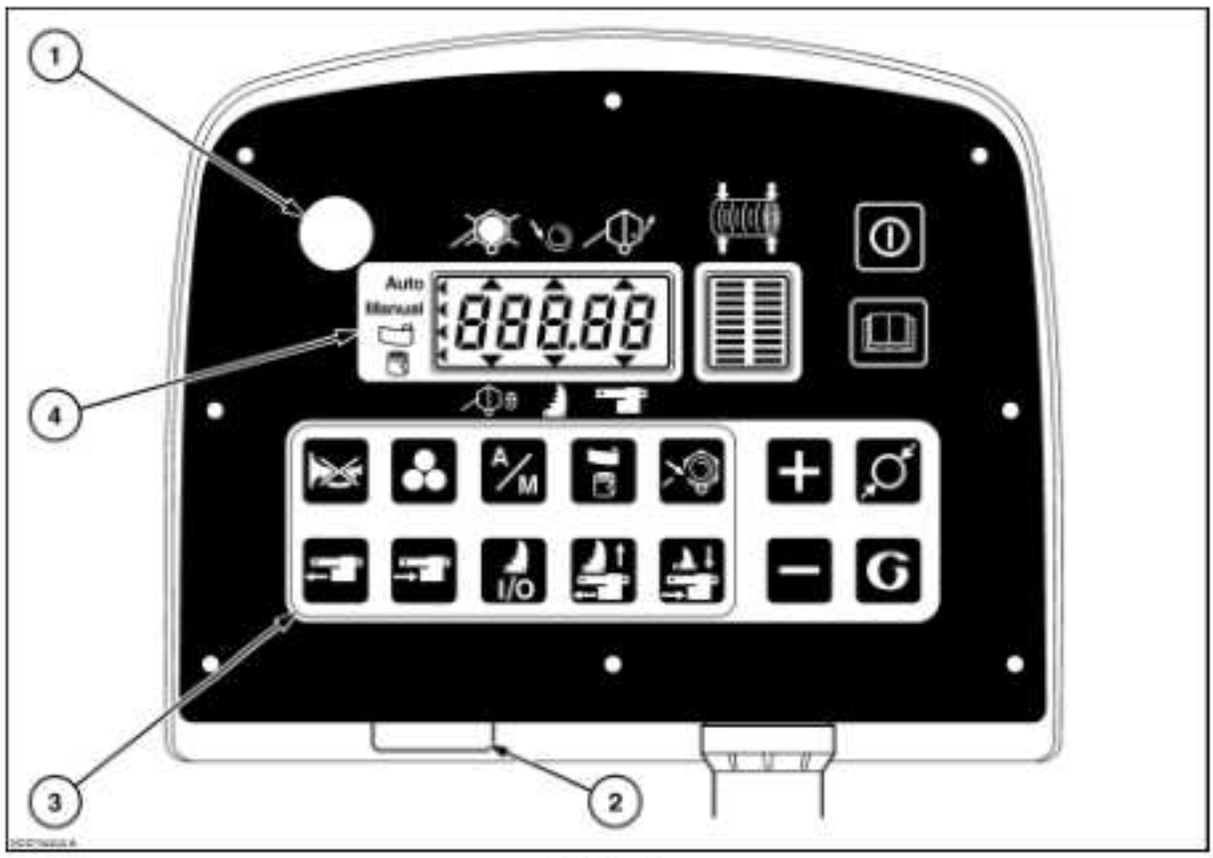

888266A 1

Operator panel description

The Bale Command Plus™ monitor system on this machine operates as standard in the net-plastic wrap mode. Twine wrap is available as an accessory. If twine wrap is being installed, then activate the twine wrap mode as described in the paragraph activating the optional twine wrap function.

General information

Figure 1, shows the front view of the operator panel.
The panel display **(1)** contains various symbols and numbers that appear during operation. When the panel is turned off, the display is blank
Touch-sensitive keys **(3)** are located on the lower and right side of the panel. Each is marked with a symbol indicating its function.
Any time a key is depressed, the audible and visual alarms **(2)** and **(4)** will pulse for 1/20 second to alert the operator that the key depression was recognized by the operator panel.
The system has a permanent memory and retains all programmed wrap patterns and baling parameters, until purposely changed by the operator.
When switched off and back on again, the system will recall exactly the same programmes and parameters, as well as return into the same mode of operation as it was in when last turned off.

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM Order the manual at mid-west-tech.com >


10 hours or daily Service

Chain and bar system - Lubricate [25807955]

Conveyor chain

Oil the conveyor chain through the access hole **(1)** while running the machine idle every 10 hours of use and after storage.
Lubricate the conveyor chain immediately after operation while it is still warm and let the machine run idle for a short period to ensure effective oil penetration resulting in longer life using these guidelines.


- Run the machine at low idle speed for oiling the chain. Ensure there is a second person in the tractor to shut the tractor PTO and engine off in case of emergency. Engage the tractor handbrake. Close and latch all baler guards and the tailgate. Keep at a safe distance from the machine in particular the ground wheels.
- Oil at the end of the workday while the chain is still warm and let the machine run idle for a short period to ensure effective oil penetration, oil both sides equally.

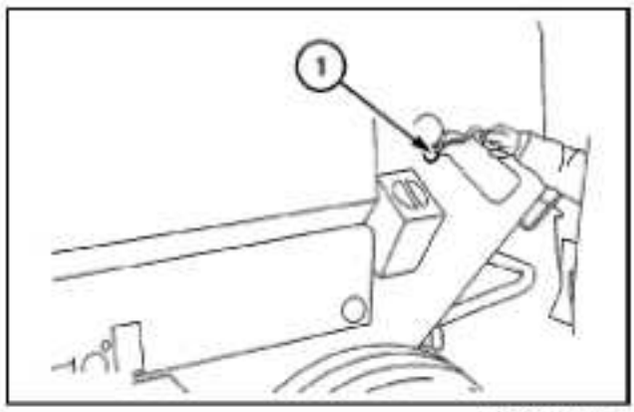

NOTICE: *In abrasive sandy conditions it is better to run the chains dry (not to oil on a daily basis). however oil abundantly before and between seasons, storage periods and prior to starting the new season.*

Front hitch [25808567]

Ball hitch

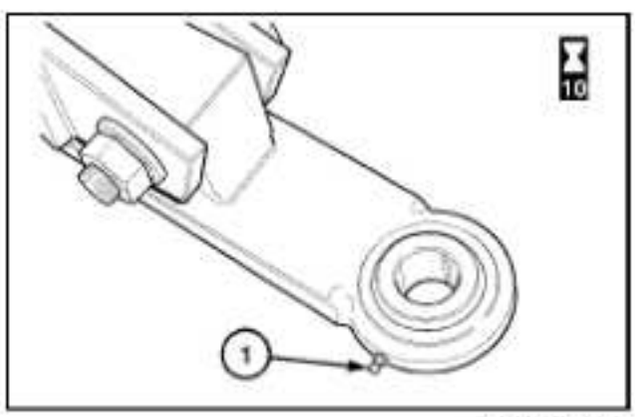

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM Order the manual at mid-west-tech.com >

8 - SPECIFICATIONS

Overall Dimensions [25870660]

The specification figures in this section are provided for your information and guidance. For further information concerning your baler and equipment, consult your New Holland dealer.


Manufacturers New Holland policy is one of continuous improvement and the right to change prices, specification or equipment at any time without notice is reserved.

All data given in this manual is subject to production variation. Dimensions and weights are approximate only.

The illustrations do not necessarily show balers in standard condition or imply that these features are available in all countries. For exact information about any particular baler, please consult your New Holland dealer.

Overall dimensions

	Width		Meters (Feet)
A		Pickup	**2.00 m (6.6 ft)**
B		Ground wheels (Standard machines)	**2.40 m (7.9 ft)**
C		Ground wheels (CropCutter™ cutter machines)	**2.50 m (8.2 ft)**
D		Maximum (Pickup wheels installed)	**2.69 m (8.8 ft)**
	Length	Low hitch	
X		Bale ejector excluded	**3.65 m (12.0 ft)**
F		Bale ejector included	**3.95 m (13.0 ft)**
Z		Maximum (tailgate open)	**4.50 m (14.8 ft)**
		High hitch = low hitch + 0.15	
	Height		
E		Tailgate closed	**2.35 m (7.7 ft)**
Y		Tailgate opened	**2.70 m (8.9 ft)**

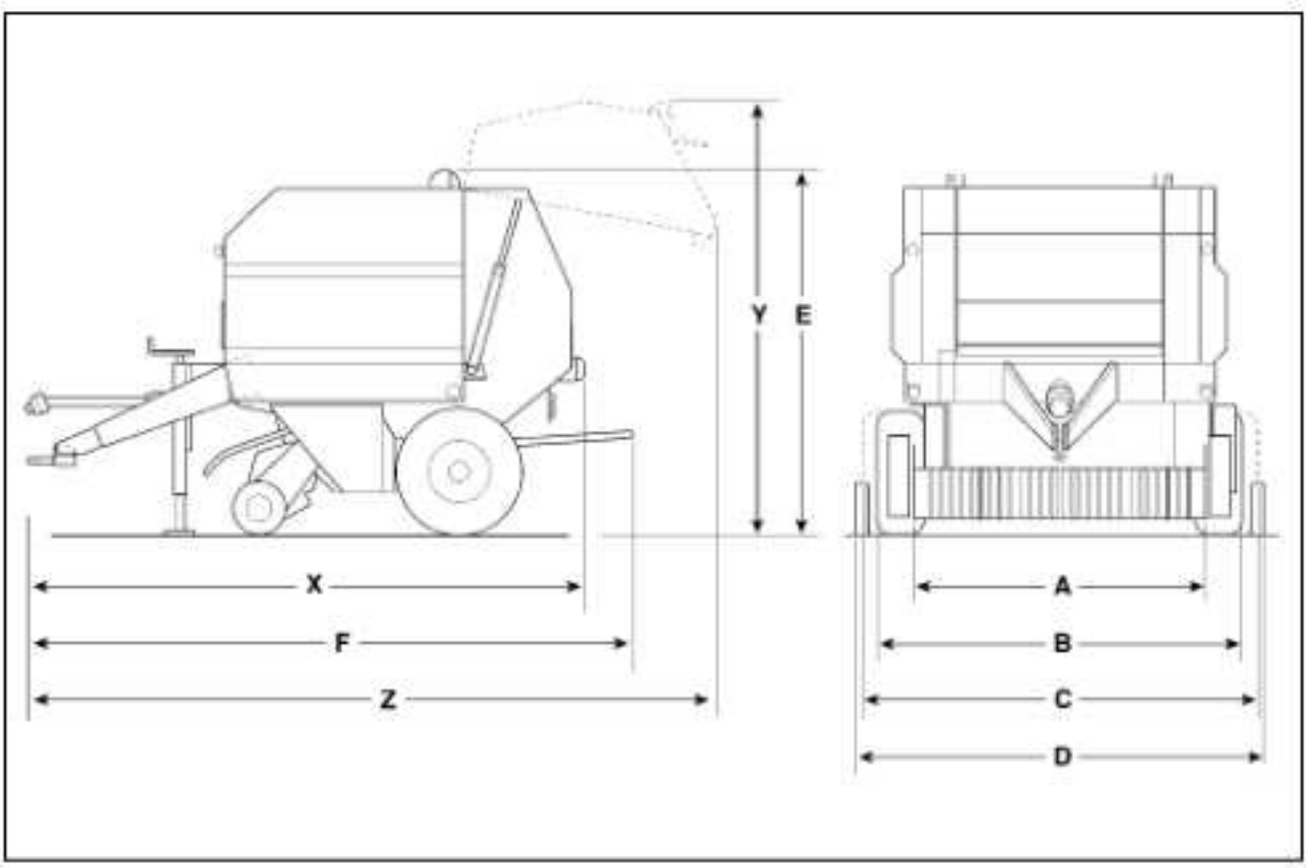

ZBL10FCR6003FAA 1

MidWestTech | New Holland BR6090 Baler Operator's Manual | Publication R6090OM Order the manual at mid-west-tech.com >