CRAWLER EXCAVATOR

SERVICE MANUAL

RD245LR

HYUNDAI

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD245LR

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-21
Group 3 Swing Device 2-54
Group 4 Travel Device 2-63
Group 5 RCV Lever 2-71
Group 6 RCV Pedal 2-78

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-12
Group 5 Combined Operation 3-22

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-23
Group 4 Connectors 4-32

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode Selection System 5-3
Group 3 Automatic Deceleration System 5-5
Group 4 Travel Speed Control System 5-6
Group 5 Automatic Warming Up Function 5-7
Group 6 Engine Overheat Prevention Function 5-8
Group 7 Anti-Restart System 5-9
Group 8 Self-Diagnostic System 5-10

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >

Group 9 Engine Control System 5-13
Group 10 EPPR(Electro Proportional Pressure Reducing) Valve 5-20
Group 11 Monitoring System 5-23

SECTION 6 TROUBLESHOOTING

Group 1 Before trobleshooting 6-1
Group 2 Hydraulic and Mechanical System 6-4
Group 3 Electrical System 6-24
Group 4 Mechatronics System 6-40

SECTION 7 MAINTENANCE STANDARD

Group 1 Operational Performance Test 7-1
Group 2 Major Components 7-21
Group 3 Track and Work Equipment 7-29


SECTION 8 DISASSEMBLY AND ASSEMBLY


Group 1 Precaution 8-1
Group 2 Tightening Torque 8-4
Group 3 Pump Device 8-7
Group 4 Main Control Valve 8-30
Group 5 Swing Device 8-47
Group 6 Travel Device 8-72
Group 7 RCV Lever 8-104
Group 8 Turning Joint 8-119
Group 9 Boom, Arm and Bucket Cylinder 8-124
Group 10 Undercarriage 8-141
Group 11 Work Equipment 8-153

SECTION 9 COMPONENT MOUNTING TORQUE

Group 1 Introduction guide 9-1
Group 2 Engine system 9-2
Group 3 Electric system 9-4
Group 4 Hydraulic system 9-6
Group 5 Undercarriage 9-9
Group 6 Structure 9-10
Group 7 Work equipment 9-14

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >

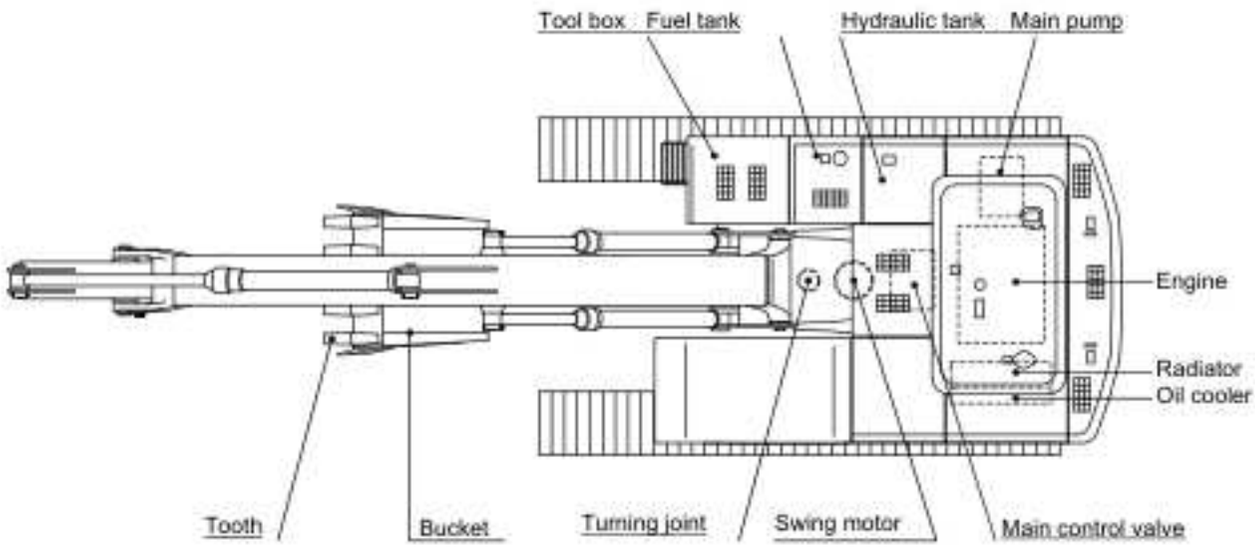

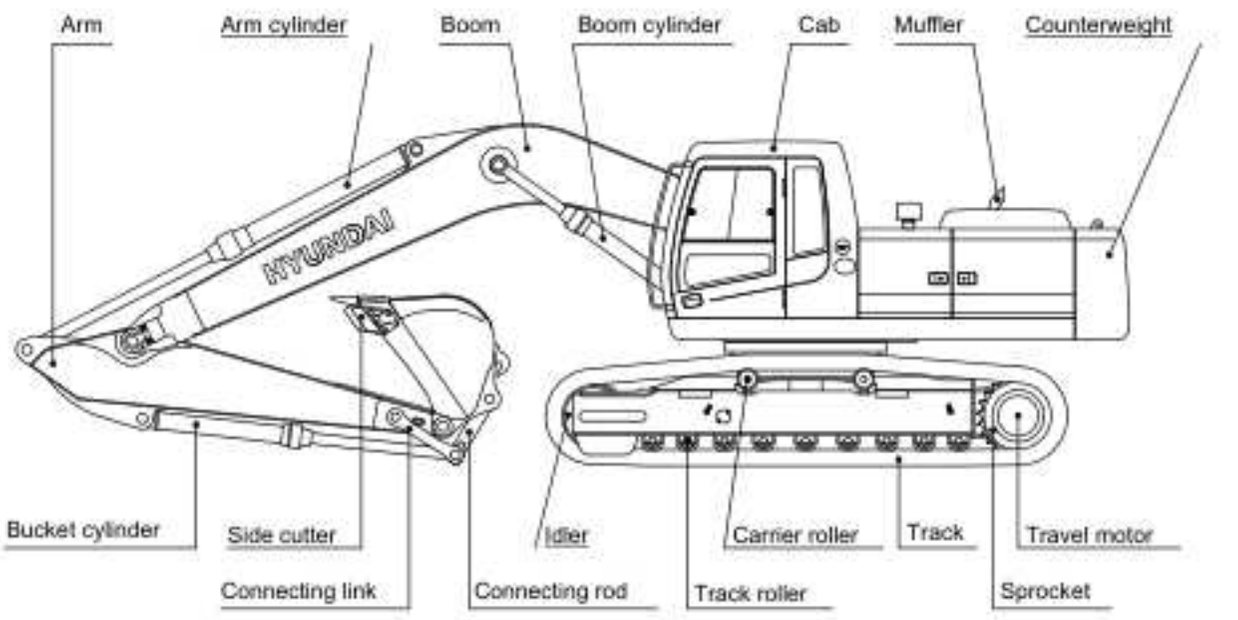


RD210725P01

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >

GROUP 2 MAIN CIRCUIT

The main hydraulic circuit consists of suction circuit, delivery circuit, return circuit and drain circuit.
The hydraulic system consists of one main pump, one control valve, one swing motor, four cylinders and two travel motors.
The swash plate type variable displacement axial piston pump is used as the main pump and is driven by the engine at ratio 1.0 of engine speed.

1. SUCTION AND DELIVERY CIRCUIT

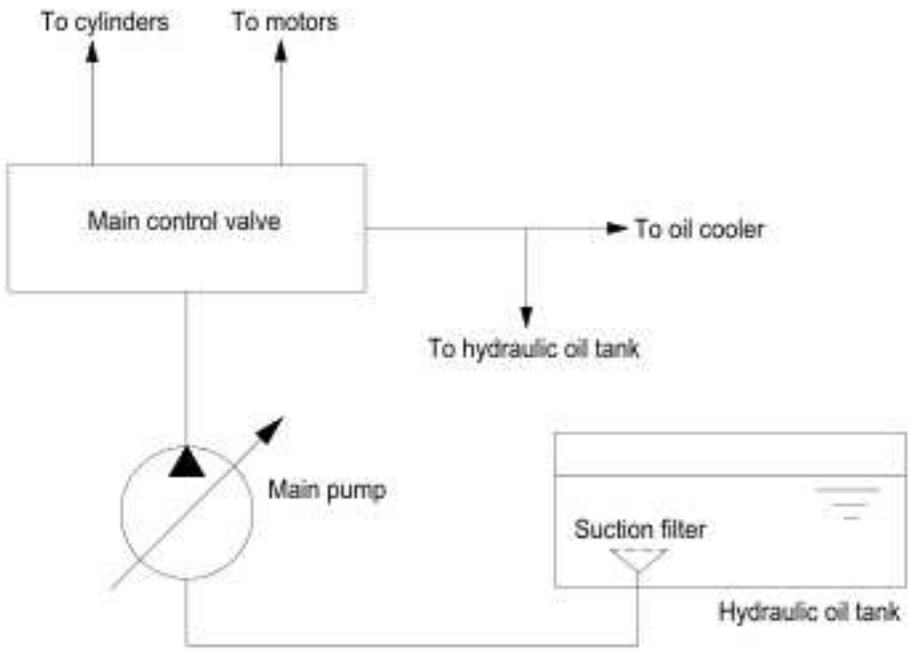


(210-7) 3-03

The pumps receive oil from the hydraulic tank through a suction filter. The discharged oil from the pump flows into the control valve and goes out the tank ports.
The oil discharged from the main pump flows to the actuators through the control valve.
The control valve controls the hydraulic functions.
The return oil from the actuators flows to the hydraulic tank through the control valve and the oil cooler.

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >

4) TRACK

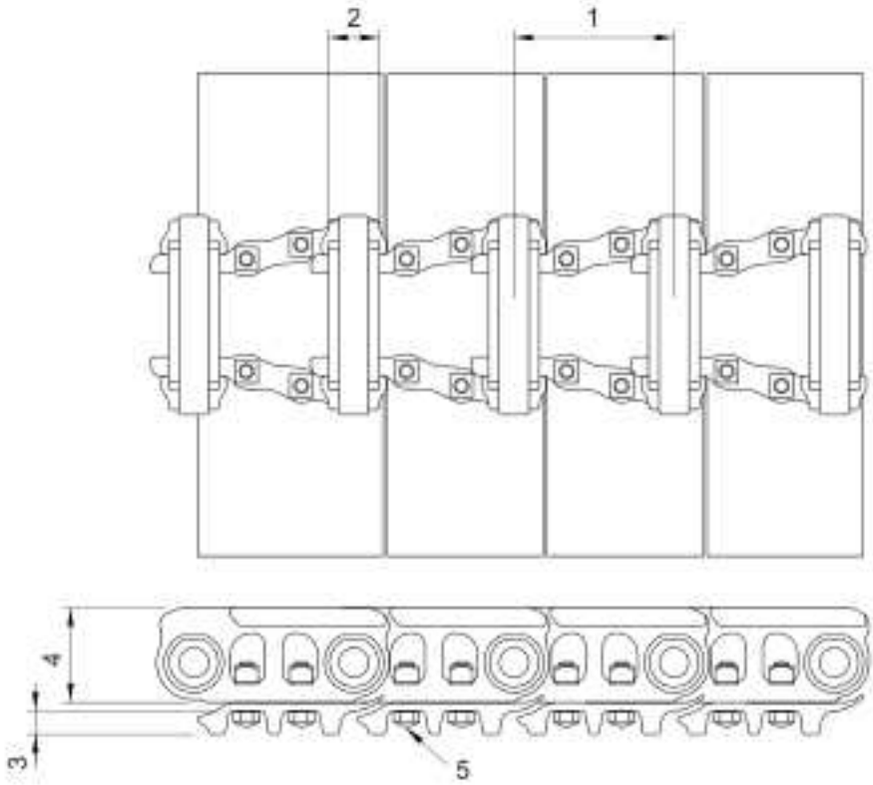

21037M504

Unit : mm

No.	Check item	Criteria		Remedy
1	Link pitch	Standard size	Repair limit	Turn or replace
		190	199	
2	Outside diameter of bushing	ø 59	ø 51	Rebuild or replace
3	Height of grouser	26	16	
4	Height of link	105	97	
5	Tightening torque	Initial tightening torque : 78 ± 8kgf · m		Retighten

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >

■ **Disassemble cylinder sub.**

9) Disassemble cylinder block assembly, piston assembly(9) and seat plate(M).





10) Disassemble ball guide(16), ring and pin(15) from cylinder block, respectively.






MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >

(3) Disassemble rear cover assy sub


① Disassemble pin(8, 23), valve plate(24) from rear cover(21).

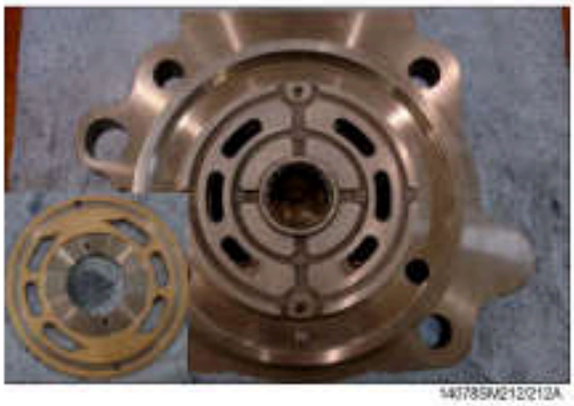


② Using a torque wrench, disassemble relief valve assy(33) 2 set from rear cover(21).



③ After disassembling plug with a L-wrench from rear cover(21), disassemble respectively back up ring, O-ring, O-ring, spring, anti-inversion valve assy(34)

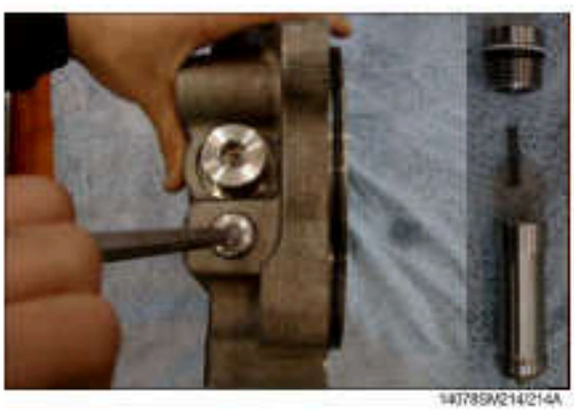


④ Disassemble make up check valve assy with a torque wrench from rear cover(21).

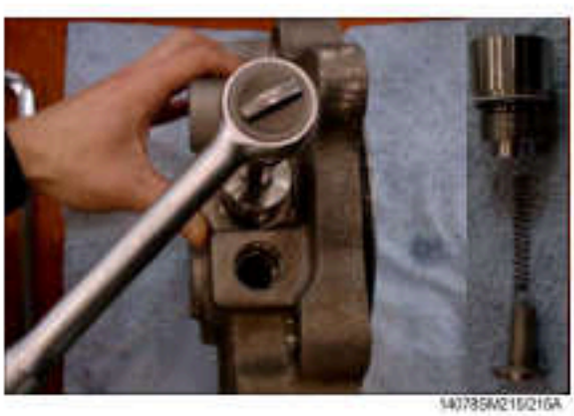



MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD... Order the manual at mid-west-tech.com >


1. STRUCTURE

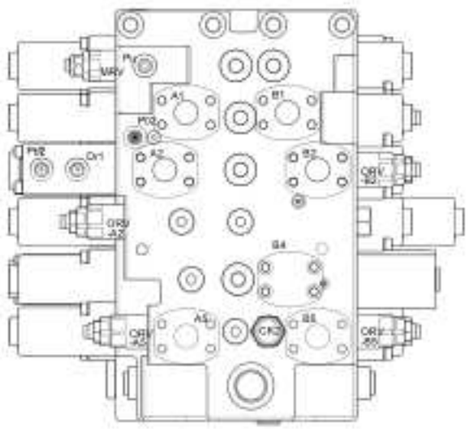



VIEW A

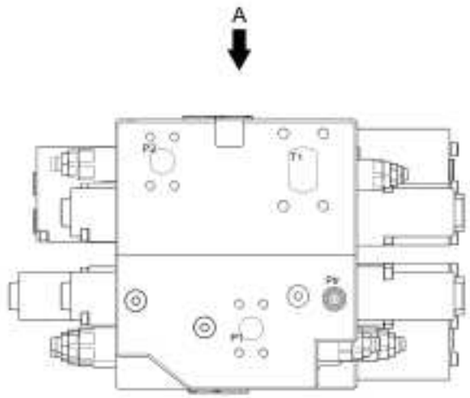

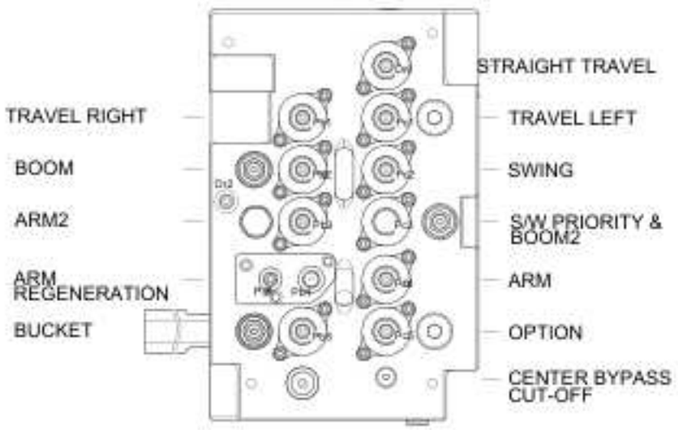

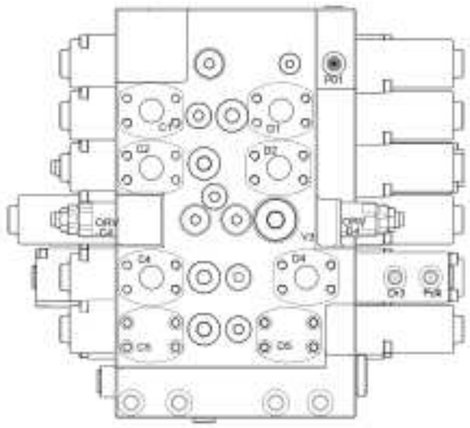

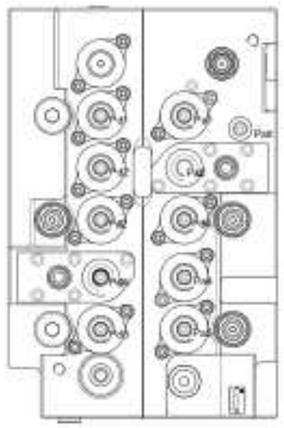

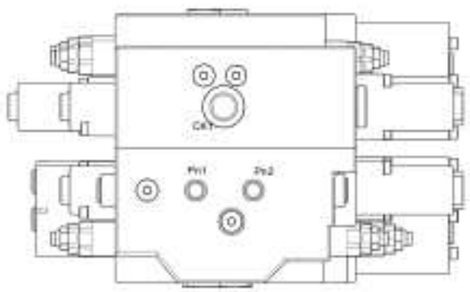

D21072MO01

Mark	Port name	Port size	Tightening torque
Rs	Make up for swing motor	G1	20~25 kgf · m (145~180 lbf · ft)
Patt Pb21 Pcb P01 P02 Pc41 Pc42 Ptr Pu Dr1 Dr2	Auto idle signal-attachment Lock valve pilot port (boom) Bucket in confluence pilot port Pilot signal port Pilot signal port Unlock signal Arm in regen-cut signal selector port Auto idle signal-travel Power boost Drain port Drain port	G1/4	3.5~3.9 kgf · m (25.3~28.2 lbf · ft)
Ck1 Ck2	Bucket confluence Bucket confluence	G3/4	17~19 kgf · m (123~137.4 lbf · ft)
Pa1 Pb1 Pc1 Pd1 Pa20 Pa21 Pb20 Pc2 Pd2 Pb3 Pc3 Pa4 Pb4 Pc40 Pd40 Pd41 Pa5 Pb5 Pc5 Pd5 Dr0 Pn1 Pn2	Travel pilot port-RH (FW) Travel pilot port-RH (BW) Travel pilot port-LH (BW) Travel pilot port-LH (FW) Boom up pilot port Boom up confluence pilot port Boom down pilot port Swing pilot port (LH) Swing pilot port (RH) Arm in confluence pilot port Swing priority pilot port Option A pilot port (breaker) Arm in regeneration cut port Arm in pilot port Arm out pilot port Arm out confluence pilot port Bucket in pilot port Bucket out pilot port Option B pilot port Option B pilot port Drain port Negative control signal port (A2 port side) Negative control signal port (A1 port side)	G3/8	7~8 kgf · m (50.6~57.8 lbf · ft)
A1 B1 C1 D1 A2 B2 C2 D2 B4 C4 D4 A5 B5 C5 D5 P1 P2	Travel motor port-LH (FW) Travel motor port-LH (BW) Travel motor port-RH (BW) Travel motor port-RH (FW) Boom up port Boom down port Swing motor port (LH) Swing motor port (RH) Option A port (breaker) Arm in port Arm out port Bucket in port Bucket out port Option B port Option B port Pump port (A2 side) Pump port (A1 side)	SAE 5000 psi 1"	7.5~9.2 kgf · m (54.2~66.5 lbf · ft)
Dr5	Drain port	G1/8	1.5~1.9 kgf · m (10.8~13.7 lbf · ft)
T1	Return port	SAE 3000 psi 2" (M12)	6.4~8.6 kgf · m (46.2~62.2 lbf · ft)

MidWestTech | Hyundai RD245LR Crawler Excavator Service Manual | Publication RD245LR
Order the manual at mid-west-tech.com >