
OPERATOR'S MANUAL

E135BSR Tier 3

Crawler Excavator

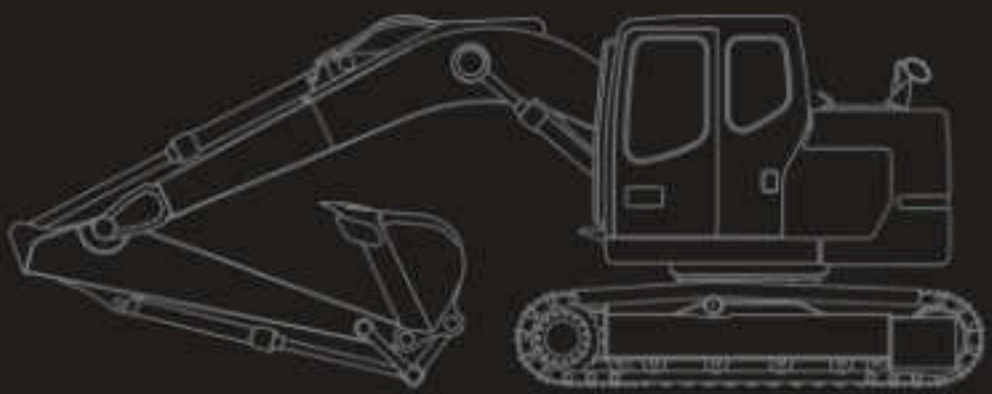

Print No. S2YH00003ZE04
English 11/09
From serial no. YH05-07701

NEW HOLLAND CONSTRUCTION

MidWestTech | New Holland E135BSR Tier 3 Crawler Excavator Operator's Manual | Publi...

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
- To the Owner 1-1
- Right, Left, Front, and Rear of the Machine 1-2
- Machine Components 1-3
- Identification Numbers 1-4

CHAPTER 2
SAFETY, DECALS, AND HAND SIGNALS
- Table of Contents 2-1
- Safety Rules 2-3
- Operator Precautions 2-5
- Decals 2-10
- Hand Signals 2-26

CHAPTER 3
INSTRUMENTS AND CONTROLS
- Table of Contents 3-1
- Operator Cab and Operator Seat 3-3
- Machine Access Compartments and Doors 3-8
- Operator's Compartment Controls and Accessories 3-9
- Operating Levers and Controls 3-39

CHAPTER 4
OPERATING INSTRUCTIONS
- Table of Contents 4-1
- Before Operating the Machine 4-3
- Operating the Machine 4-3
- Starting and Stopping Machine Engine with Temperature above 0°C (32°F) 4-5
- Starting and Stopping Machine Engine with Temperature below 0°C (32°F) 4-6
- Machine Warm Up 4-7
- Control Decal 4-9
- Basic Operation of Hydraulic Controls 4-11
- Practices to Improve Efficiency 4-19
- Machine Operation in Adverse Weather Conditions 4-21
- Bucket Selection Guide 4-22
- Use of Optional Attachment 4-23
- Transportation 4-38
- Machine Storage 4-42

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
- Table of Contents 5-1
- Fluids and Filters 5-3
- Lubricant Specifications 5-5

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
- Table of Contents 6-1
- General Information 6-3
- General Safety 6-4
- Lubrication and Maintenance Quick Reference Chart 6-10
- Daily Inspection and Maintenance 6-12

MidWestTech | New Holland E135BSR Tier 3 Crawler Excavator Operator's Manual | Publi... Order the manual at mid-west-tech.com >

50 hour Maintenance: 6-18
100 hOUR mAINTENANCE 6-23
120 Hour Maintenance 6-24
250 Hour Maintenance 6-25
500 Hour Maintenance 6-33
1000 Hour Maintenance 6-41
2000 Hour Maintenance 6-45
5000 Hour Maintenance 6-52
Special Procedures 6-54
Maintenance for Nibbler/Breaker 6-65
Disabled Machine 6-67

CHAPTER 7
ELECTRICAL
Table of Contents 7-1
Electrical Components 7-3
Starting Machine Engine with Booster Cable 7-8

CHAPTER 8
SPECIFICATIONS
Table of Contents 8-1
General Specifications 8-3
Performance Specifications 8-7
Lifting Capacities 8-9
Torque Specifications 8-12

CHAPTER 9
INDEX

MidWestTech | New Holland E135BSR Tier 3 Crawler Excavator Operator's Manual | Publi... Order the manual at mid-west-tech.com >