KOBELCO

PARTS CATALOG

HYDRAULIC EXCAVATOR

LK550 II

Applicable:LK550 II RM02201~

S3RM1012-01 05/92

MidWestTech | Kobelco LK550 II Wheel Loader Parts Catalog | Publication S3RM1012

Order the manual at mid-west-tech.com >


MidWestTech | Kobelco LK550 II Wheel Loader Parts Catalog | Publication S3RM1012

DESIGNATION OF SERIAL NUMBER

• Chassis Number as stamped on rear chassis and Manufacturing Serial Number as stamped at a Serial Number Plate are described in this parts catalog as follows.

Serial Number Listed in this parts catalog	Manufacturing Serial Number	Chassis Number
2201	RM02201	LK500-2201
2999	RM02999	LK500-2999

• Location of Manufacturing Serial No. and Chassis No.

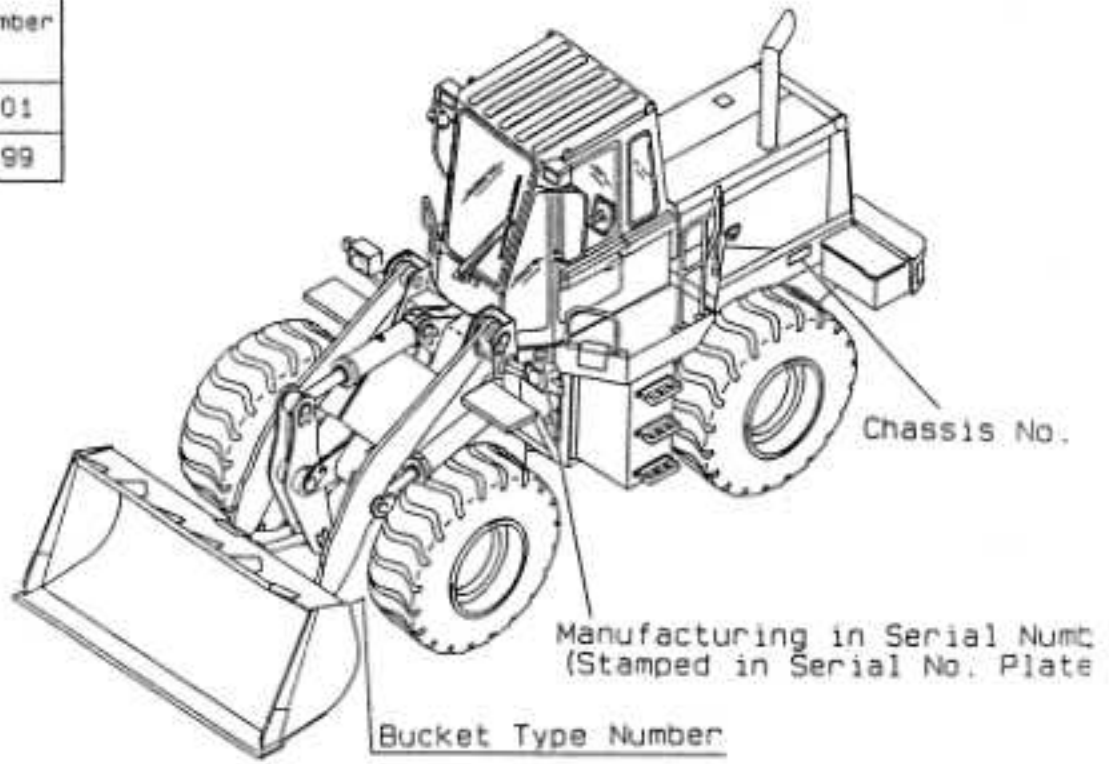

Order the manual at mid-west-tech.com >

MidWestTech | Kobelco LK550 II Wheel Loader Parts Catalog | Publication S3RM1012


NOTICE

1 PREFACE

When ordering parts, be sure to state "Model", "Serial No.", "Section No.", "Parts No.", "Parts Name" and "Quantity".
When ordering parts of the bucket, be sure to state "Bucket type number" marked on the bucket body also.

2 HOW TO USE THE LIST

The following example shows how to use the list.

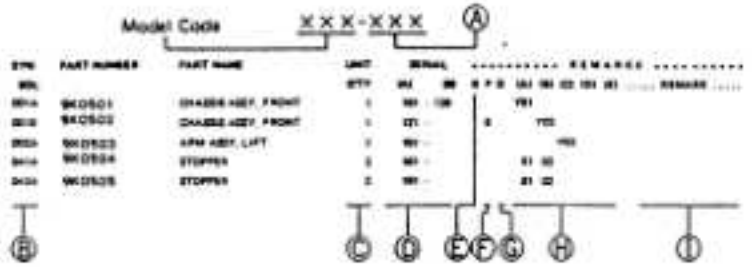

Ⓐ (Section No.) It is a title number for each explosion-figure page.

Ⓑ (Symbol) It is a key for finding out parts No. from illustration. The symbol to which three zeros are prefixed, e.g., 000A, 000B, etc. tells that the unit is an assembly.
The individual parts not numbered in illustration will not be sold separately.

Ⓒ (Unit Q'ty)

❶ It indicates number of piece(s) for a set where as in case three zeros are prefixed it indicates that for one unit.

❷ In case indicated as 1M, 2M ... the part will be as pieces 1 meter, 2 meter ... long where as actual length values are indicated in the REMARK.
(Example 1)
In case of the indication "Q'ty 2M REMARK L=1700" the part will be sold as a piece 2 meter long where as actually a Piece of 1700 mm length is required.
(Example 2)
In case of the indication "Q'ty 2M REMARK L=1400 × Q'ty 2" the part will be sold as a piece 3 meter long where as actually 2 pieces of 1400 mm length are required.

❸ The abbreviation "A/R", means that necessary quantity as well as size vary with repairing purposes as the case may be.

Ⓓ (SERIAL (A) (B)) It represents an applicable range of Manufacturing Serial Number.
(A) ..... First applicable Serial No.
(B) ..... Last applicable Serial No.

Ⓔ (N) ..... "N" in the column represents "Not available for Sale".

Ⓕ (P) ..... The following symbols come in this column:
Meaning of each symbol is as follows:

A ..... New and old parts interchangeable — New ○—○ Old

B ..... New and old parts not interchangeable — New ×—× Old

C ..... New parts unilaterally interchangeable with old parts — New ○—× Old

Order the manual at mid-west-tech.com >

MidWestTech | Kobelco LK550 II Wheel Loader Parts Catalog | Publication S3RM1012

Order the manual at mid-west-tech.com >

⑥ (D)..... The following symbols come in this column:
Meaning of each symbol is as follows:

D..... Not used in the current design.

H ..... These parts are not available due to suspension of manufacture and supply. Alternative parts are indicated below.

⑧ (REMARKS (A), (B), (C), (D), (E))

The following symbols come in this column:
Meaning of each symbol is as follows:

01, 02 ~ 99	Represents composing parts of ASSY of Y01, Y02 ~ Y99.
Y01, Y02 ~ Y99	Represents ASSY composing parts of 01, 02 ~ 99.
(Example)	Refer to the list example mentioned before. SYMBOL 001A 9K0501 FRONT CHASSIS ASSY is quoted together with Y01. This is ASSY composed of SYMBOL 041A, 042A, accompanied by 01. by 01.
K1, K2 ~ K9	Represents composing parts of kit parts of QK1, QK2 ~ QK9.
QK1, QK2 ~ QK9	Represents kit parts composing parts of K1, K2 ~ K9.
A1, A2 ~ A9	Represents composing parts of replaceable set parts of WA1, WA2 ~ WA9.
WA1, WA2 ~ WA9	Represents interchangeability by the total group of composing parts of A1, A2 ~ A9 in one set. However, as parts expressed with WA1, WA2 ~ WA9 do not stand for set parts, place an order for all parts of A1, A2 ~ A9 at a time.


Example:

SYMBOL	P/No.	P NAME	UNIT Q'TY	SERIAL	** REMARKS ** N	P	D	(A)	(B)	(C)
001A	9K0501			101 ~120						
001B	9K0502			121 ~			B		WA1	
041A	9K0504		5						A1	
042A	9K0505		2						A1	

Represents interchangeability of 001B 9K0502 (assembled parts including 041A, 042A) in replacing 001A 9K0501.

⑦ (REMARK) Example;

① REF 618 ..... Refer to section 618
② FR (LH) ..... For Left Hand
FR (RH) ..... For Right Hand
(View from operater's seat)
③ D80 x 185L .... Size ϕ80 mm 185 mm Length
④ Old Parts No. or Ref. Parts No.
⑤ (01), (02) ~ .... Those parts compose the kit parts, Y01, Y02 ~ of section 395.
⑥ (K1), (K2) ~ .... Those parts compose the kit parts QK1, QK2 ~ of section 395.
⑦ (K) ..... Composing parts of section 395.
⑧ The type of bucket is shown by the following code.

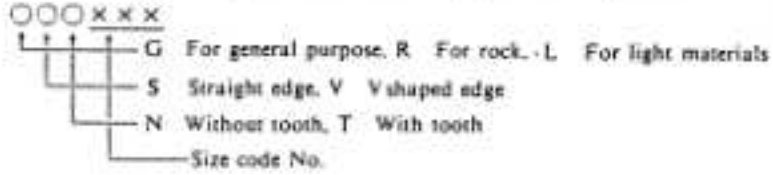

(Note) The parts not numbered individually in the illustration will not be sold separately.
The parts which parts number is not listed individually will not be sold separately.