KOBELCO

PARTS CATALOG

HYDRAULIC EXCAVATOR

SK235SR-1E
SK235SRLC-1E
SK235SRNLC-1E

S3YF00003ZE-07 NA

Issued 04-2005

SK235SR-1E . . . . . YF02-01201~01299
SK235SRLC-1E . . . . YU02-00501~00647
SK235SRNLC-1E. . . YU02-00501~00647
SK235SR-1E . . . . . YF03-01300~01421
SK235SRLC-1E . . . . YU03-00648~00770
SK235SRNLC-1E. . . YU03-00648~00770

MidWestTech | Kobelco SK235SR-1E, SK235SRLC-1E, SK235SRNLC-1E Hydraulic Excavator Parts Catalog | Publication S3YF00003ZE-07

Order the manual at mid-west-tech.com >

Preface

- This parts catalog contains parts used for all the machines having machine numbers following the numbers mentioned on the face.

- Prior to placing orders, verify that part numbers used correspond with those on the specification for the actual machine, because this catalog also contains the part list corresponding to the specifications for machines other than those delivered.

- For engine parts, refer to the Chapter "ENGINE".

- Since products are continually improved, changes could not be described on the part catalog. The revised revision describing those changes will be issued, as required.
  For farther information, please contact our nearby branch, or representative.

- For the machine, the boom side is called the Front, Counterweight side is "Rear", and the opposite side is "Right", and for the track part the travel motor side is called the "Rear".

1. Placing order

Part order should be placed to dealers after completing the following items.

(1) Machine type	[Example]	PM05-05001~
(2) Machine No. or E/G No.		219230
(3) Part No.		YR20M01020P1
(4) Part Name		CONNECTOR
(5) Quantity required		2
(6) Address, Name and how to forward		

2. How to read catalog


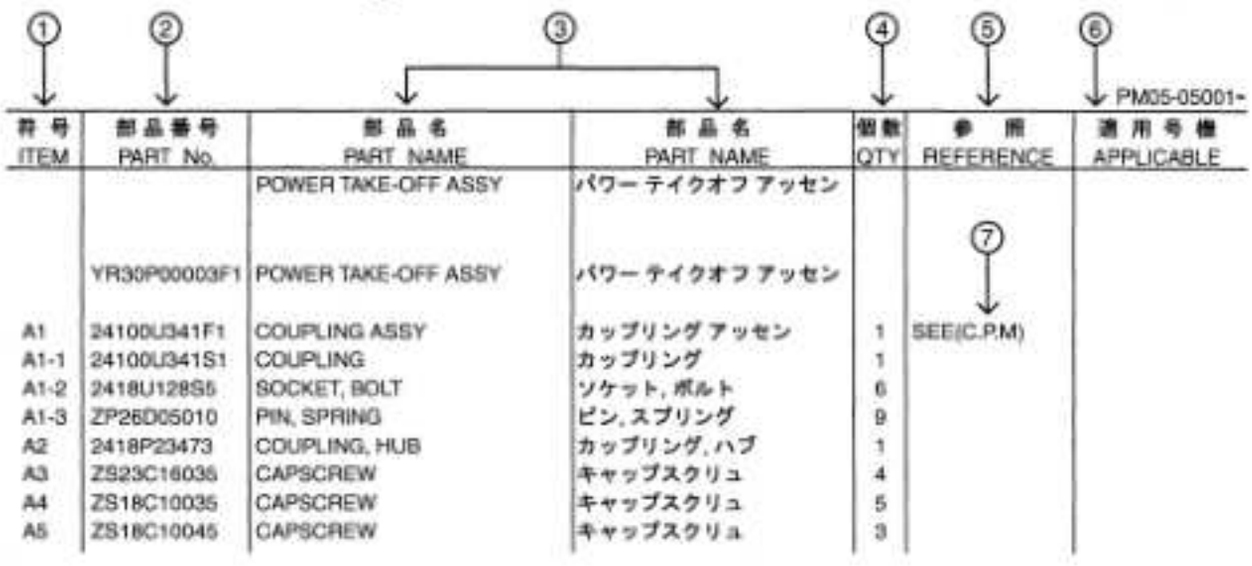


FIG 001-50-2

MidWestTech | Kobelco SK235SR-1E, SK235SRLC-1E, SK235SRNLC-1E Hydraulic Excava... Order the manual at mid-west-tech.com >

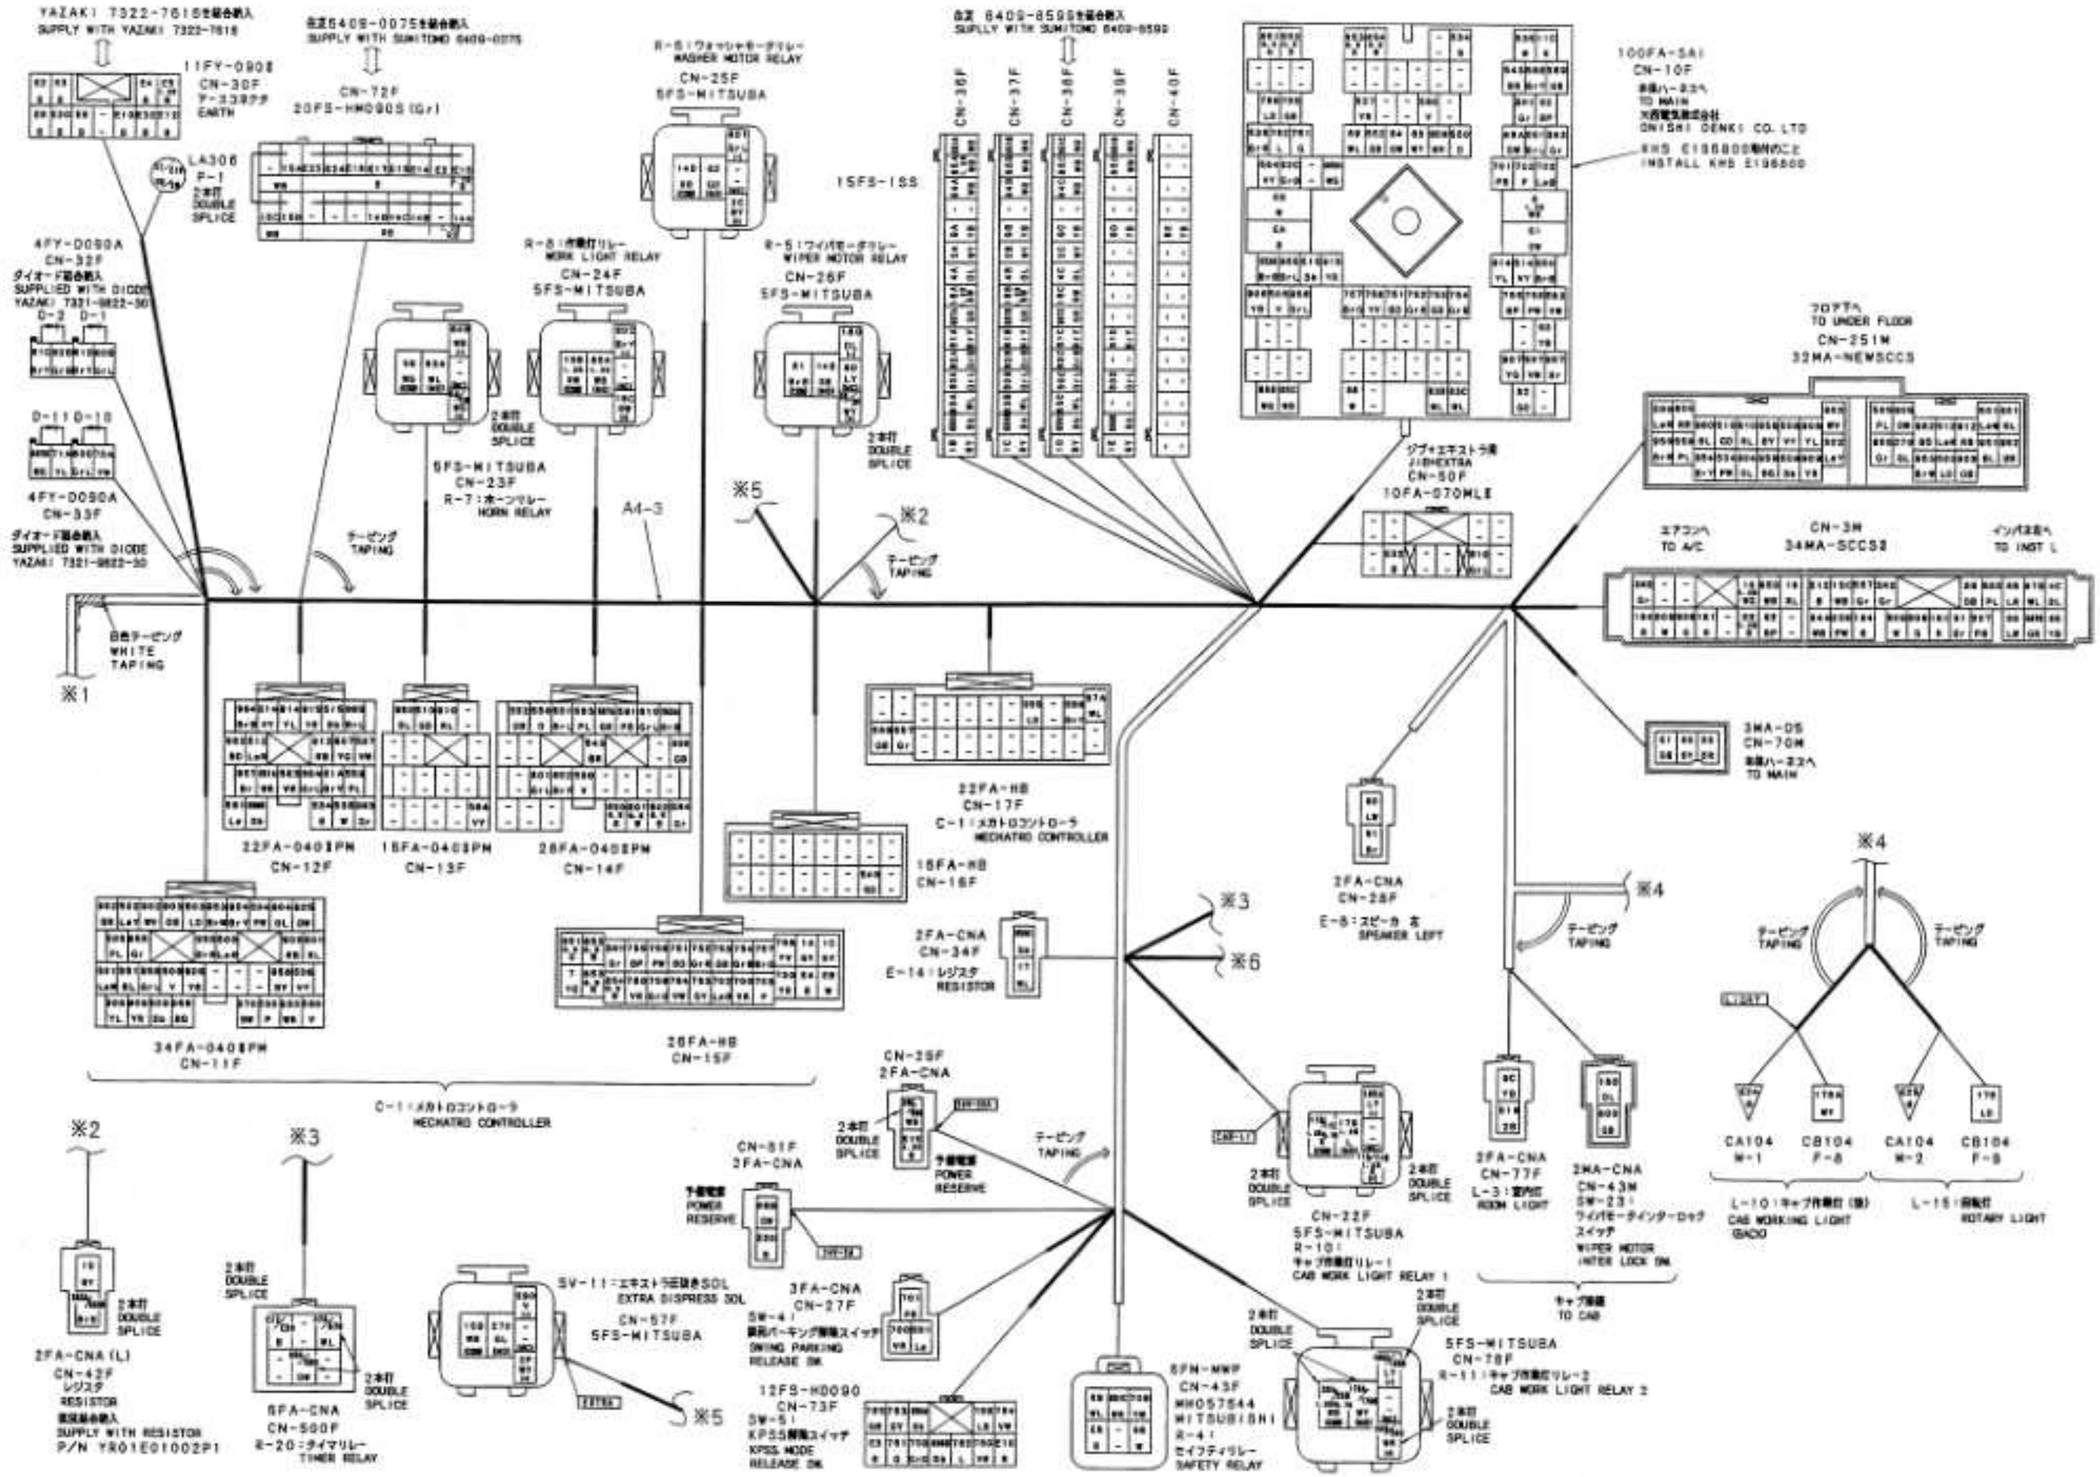

01
01

FIG 270-50A-3 ①

Order the manual at mid-west-tech.com >